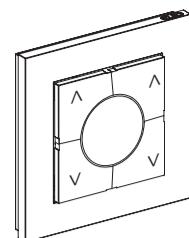









no sv


[Download on the App Store](#)
[GET IT ON Google Play](#)


EKO07115, EKO07116, EKO07117

ELKO Smart

ELKO

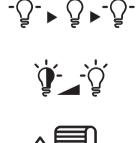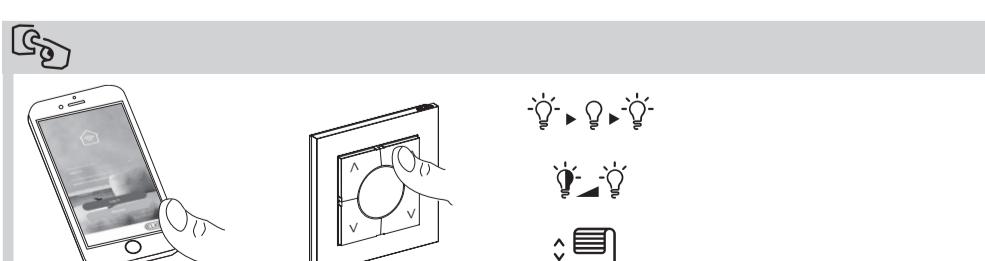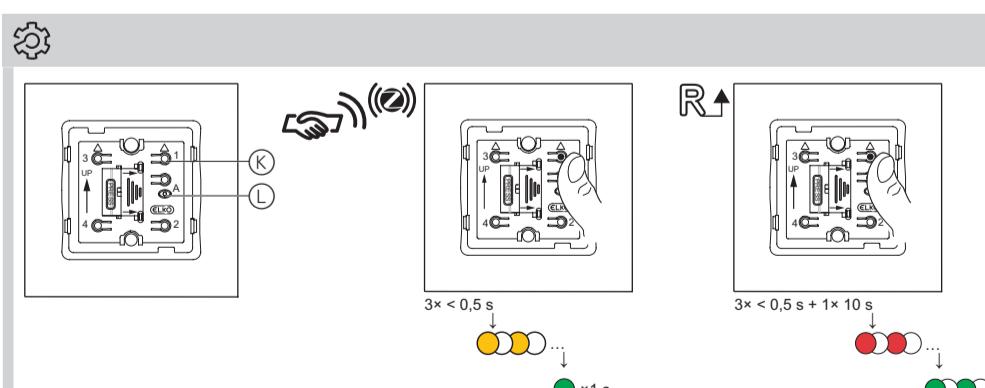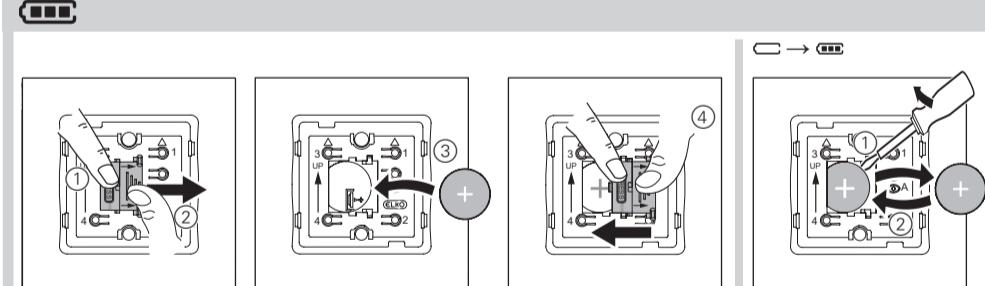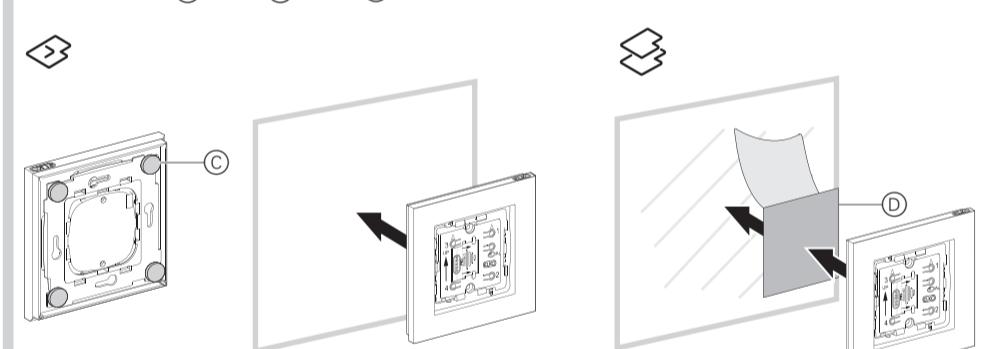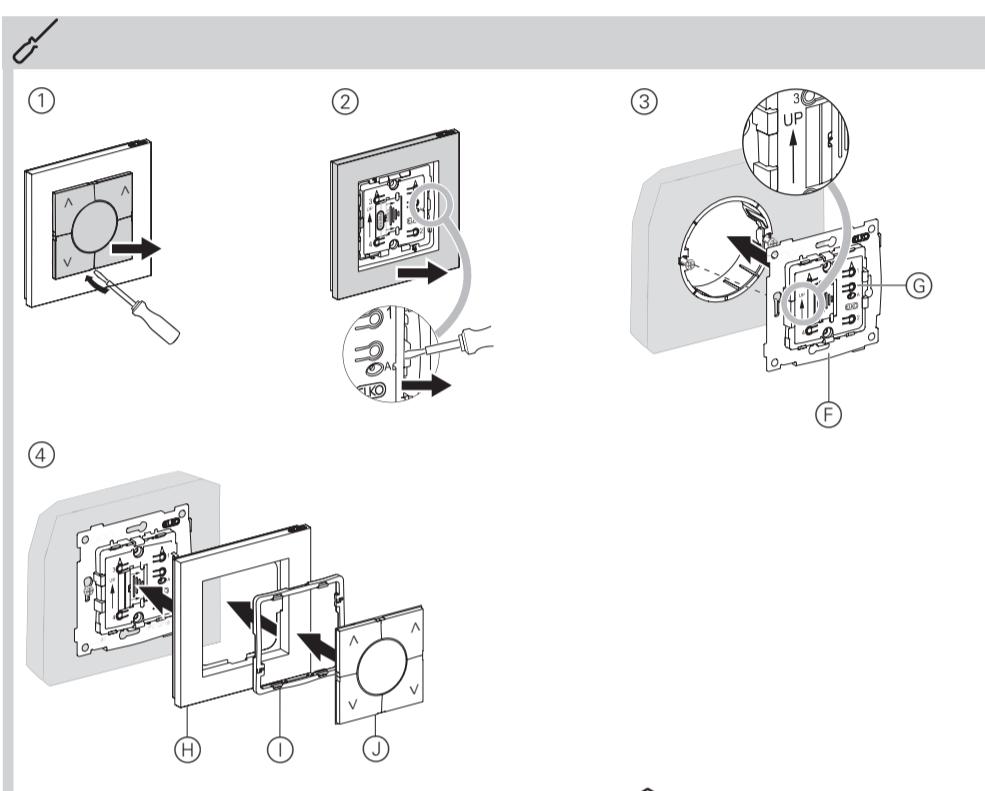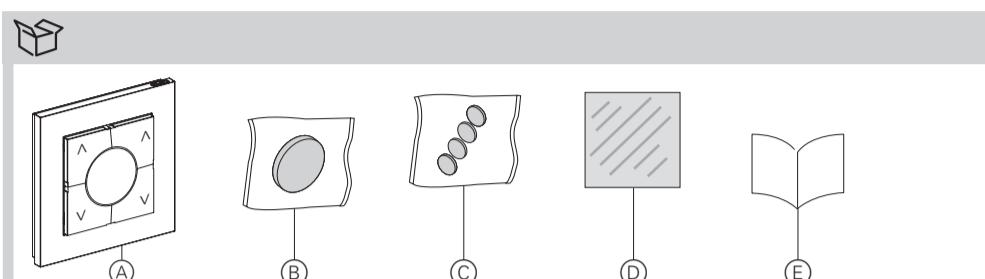**SmartBryter trådløs****Forutsetninger**

Last ned **ELKO Smart-appen** til smarttelefonen/nettbrettet, og installer **ELKO SmartHUB** for å konfigurere og styre ELKO Smart-enheter.

Tilleggsinformasjon om systemet

Detaljert produktinformasjon er tilgjengelig online i **systemets brukerveiledning**. Skann QR-koden eller følg koblingen.



http://proff.elko.no/elko-smart

For din sikkerhet**FARE****FARE FOR ELEKTRISK STØT, EKSPLOSION ELLER LYSBUE**

Sikker elektrisk installasjon må kun utføres av faglærte. Faglærte må bevise at de har grundig kunnskap på følgende områder:

- Koble til installasjonsnettverk
- Koble til flere elektriske enheter
- Legging av elektriske kabler
- Sikkerhetsstandarder, lokale kablingsregler og forskrifter

Hvis du ikke følger disse instruksjonene, vil det føre til død eller alvorlig skade.

i Det er nødvendig å utføre arbeid på strømforsyningen hvis du monterer enheten på en veggaks med 230 V strøm ledninger eller en eksisterende bryter/strømmut-tak-kombinasjon.

Bli kjent med produktet

SmartBryter trådløs (heretter kalt **enhet**) brukes til å styre en gruppe Zigbee-enheter i samme Zigbee-nettverk.

Enheten kan konfigureres via ELKO Smart-appen eller kobles sammen med andre ELKO Smart-enheter.

Pakkens innhold

- (A) SmartBryter trådløs
- (B) Batteri
- (C) Selvklebende puter
- (D) Selvklebende sølvfolie
- (E) Installasjonsveileitung

i Veggaksen, plugger og skruer er ikke inkludert i pakken. De må anskaffes av brukeren.

Monteringselementer

- (F) Festeramme
- (G) Modul
- (H) Frontdeksel
- (I) Låsering
- (J) Vippebryter

Montere enheten

- i**
- Veggaks, tre eller vegg: Bruk monteringskruer.
 - Bruk klebende puter for jevne overflater.
 - Overflater av glass: Bruk selvklebende puter og selvklebende sølvfolie.
 - Under montering av enheten må pilen til modulen peke oppover

Merk: Ikke installer enheten på overflater av metall, da det kan påvirke enhetens trådløse kommunikasjon og ytelse.

Montere med skruer

- ① Fjern vippebryteren.
- ② Fjern låseringen og frontdekslet.
- ③ Skru fast festerammen på overflaten med skruer.
- ④ Trykk på plass låseringen, frontdekslet og deretter vippebryteren på festerammen.

Montere med selvklebende puter

- Fest de selvklebende putene (C) i hvert av de fire hjørnene på baksiden av festerammen.
- Kleb enheten til overflaten.

Montere med selvklebende sølvfolie

- i** De selvklebende putene (C) må festes på festerammen.
- Fest sølvfilmen (D) på glasset for å skjule baksiden av bryteren. Unngå bobler og bretting av folien ved festning.
 - Kleb enheten til den selvklebende sølvfolien.

Sette inn batteriet**ADVARSEL****FARE FOR KJEMISK FORBRENNING**

Oppbevar batteriene utilgjengelig for barn. Oppsøk lege umiddelbart hvis batteriene svelges.

Hvis du ikke følger disse instruksjonene, kan det føre til alvorlig personskade eller død.


① Press ned batteridekslet.

② Skyv det mot høyre for å fjerne det.

③ Sett inn batteriet med plussstegnet (+) vendt utover.

④ Press ned batteridekslet og skyv det mot venstre for å sette det på plass igjen.

i Batteridekslet er utformet med barnesikringsbeskyttelse.

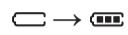Bytte ut batteriet

i Kast brukte batterier i henhold til lovpålagte forskrifter.

Betjeningselementer

i Trykknappen (Oppsett/tilbakestillings)

i Statuslampe

Stille inn enheten


Fjern vippebryteren fra enheten for å se statuslampen.

Koble til ELKO SmartHUB

Trykk kort (< 0,5 sek.) på trykknappen 3 ganger for å koble til et tilgjengelig Zigbee-nettverk. Statuslampen blinker oransje, og lyser grønt når tilkoblingen til Zigbee-nettverket er fullført.

Koble til andre ELKO Smart-enheter

Hvis du vil styre produkter i romkontrollmodus, kan de kobles sammen med andre ELKO Smart-enheter i samme Zigbee-nettverk. Du finner mer informasjon i systemetsbrukerveiledning.

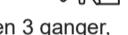**Tilbakestilling av enheten**

Trykk kort (< 0,5 sek.) på trykknappen 3 ganger, og trykk deretter og hold inne trykknappen (> 10 s), så blinker statuslampen rødt. Slipp deretter opp trykknappen, så slutter statuslampen å blinke når enheten tilbakestilles riktig.

Enheten starter på nytt og blinker grønt i noen sekunder. Etter tilbakestilling slås LED av for å spare batteriet.

i Når enheten tilbakestilles, slettes programmeringen og nettverksdataene.

Feilsøking

Se i systemets brukerveiledning.

Tekniske data

Batteri	CR2032
Batterilevetid	Opp til 5 år (avhengig av bruksfrekvens og batterikvalitet)
IP-rangering	IP20
Driftsfrekvens:	2405 - 2480 MHz
Maks. radiofrekvensstrøm overført	≤10 mW
Rekkevidde	100 m åpent område
Driftstemperatur	Fra -5 °C til 45 °C
Relativ fuktighet	Fra 10 % til 95 %
Sertifisering	Zigbee 3.0

Ikke kast apparatet i det vanlige husholdningsavfallet, men lever det på et offentlig innsamlingssted. Profesjonell gjenvinning beskytter mennesker og miljø mot mulige negative effekter.

Varemerker

- Zigbee® er et registrert varemerke for Zigbee Alliance.
- Apple® og App Store® er merkevarenavn eller registrerte varemerker for Apple Inc.
- Google Play™ Store og Android™ er merkevarenavn eller registrerte varemerker for Google Inc.

Andre merkevarenavn og registrerte varemerker tilhører de respektive eierne.

EU-samsvarsverklæring

ELKO erklærer herved at dette produktet oppfyller alle nødvendige krav og andre relevante bestemmelser i RADIOUTSTYRSDIREKTIVET 2014/53/EU. Samsvarsverklæringen kan lastes ned her: ELKO.no

ELKO

ELKO AS

Sandstuveien 68, 0680 Oslo


Pb. 6598 Esterstad, 0607 Oslo

Telefon: +47 67 80 73 00,

E-post: support@elko.no

www.elko.no








no sv

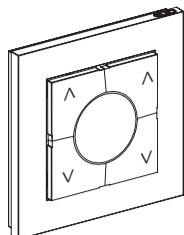

EKO07115, EKO07116, EKO07117


ELKO Smart

 ELKO

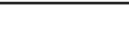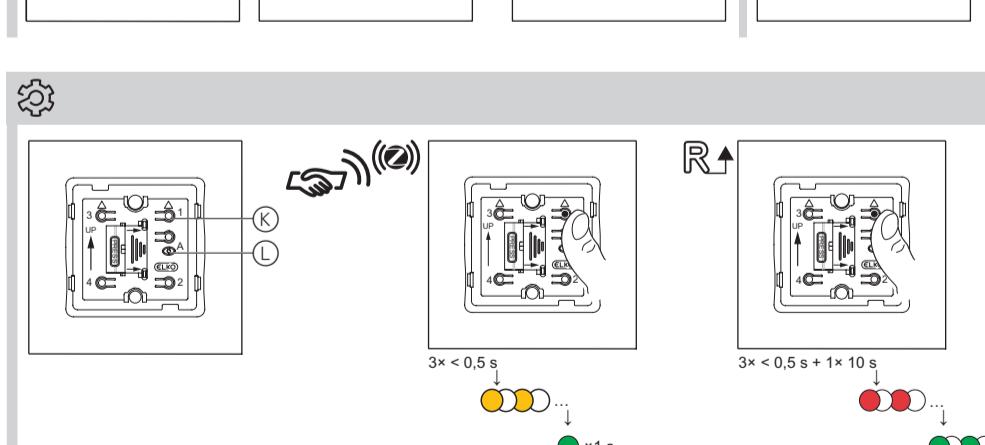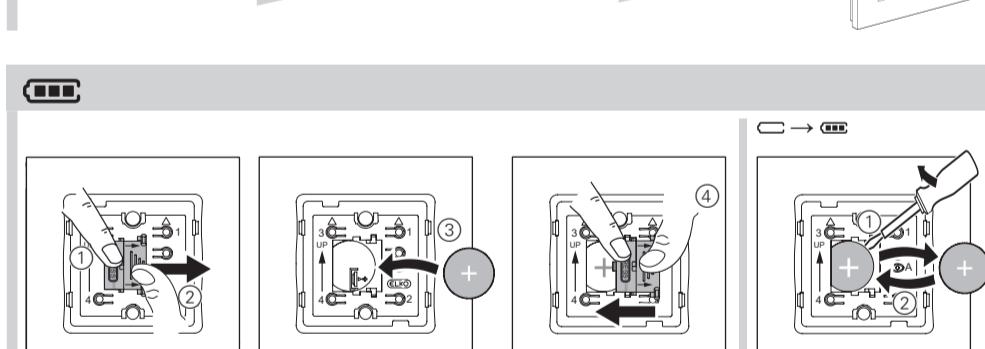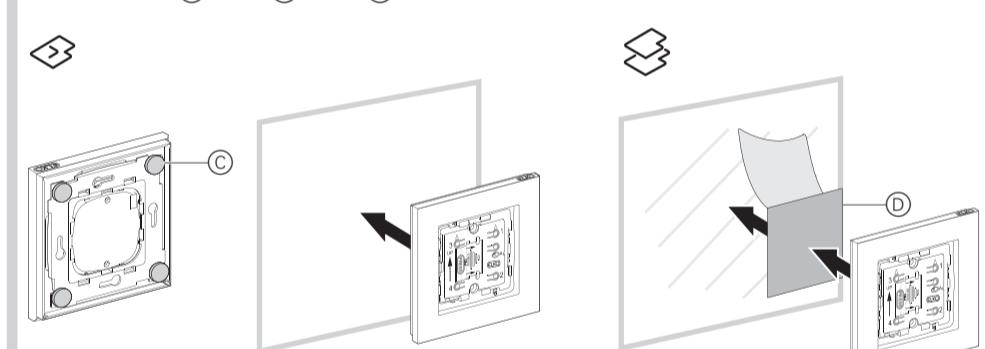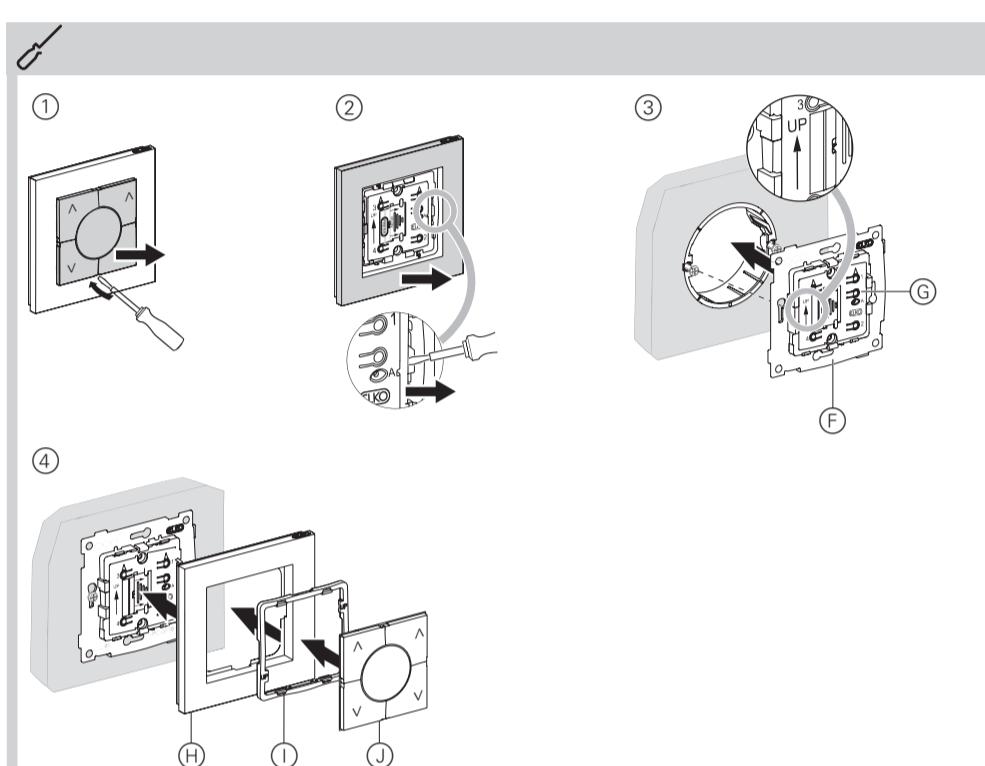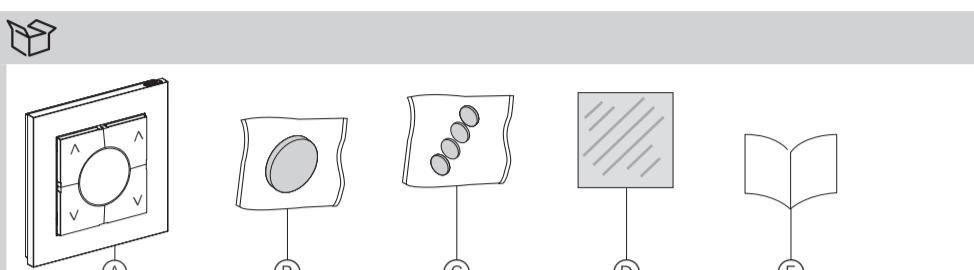

fi







en

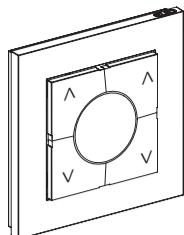

EKO07115, EKO07116, EKO07117


ELKO Smart

ELKO

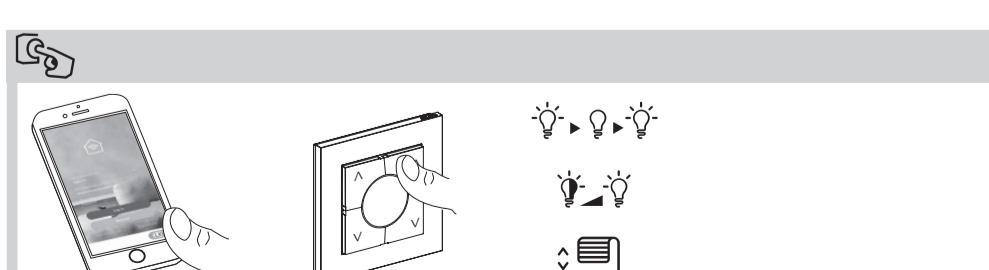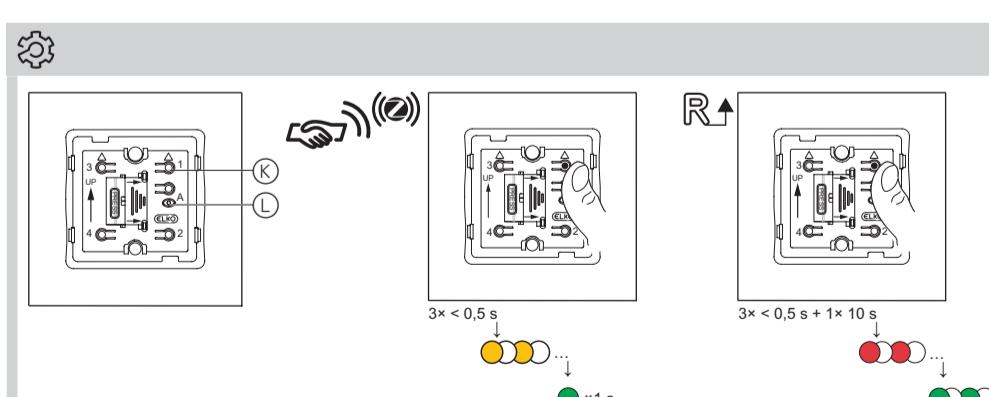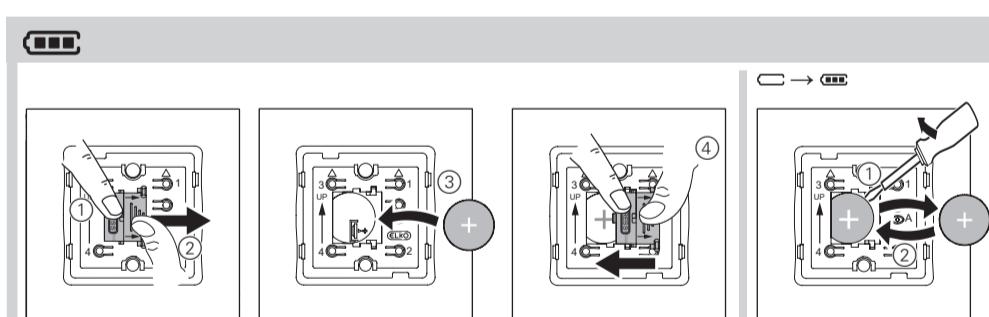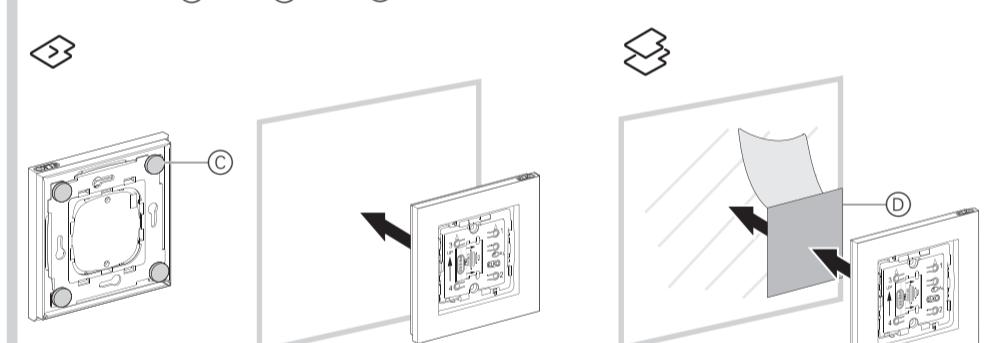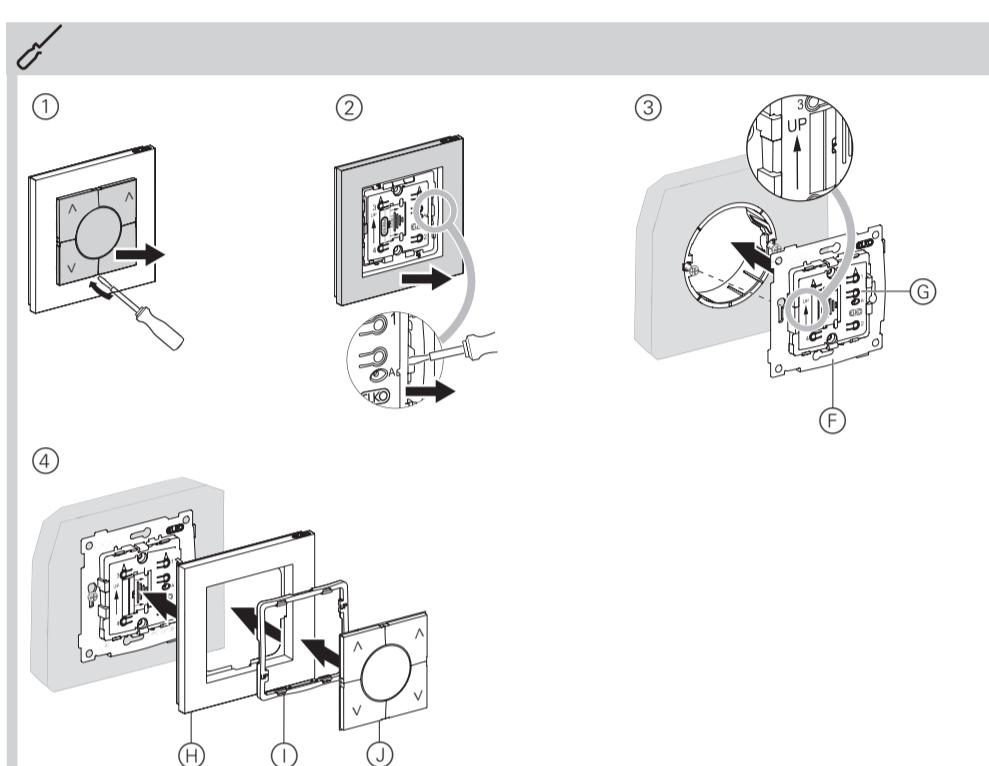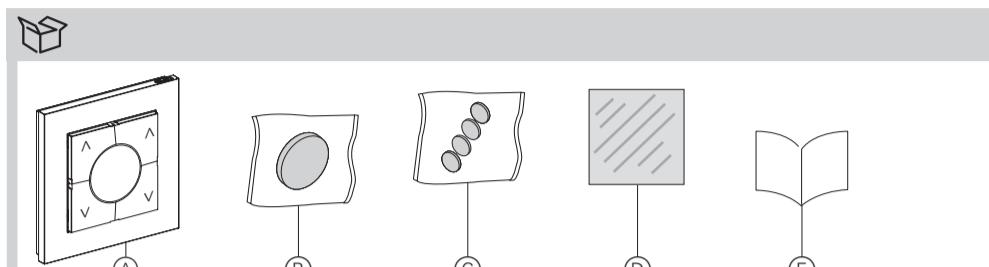

fi







en

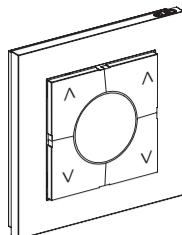

EKO07115, EKO07116, EKO07117

ELKO Smart

ELKO

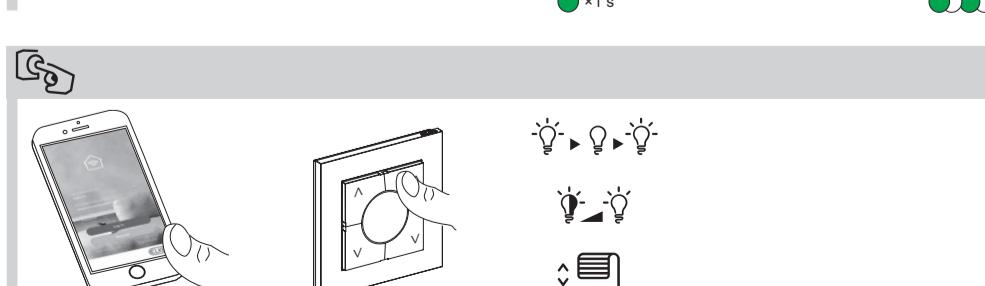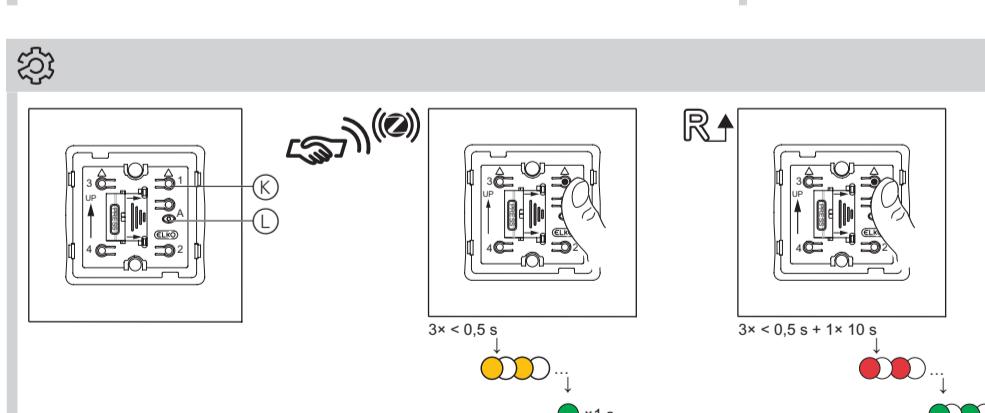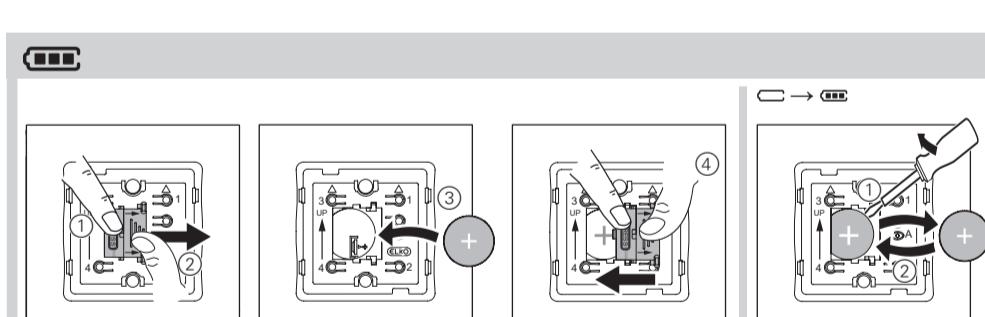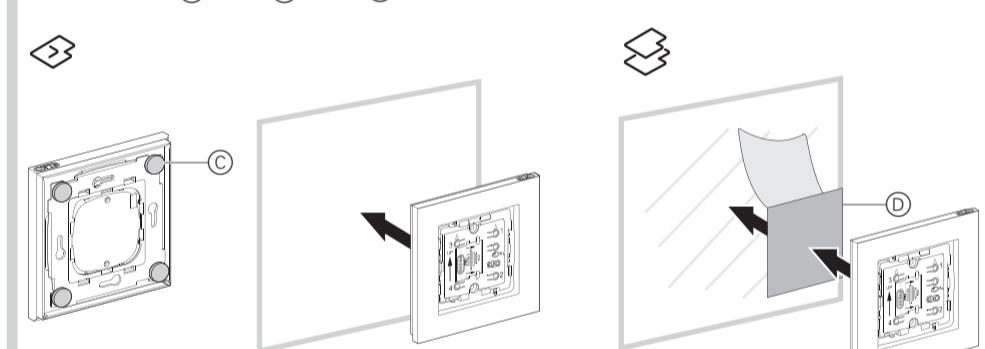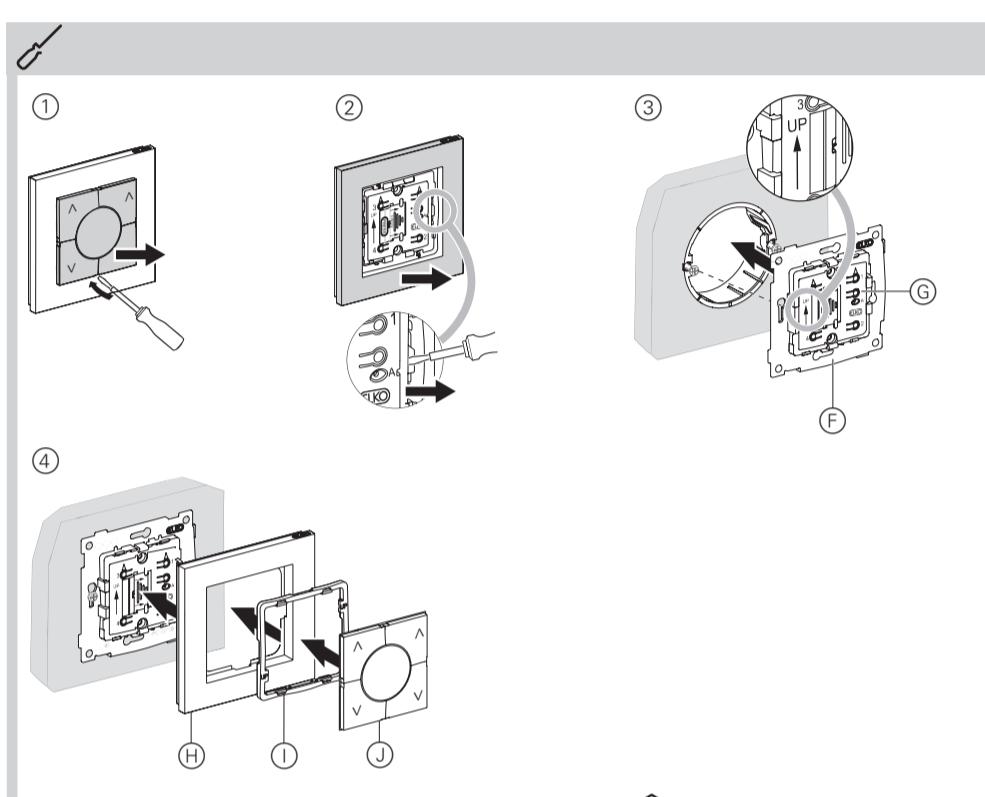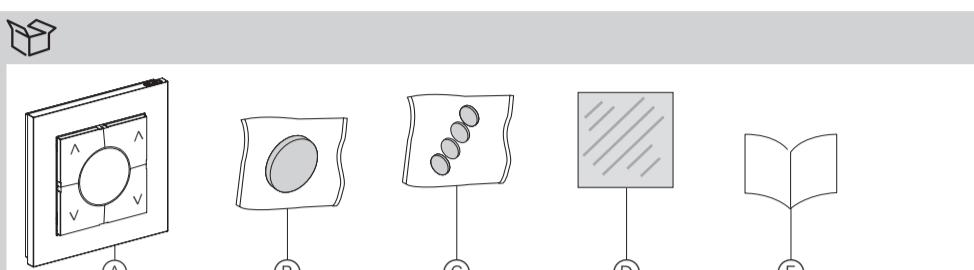

1



2


[Download on the App Store](#)
[GET IT ON Google Play](#)

en

SmartSwitch Push Wireless

Prerequisites

Download the **ELKO Smart** app to your smartphone and install the **ELKO SmartHUB** to configure and control ELKO Smart devices.

Additional system information

Detailed product information is available online in the **system user guide**: Scan the QR code or follow the link.


<http://proff.elko.no/elko-smart>

For your safety

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Safe electrical installation must be carried out only by skilled professionals. Skilled professionals must prove profound knowledge in the following areas:

- Connecting to installation networks
- Connecting several electrical devices
- Laying electric cables
- Safety standards, local wiring rules and regulations

Failure to follow these instructions will result in death or serious injury.

i Work on the power supply is necessary if you are mounting the device onto a wall box with 230 V AC cables or an existing switch/socket outlet combination.

Getting to know the product

The SmartSwitch Push Wireless (hereinafter referred to as **device**) is used to control a group of Zigbee devices within the same Zigbee network.

The device can be configured through ELKO Smart app or can be paired with other ELKO Smart devices.

Package contents

- (A) SmartSwitch Push Wireless
- (B) Battery
- (C) Adhesive pads
- (D) Adhesive silver foil
- (E) Installation instructions

i The wall box, wall plugs and screws are not included in the package. They must be procured by the user.

Mounting elements

- (F) Fixing frame
- (G) Module
- (H) Front cover
- (I) Locking ring
- (J) Rocker

Mounting the device

- i**
- For wall box, wood or wall use mounting screws.
 - For smooth surface, use adhesive pads.
 - For glass surface, use adhesive pads and adhesive silver foil.
 - While mounting the device, the arrow on the module must point upwards.

Note: Do not install the device on a metal surface, as it affects the wireless communication and performance of the device.

Mounting using screws

- ① Remove the rocker.
- ② Remove the locking ring and the front cover
- ③ Mount the fixing frame on the surface using screws.
- ④ Secure the locking ring, front cover and then the rocker on the fixing frame.

Mounting using adhesive pads

- Affix the adhesive pads (C) at the four corners on the rear side of the fixing frame.
- Mount the device on the surface.

Mounting using adhesive silver foil

i The adhesive pads (C) must be affixed to the fixing frame.

- Paste the adhesive silver foil (D) on the glass surface, avoiding bubbles or folds in the foil.
- Mount the device on the adhesive silver foil.

Inserting the battery

WARNING

CHEMICAL BURN HAZARD

Keep batteries out of reach of children. If swallowed, seek immediate medical attention.

Failure to follow these instructions can result in serious injury or death.

- ① Press the battery cover.

- ② Slide towards right to remove.

- ③ Insert the battery with plus (+) symbol facing outward.

- ④ Secure the battery cover by pressing and sliding towards left.

i The battery cover is designed with child lock protection.

Replacing the battery

i Dispose used batteries as per statutory regulations.

Operating elements

(K) Push button (Setup/Reset)

(L) Status LED

Setting the device

i Remove the rocker from the device to see the status LED.

Connecting to the ELKO SmartHUB

Short press (< 0.5 s) the push button 3 times to connect to an available Zigbee network. The status LED blinks amber and then turns green upon successful connection to the Zigbee network.

Pairing to other ELKO Smart devices

To control products in a room control mode, it can be paired with other ELKO Smart devices within the same Zigbee network.

For more information refer to the system user guide.

Resetting the device

Short press (< 0.5 s) the push button 3 times and then press and hold the push button (> 10 s), the status LED blinks red. Then release the push button, the status LED stops blinking upon successful reset of the device.

The device restarts and blinks green for a few seconds. After reset, the LED turns off to save the battery.

i After the device is reset all the programming and network data will be deleted.

Troubleshooting

Refer to the system user guide.

Technical data

Battery	CR2032
Battery life	Up to 5 years (depending frequency of use and quality of battery)
IP rating	IP20
Operating frequency	2405 - 2480 MHz
Max. radio-frequency power transmitted	<10 mW
Range	100 m open space
Operating temperature	-5 °C to 45 °C
Relative humidity	10% to 95%
Certification	Zigbee 3.0

Dispose of the device separately from household waste at an official collection point. Professional recycling protects people and the environment against potential negative effects.

Trademarks

- Zigbee® is a registered trademark of the Zigbee Alliance.
- Apple® and App Store® are brand names or registered trademarks of Apple Inc.
- Google Play™ Store and Android™ are brand names or registered trademarks of Google Inc.

Other brands and registered trademarks are properties of their relevant owners.

EU Declaration of conformity

Hereby, ELKO, declares that this product is in compliance with the essential requirements and other relevant provisions of RADIO EQUIPMENT DIRECTIVE 2014/53/EU. Declaration of conformity can be downloaded on: ELKO.no.

ELKO

ELKO AS

Sandstuveien 68, 0680 Oslo

Pb. 6598 Etterstad, 0607 Oslo

Phone.: +47 67 80 73 00,

E-mail: support@elko.no

www.elko.no