 


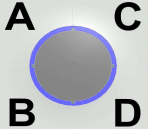

 











 




ELKO Matic Symbol pakke sett

3725/4099/4101

	Symbolknapper for	ELKO Matic	A B C D				Antall i sett	
			A	B	C	D		
		Bryterpanel						
	Tekst	Symboler lys						
1	<i>Downlight</i>			7	6	2	3	18
2	<i>Spot</i>			3	1	3	1	8
3	<i>Taklampe</i>			2	2	2	2	8
4	<i>Generell belysning</i>			1	1	3	3	8 Pose 1
5	<i>Lysrør</i>			2	2	2	2	8
6	<i>Bord/Gulv Lampe</i>			1	1	1	2	5
7	<i>Lampett</i>				2	2	2	6
8	<i>Trapp(lys)</i>			1		2		3
		Symboler div.						
9	<i>Stikk</i>			2		2		4
10	<i>Kaffetrakter</i>			1	1	1	1	4
11	<i>Timer</i>				1	1	1	3
12	<i>Vifte</i>			2		2	1	5 Pose 2
13	<i>Markise inn / ut</i>			3		3		6
14	<i>Avstill alarm</i>				1	1	1	3
15	<i>Temp senk</i>				1	1	1	3
		Scenarie symboler						
16	<i>Dag</i>					2	2	4
17	<i>Natt</i>				2		2	4 Pose 1
18	<i>Ute/Fravær</i>			1	2		1	4
19	<i>Hjemme knapp</i>			2	1	1		4
		Tekst symboler						
20		SPOT		4	4	2	2	12
21		DIM		4	4	2	4	14
22		UTELYS			2	1	3	6 Pose 2
23		FERIE			1		1	2
24		SAUNA			1		1	2
	SUM ANTALL							144