

Spacer



For static reasons, the spacer is always used to increase stability to prevent the support from deforming when the bracket is tightened with the hexagonal bolts.
Spacer for use in U 5 support and in the head plate, type KU 7 VQP.

Type	Pack. pcs	Weight kg/100 pcs.	Item No.
DSK 45 FT	20	18,000	6416500
DSK 45 VA4301	10	15,000	6416489
DSK 45 VA4571	10	15,000	6416462

St Steel **V2A** Stainless steel, grade 304 **V4A** Stainless steel, grade 316 Ti

FT Hot-dip galvanised

Dimensions

