

Wireless Sensors

Pushbuttons without battery or wire FT55

1-9

FT55-



Wireless pushbutton with rocker

Starkt kitt bryteren kommer med enkel vippe.

Wireless pushbutton, 80x80 mm external dimensions, internal frame dimensions 55x55 mm, 15 mm high. Generates the power for wireless telegrams itself when the button is pressed, therefore there is no connecting wire and no standby loss.

The scope of supply comprises the frame R, a rocker W55, a double rocker DW55 (all same colour), an attachment frame BRF, the mounting base HP, the wireless module and one adhesive foil.

Wireless pushbuttons with one rocker can transmit two evaluable signals: press rocker up and press rocker down. Wireless pushbuttons with double rocker can transmit four evaluable signals: press two rockers up or down.

The mounting base can be screwed onto a flat surface or glued to the wall, on glass or on furniture using the enclosed adhesive foil. Use the sleeves in the 55 mm socket box for screw mounting. Then the **wireless switch lighting FTB** can be snapped into the mounting plate from the rear.

The double rocker is snapped onto the wireless module at the factory. If the double rocker is replaced by the large rocker, remove the rocker halves by pulling off to the front. Do not bend towards the middle. Then snap the large rocker so that the markings 0 and I on the back line up with the same markings on the wireless module.


Adhesion: First adhere the set *comprising the mounting base, frame and attachment frame* - with the latches pointing at the top and bottom. Then snap on the set *comprising the wireless module and rocker* - with the marking 0 on the back always pointing up.

Before screwing, remove the mounting base from the frame and the attachment frame. To do this, press the latches on the mounting base outwards. Then screw the mounting base - with the latches at top and bottom -, snap on the frame with the attachment frame and snap on the set *comprising the wireless module and rocker* - with the marking 0 on the back always pointing to the top.

We recommend sheet metal countersunk screws 2.9x25mm, DIN 7982 C, for screw connections. Both with rawl plugs 5x25mm and with 55 mm switch boxes. See Accessories on page Z-6.

The Eltako frame can be replaced on installation at any time by a design frame with internal dimensions 55x55 mm from other manufacturers.

Rockers and double rockers laser engraved page 1-29.

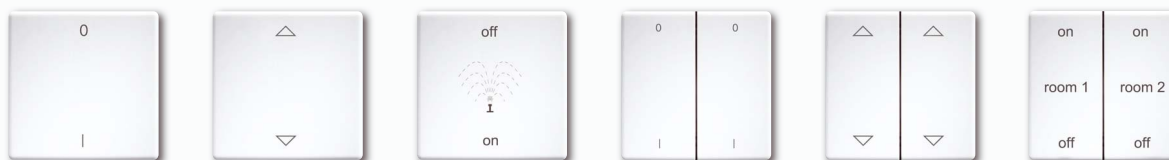

FT55-ws	Wireless pushbutton 55x55mm, without battery or wire, white	EAN 4010312308936	37,50 €/pc.
FT55-rw	Wireless pushbutton 55x55 mm, without battery or wire, pure white	EAN 4010312305775	37,50 €/pc.
FT55-wg	Wireless pushbutton 55x55 mm, without battery or wire, pure white glossy	EAN 4010312305799	37,50 €/pc.
FT55-sz	Wireless pushbutton 55x55 mm, without battery or wire, black	EAN 4010312305782	37,50 €/pc.
FT55-an	Wireless pushbutton 55x55 mm, without battery or wire, anthracite	EAN 4010312305805	37,50 €/pc.
FT55-al	Wireless pushbutton 55x55 mm, without battery or wire, coated/aluminium paint	EAN 4010312305829	44,70 €/pc.

Recommended retail prices excluding VAT.