

# Vigilohm IM400 series

## Insulation monitoring device

### User manual

7EN02-0493-01

11/2025



# Legal Information

The information provided in this document contains general descriptions, technical characteristics and/or recommendations related to products/solutions.

This document is not intended as a substitute for a detailed study or operational and site-specific development or schematic plan. It is not to be used for determining suitability or reliability of the products/solutions for specific user applications. It is the duty of any such user to perform or have any professional expert of its choice (integrator, specifier or the like) perform the appropriate and comprehensive risk analysis, evaluation and testing of the products/solutions with respect to the relevant specific application or use thereof.

The Schneider Electric brand and any trademarks of Schneider Electric SE and its subsidiaries referred to in this document are the property of Schneider Electric SE or its subsidiaries. All other brands may be trademarks of their respective owner.

This document and its content are protected under applicable copyright laws and provided for informative use only. No part of this document may be reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), for any purpose, without the prior written permission of Schneider Electric.

Schneider Electric does not grant any right or license for commercial use of the document or its content, except for a non-exclusive and personal license to consult it on an "as is" basis.

Schneider Electric reserves the right to make changes or updates with respect to or in the content of this document or the format thereof, at any time without notice.

**To the extent permitted by applicable law, no responsibility or liability is assumed by Schneider Electric and its subsidiaries for any errors or omissions in the informational content of this document, as well as any non-intended use or misuse of the content thereof.**

# Safety information

## Important information

Read these instructions carefully and look at the equipment to become familiar with the device before trying to install, operate, service, or maintain it. The following special messages may appear throughout this manual or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of either symbol to a “Danger” or “Warning” safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that accompany this symbol to avoid injury or death.

### **DANGER**

**DANGER** indicates a hazardous situation which, if not avoided, **will result in** death or serious injury.

**Failure to follow these instructions will result in death or serious injury.**

### **WARNING**

**WARNING** indicates a hazardous situation which, if not avoided, **could result in** death or serious injury.

### **CAUTION**

**CAUTION** indicates a hazardous situation which, if not avoided, **could result in** minor or moderate injury.

### **NOTICE**

NOTICE is used to address practices not related to physical injury.

## Please note

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this equipment. A qualified person is one who has skills and knowledge related to the construction, installation, and operation of electrical equipment and has received safety training to recognize and avoid the hazards involved.

## Notice

### FCC

**NOTE:** Applicable for IM400L.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

The user is cautioned that any changes or modifications not expressly approved by Schneider Electric could void the user's authority to operate the equipment.

This digital apparatus complies with CAN ICES-3 (A) /NMB-3(A).

## About this manual

This manual discusses features of the Vigilohm IM400 insulation monitoring devices (IMDs) series and provides installation, commissioning, and configuration instructions.

This manual is intended for use by designers, panel builders, installers, system integrators, and maintenance technicians who are related with ungrounded electrical distribution systems featuring insulation monitoring devices (IMDs).

Throughout the manual, the term “IMD” and “device” refers to Vigilohm IM400, IM400C (fully coated product for harsh environments), IM400L (24...48 Vdc supply voltage), IM400THR (for monitoring medium voltage application), and IM400LTHR (24...48 Vdc supply voltage / for monitoring medium voltage application). All differences between the models, such as a feature specific to one model, are indicated with the appropriate model number or description.

This manual assumes you have an understanding of insulation monitoring and are familiar with the equipment and power system in which your device is installed.

Please contact your local Schneider Electric representative to learn what additional training opportunities are available for your devices.

Make sure you are using the most up-to-date version of your device’s firmware in order to access the latest features.

The most up-to-date documentation for your device is available for download from [www.se.com](http://www.se.com).

## Validity note

The characteristics of the products described in this document are intended to match the characteristics that are available on [www.se.com](http://www.se.com). As part of our corporate strategy for constant improvement, we may revise the content over time to enhance clarity and accuracy. If you see a difference between the characteristics in this document and the characteristics on [www.se.com](http://www.se.com), consider [www.se.com](http://www.se.com) to contain the latest information.

## Product related information

Refer to the chapter [Safety precautions](#) for the product related safety messages.

## General Cybersecurity Information

In recent years, the growing number of networked machines and production plants has seen a corresponding increase in the potential for cyber threats, such as unauthorized access, data breaches, and operational disruptions. You must, therefore, consider all possible cybersecurity measures to help protect assets and systems against such threats.

To help keep your Schneider Electric products secure and protected, it is in your best interest to implement the cybersecurity best practices as described in the Cybersecurity Best Practices document.

Schneider Electric provides additional information and assistance:

- Subscribe to the Schneider Electric security newsletter.
- Visit the Cybersecurity Support Portal web page to:
  - Find Security Notifications.
  - Report vulnerabilities and incidents.
- Visit the Schneider Electric Cybersecurity and Data Protection Posture web page to:
  - Learn more about cybersecurity in the Cybersecurity Academy.
  - Explore the cybersecurity services from Schneider Electric.

## Product related cybersecurity information

To help reduce the threat of cyber attacks on your (equipment/devices) systems, organizations, and networks from cyber attack threats requires multi-layered cyber risk mitigation measures, early detection of incidents, and appropriate response and recovery plans when incidents occur. For more information about cybersecurity, refer to the Cybersecurity Guidelines.

### **⚠ WARNING**

#### **POTENTIAL COMPROMISE OF SYSTEM AVAILABILITY, INTEGRITY, AND CONFIDENTIALITY**

- Change default passwords/passcodes/PIN codes to help prevent unauthorized access to device settings and information.
- Disable unused ports/services and default accounts, where possible, to minimize pathways for malicious attacks.
- Place networked devices behind multiple layers of cyber defenses (such as firewalls, network segmentation, and network intrusion detection and protection).
- Use cybersecurity best practices (for example: least privilege, separation of duties) to help prevent unauthorized exposure, loss, modification of data and logs, interruption of services, or unintended operation.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

## Environmental data

For product compliance and environmental information, refer to the Schneider Electric Environmental Data Program.

## Available languages of the document

This document is available in these languages:

- English: 7EN02-0493
- French: 7FR02-0493
- Spanish: 7ES02-0493
- German: 7DE02-0493
- Italian: 7IT02-0493
- Portuguese: 7PT02-0493
- Russian: 7RU02-0493
- Chinese: 7ZH02-0493

## Related documents

Document	Number
Instruction Sheet: Vigilohm IM400, IM400C, and IM400L Insulation Monitoring Device	S1B9007601
Commissioning Guide: Vigilohm IM400 and IM400L Insulation Monitoring Device	7EN02-0417
Commissioning Guide: Vigilohm IM400C Insulation Monitoring Device	7EN02-0418
Commissioning Guide: Vigilohm IM400C in Adaptive mode	7EN02-0492
Instruction Sheet: Vigilohm IM400THR and IM400LTHR Insulation Monitoring Device	QGH8990201
Commissioning Guide: Vigilohm IM400THR and IM400LTHR Insulation Monitoring Device	7EN02-0419
Vigilohm Catalog	PLSED310020EN, PLSED310020FR
The IT earthing system: a solution to improve industrial electrical network availability - Application guide	PLSED110006EN
Système de liaison à la terre IT - Une solution pour améliorer la disponibilité des réseaux électriques dans l'industrie - Guide d'application	PLSED110006FR
System earthings in LV Les schémas des liaisons à la terre en BT (régimes du neutre)	Cahier technique n° 172
The IT system earthing (unearthed neutral) in LV Le schéma IT (à neutre isolé) des liaisons à la terre en BT	Cahier technique n° 178

## Trademarks

Schneider Electric is a trademark or registered trademark of Schneider Electric in France, the USA, and other countries.



# Table of Contents

Safety precautions .....	13
Cybersecurity.....	14
Overview .....	14
Product defense-in-depth .....	14
Protected environment assumptions .....	14
Hardening .....	15
Reporting a security incident or vulnerability .....	15
Firmware upgrades.....	15
Secure boot .....	15
Secure disposal guidelines.....	16
Introduction .....	17
Ungrounded power system overview.....	17
Insulation resistance (R) monitoring .....	17
Leakage capacitance (C) monitoring .....	17
Device overview .....	18
Hardware overview.....	19
Supplemental information.....	20
Accessories .....	20
Installation .....	24
Dimensions.....	24
Flush-mounting and dismounting .....	24
Mounting and dismounting from a Grid .....	26
Wiring diagram.....	27
Application .....	30
Example application: Ungrounded power system insulation monitoring.....	30
Example application: Ungrounded power system insulation monitoring and the alarm output is sent to a supervisor .....	30
Example application : Ungrounded power system insulation monitoring connected to a communication network.....	31
Example application: Ungrounded power system insulation monitoring and the insulation fault location is sent to a supervisor .....	32
Example application: Ungrounded power system insulation monitoring and the insulation fault location connected to a communication network.....	32
Human Machine Interface (HMI) .....	34
Vigilohm IM400, IM400C, and IM400L menu.....	34
Vigilohm IM400THR and IM400LTHR menu .....	35
Display interface.....	35
Navigation buttons and icons.....	36
Information icons .....	36
Status screens .....	37
Special status screens .....	40
Parameter modification using the display.....	43
Function.....	45
General configuration.....	45
Date/Time .....	45

Password .....	45
Language .....	45
Identification .....	46
Display .....	46
Network configuration .....	46
Application ( <b>App</b> ) .....	47
<b>Filtering</b> .....	48
<b>Locating</b> .....	49
Voltage adaptor ( <b>V. Adapt</b> ) .....	50
<b>Frequency</b> .....	51
<b>Injection</b> .....	51
High Resistance Grounding ( <b>HRG</b> ) .....	51
Primary DC Resistance ( <b>Pri. DC Resis</b> ) .....	52
Number of Transformer ( <b>No. of Transfo</b> ) .....	52
Alarm configuration .....	52
Insulation alarm ( <b>Ins. Alarm</b> ) and preventive insulation alarm ( <b>Prev. Alarm</b> ) thresholds .....	53
Insulation alarm time delay ( <b>Ins. AI. Delay</b> ) and preventive insulation alarm time delay ( <b>Prev. AI. Del.</b> ) .....	54
Disconnected injection ( <b>Disconnect. Inj.</b> ) .....	55
I/O configuration .....	55
Insulation alarm relay ( <b>Ins. AI. Relay</b> ) .....	55
Preventive insulation alarm relay ( <b>Prev. AI. Rel</b> ) .....	57
Relay assignment .....	60
Injection inhibition input ( <b>Inhibit. Input</b> ) .....	62
Acknowledge inhibition ( <b>Ack Inhibit.</b> ) .....	68
Insulation alarm relay acknowledgement ( <b>Ack AI. Relay</b> ) .....	68
Test with relays ( <b>Test w. Relays</b> ) .....	70
Inhibition type ( <b>Inhibit. Type</b> ) .....	70
R and C measurements .....	70
Insulation measurements .....	70
Effect of leakage capacitance and frequency disturbances on the measurement accuracy of R .....	70
Monitoring Power system insulation .....	71
Log .....	72
Trends .....	73
Reset .....	74
Auto-test .....	76
Communication .....	78
Communication parameters .....	78
Modbus functions .....	78
Modbus register table format .....	79
Modbus registers table .....	79
Alarm event records .....	89
Date and time (TI081 format) .....	92
Configuring IM400 series device using PowerLogic™ ION Setup .....	93
Overview .....	93
Setting up a network site .....	93
Adding IM400 series device to a site .....	94

---

IM400 series configuration screens .....	94
Configuring the clock parameters (Date/Time).....	94
Configuring the front panel display settings .....	95
Configuring the I/O configuration parameters .....	96
Configuring the insulation alarm setup .....	96
Configuring the network settings .....	97
Generating the device configuration reports .....	98
Configuring the device resets.....	98
Commissioning, maintenance and troubleshooting.....	100
Commissioning .....	100
ON light indicator .....	101
Disconnected injection detection.....	102
Troubleshooting .....	102
Functional safety standards compliance .....	104
Safety standards compliance requirements .....	104
Product installation and wiring .....	105
Commissioning for functional safety standards compliance .....	106
Specifications .....	108
China Standard Compliance .....	111



# Safety precautions

Installation, wiring, testing and service must be performed in accordance with all local and national electrical codes.

<b>⚠️⚠️ DANGER</b>
<b>HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH</b>
<ul style="list-style-type: none"><li>• Apply appropriate Personal Protective Equipment (PPE) and follow safe electrical work practices. See NFPA 70E, CSA Z462 or other local standards.</li><li>• Turn off all power supplying this device and the equipment in which it is installed before working on or in the equipment.</li><li>• Always use a properly rated voltage sensing device to confirm that all power is off.</li><li>• Assume communications and I/O wiring are hazardous live until determined otherwise.</li><li>• Do not exceed the maximum ratings of this device.</li><li>• Disconnect all the device's input and output wires before performing dielectric (hi-pot) or Megger testing.</li><li>• Never shunt an external fuse or circuit breaker.</li></ul>
<b>Failure to follow these instructions will result in death or serious injury.</b>

**NOTE:** See IEC 60950-1, Annex W for more information on communications and I/O wiring connected to multiple devices.

<b>⚠️ WARNING</b>
<b>UNINTENDED OPERATION</b>
Do not use this device for critical control or protection of persons, animals, property or equipment.
<b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b>

<b>NOTICE</b>
<b>EQUIPMENT DAMAGE</b>
<ul style="list-style-type: none"><li>• Do not open the device case.</li><li>• Do not attempt to repair any components of the device.</li></ul>
<b>Failure to follow these instructions can result in equipment damage.</b>

# Cybersecurity

## Overview

Modbus is an unencrypted communication protocol. RS-485 cannot transmit encrypted data using communication protocol.

### **⚠ WARNING**

#### **POTENTIAL COMPROMISE OF SYSTEM AVAILABILITY, INTEGRITY, AND CONFIDENTIALITY**

- Do not allow unauthorized users to access your network.
- All transmitted information is encrypted.
- Regularly update and patch your network security systems.
- Monitor network activity for any suspicious behavior.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

To avoid malicious use of the sensitive information that will be transmitted through an internal network, follow the instructions:

- Segment the network physically or logically..
- Restrict access to the network using standard controls such as firewalls.
- For transmitting data over an external network, encrypt protocol transmissions over all external connections using an encrypted tunnel, TLS wrapper or a similar solution.

## Product defense-in-depth

Use a layered network approach with multiple security and defense controls in your IT and control system to minimize data protection gaps, helps reduce single-point-of-failure and create a strong cybersecurity posture. The more layers of security in your network, the harder it is to breach defenses, take digital assets or cause disruption.

Place the device behind a secure firewall to protect against unauthorized access and potential cyber threats.

## Protected environment assumptions

- Cybersecurity governance – available and up-to-date guidance on governing the use of information and technology assets in your company.
- Perimeter security – installed devices, and devices that are not in service, are in an access-controlled or monitored location.
- Emergency power – the control system provides the capability to switch to and from an emergency power supply without affecting the existing security state or a documented degraded mode.
- Firmware upgrades – device upgrades are implemented consistently to the current version of firmware.
- Controls against malware – detection, prevention, and recovery controls to help protect against malware are implemented and combined with appropriate user awareness.

- Physical network segmentation – the control system provides the capability to:
  - Physically segment control system networks from non-control system networks.
  - Physically segment critical control system networks from non-critical control system networks.

## Hardening

Recommendations to optimize cybersecurity in a protected environment:

- Harden the device according to your company policies and standards.
- Review assumptions about protected environments and address potential risks and mitigation strategies.
- Least functionality can be applied to prohibit and restrict the use of unnecessary functions, protocols and/or services.
- Change the communication protocol ports from their default values. This lowers the predictability of port use.
- Disable communication protocol ports when they are not in use. This reduces the attack surface.

## Reporting a security incident or vulnerability

To report suspicious activity or a cybersecurity incident, go to the [Schneider Electric Report an Incident website](#).

To report a security vulnerability affecting your product or solution, go to the [Schneider Electric Report a Vulnerability website](#).

## Firmware upgrades

When device firmware is upgraded - security configuration remains the same until changed, including user names and passwords/passcodes. It is recommended to review security configuration after an upgrade to analyze privileges for new or changed device features and revoke or apply them according to your company policies and standards.

## Secure boot

Secure boot is a security feature built to ensure that only trusted and authenticated software is allowed to run during the system startup process.

- Secure boot verifies the digital signatures of firmware drivers, bootloaders, and operating system components before executing them. It allows only software signed with trusted keys to run.
- Secure boot blocks unauthorized or malicious code at the firmware level and helps prevent rootkits and pre-boot malware attacks.

## Signed firmware update

Signed firmware update is a security mechanism which ensures that only verified and authorized firmware updates are installed.

## Secure disposal guidelines

Use the *Secure disposal checklist* when disposing a device to help prevent potential disclosure of data.

# Introduction

## Ungrounded power system overview

Ungrounded power system is an earthing system, which increases continuity of service of power systems and protection of people and property.

This system varies from country to country, including some applications where this system is mandated, such as hospital and the naval applications. This system is typically used in instances where the unavailability of power could result in lost production or incur significant downtime costs. Other potential applications are when there is a need to minimize the risk of fire and explosion. Lastly, this system is chosen in certain cases because it can facilitate preventive and corrective maintenance operations.

The system transformer's neutral is isolated from earth, or there is a high impedance between the neutral and earth, while the electrical load frames are earthed. This isolates the transformer and the load such that if the first fault occurs there is no loop for shorting current to flow, allowing the system to continue to operate normally without hazard to people and equipment. This system must have very low network capacitance to ensure that the first fault current cannot generate significant voltage. However, the faulty circuit must be detected and repaired before a second fault occurs. Because this system can tolerate an initial fault, maintenance operations can be improved and carried out in a safe and convenient manner.

## Insulation resistance (R) monitoring

Ungrounded power system require insulation monitoring to identify when the first insulation fault has occurred.

In ungrounded power system, the installation must either be ungrounded or must be grounded using a sufficiently high level of impedance.

In the event of only one ground or earth fault, the fault current is very low and interruption is unnecessary. However, given that a second fault could potentially cause the circuit breaker to trip, an insulation monitoring device has to be installed to indicate an initial fault. This device triggers an audible and/or a visual signal.

By constantly monitoring the insulation resistance, you can keep track of the system quality, which is a form of preventive maintenance.

## Leakage capacitance (C) monitoring

Ungrounded power systems is adversely affected by leakage capacitance.

Ungrounded power system must meet the following conditions to ensure protection from indirect contact:

$$R_A \times I_d \leq 50 \text{ V AC and } R_A \times I_d < 120 \text{ V DC}$$

- $R_A$  is the resistance value of the equipment grounding connection, in Ohms.
- $I_d$  is the ground fault current, in Amps.
- 50 V is the maximum acceptable voltage for indirect contacts.

For a three-phase ungrounded power system, the indirect contact fault current  $I_d$  is:

$$I_d = 2\pi \times F \times C \times V$$

- $F$  is the frequency of the power system.
- $C$  is the earth leakage capacitance.

- $V$  is the phase-to-neutral voltage.

Combining these, the ungrounded power system must meet the following condition:

$$2\pi \times F \times C \times V \times R_A \leq 50 \text{ V}$$

It is important that the equipment grounds have low resistance, and that the ungrounded power system leakage capacitance must be monitored and kept to a low value.

For more information, see Cahier Technique No. 178.

## Device overview

The device is a digital insulation monitoring device (IMD) for low-voltage and medium-voltage ungrounded power systems. The device monitors the insulation of a power system and notifies any insulation faults as soon as they occur.

IMD applies low-frequency AC voltage between the power system and the ground to provide accurate insulation monitoring in complex applications. The insulation is then assessed on the basis of the current value returned. This method is used for all power system types - AC, DC, combined, rectified, with a variable speed drive, etc.


The device offers the following features:

- Insulation resistance display (R)
- Detection of insulation faults in accordance with a configurable threshold
- Leakage capacitance display (C) with associated impedance ( $Z_c$ ) <sup>(1)</sup>
- Communication via the Modbus RS-485 protocol
- Injection inhibition via logic input
- Insulation fault log
- Trending of the insulation resistance (R) from last hour and last day
- Quick setup of the monitoring parameters according to the applications
- Compatibility with voltage adaptor ( $U_{max} = 1,700 \text{ Vac Ph-Ph}$  or  $U_{max} = 1,200 \text{ Vdc}$ )
- Compatibility with P1N ground adaptor and voltage transformer ( $U_{max} = 33 \text{ kVac}$ ) <sup>(2)</sup>

<sup>(1)</sup> Applicable for IM400, IM400C, and IM400L

<sup>(2)</sup> Applicable for IM400THR and IM400LTHR

# Hardware overview

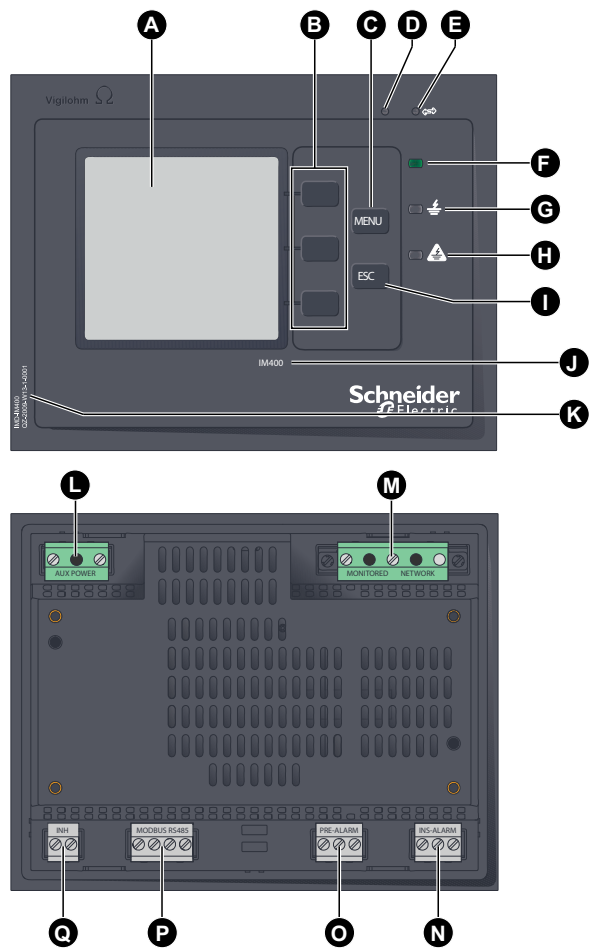

A	Display
B	Contextual menu buttons
C	<b>Menu</b> button to go to the main menu
D	Red indicator light for device product status
E	Yellow indicator light for Modbus communication indication
F	Green indicator light for correct insulation indication
G	White indicator light for preventive insulation alarm
H	Yellow indicator light for insulation alarm
I	<b>Esc</b> button to return to the previous menu or cancel a parameter entry
J	Product catalog number
K	Serial number
L	Auxiliary power supply terminal block
M	Injection terminal block
N	Insulation alarm relay terminal block
O	Preventive insulation alarm relay terminal block
P	Modbus communication terminal block
Q	Injection inhibition input terminal block

## Device commercial reference

Model	Commercial reference
IM400	IMD-IM400
IM400L	IMDIM400L
IM400C	IMD-IM400C
IM400THR	IMDIM400THR
IM400LTHR	IMDIM400LTHR

## Supplemental information

This document should be used along with the instruction sheet included in the box with your device and accessories.

See your device's instruction sheet for information related to installation.

See your product's catalog pages at [www.se.com](http://www.se.com) for information about your device, its options, and accessories.

You can download updated documentation from [www.se.com](http://www.se.com) or contact your local Schneider Electric representative for the latest information about your product.

## Accessories

Accessories are required depending on the type of installation on which the device is installed.

## Accessories list

Accessory	Commercial reference
Cardew C "440 V" surge limiter	50171
Cardew C "660 V" surge limiter <sup>(3)</sup>	50172
Cardew C "1000 V" surge limiter <sup>(3)</sup>	50183
Cardew C base <sup>(4)</sup>	50169
ZX impedance	50159
IM400-1700C voltage adaptor <sup>(5)</sup>	IMD-IM400-1700C
PHT1000 voltage adaptor <sup>(6)</sup>	50248
IM400VA2 voltage adaptor <sup>(5)</sup>	IMD-IM400VA2
P1N ground adaptor	1460872
Voltage transformer	See Note

<sup>(3)</sup> Compatible with IM400 when used with voltage adaptor IM400-1700C or PHT1000 or IM400VA2

<sup>(4)</sup> Compatible with all Cardew C catalog numbers

<sup>(5)</sup> For power systems with  $U_{max} > 480$  Vac Ph-Neutral, or  $U_{max} > 830$  Vac Ph-Ph, or  $U_{max} > 480$  Vdc without insulation fault locator.

<sup>(6)</sup> For power systems with  $U_{max} > 480$  Vac Ph-Neutral, or  $U_{max} > 830$  Vac Ph-Ph, or  $U_{max} > 480$  Vdc with insulation fault locator.



**NOTE:**

- IM400C in Adaptive mode shall support PHT1000, IM400VA2 and IM400-1700C.
- P1N ground adaptor is applicable for IM400THR and IM400LTHR.
- For information regarding automatic and mobile insulation fault locating accessories, see **Locating**, page 49.
- Voltage transformers must be selected appropriately depending on system voltage. Refer to the Schneider Electric Medium Voltage Transformer catalogue.

## Cardew C surge limiter

<b>Function</b>	<p>Cardew C is used if the insulation monitoring device is connected to the secondary connection of an MV/LV transformer (according to the rules and conventions that apply in the various countries).</p> <p>It protects the low-voltage (LV) installation against over voltage hazards. It is connected to the secondary connection of the transformer. Cardew C can be used on the following systems:</p> <ul style="list-style-type: none"> <li>• <math>U &lt; 1000 \text{ V AC}</math></li> <li>• <math>U &lt; 300 \text{ V DC}</math></li> </ul>			
<b>Selection table</b>	<b>Un: Nominal Phase-to-Phase Voltage of AC System</b>		<b>Ui: Arcing Voltage</b>	<b>Type of Cardew C</b>
	Accessible neutral	Not accessible neutral		
	$380 \text{ V} < U \leq 660 \text{ V}$	$220 \text{ V} < U \leq 380 \text{ V}$	$700 \text{ V} < U_i \leq 1,100 \text{ V}$	440 V
	$660 \text{ V} < U \leq 1,000 \text{ V}$	$380 \text{ V} < U \leq 660 \text{ V}$	$1,100 \text{ V} < U_i \leq 1,600 \text{ V}$	660 V
$1,000 \text{ V} < U \leq 1,560 \text{ V}$	$660 \text{ V} < U \leq 1,000 \text{ V}$	$1,600 \text{ V} < U_i \leq 2,400 \text{ V}$	1,000 V	
<b>Dimensions</b>	<p><i>mm</i> <i>in.</i></p>			
<b>Mounting</b>	<ul style="list-style-type: none"> <li>• Cardew C mounted directly on busbars</li> <li>• Mounting with plate-mounted base</li> </ul> <p><b>NOTE:</b> For more information, see <i>Accessories list</i></p>			
<b>Connection</b>				





## ZX limiting impedance


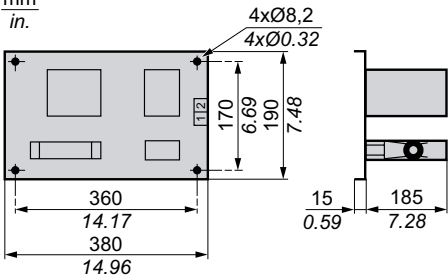
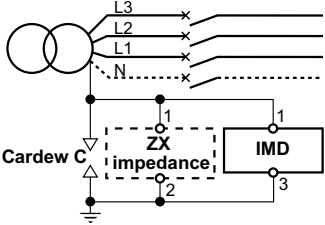
<p><b>Function</b></p>	<p>ZX limiting impedance enables you to create an installation with a high-impedance grounded neutral system (1500 Ω at 50 Hz).</p> <p>ZX limiting impedance remains connected during insulation fault locating at 2.5 Hz:</p> <ul style="list-style-type: none"> <li>• 1500 Ω at 50 Hz</li> <li>• 1 MΩ at 2.5 Hz</li> </ul> <p>The ZX impedance must be used on systems with <math>U \leq 500</math> Vac.</p>
<p><b>Dimensions</b></p>	
<p><b>Mounting</b></p>	<p>On mounting plate</p>
<p><b>Connection</b></p>	

## Voltage adaptors

The optional voltage/ground adaptors are:

- IM400–1700C
- PHT1000
- IM400VA2
- P1N
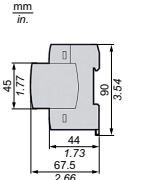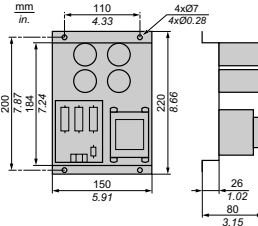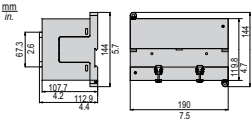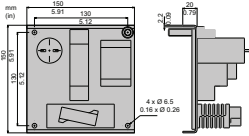
<p><b>Function</b></p>	<p>The IM400–1700C, PHT1000, and IM400VA2 voltage adaptors can be used to connect a IMD to ungrounded systems higher than 480 V AC. The wire connecting IM400–1700C, IM400VA2, or P1N to IMD has to have the same voltage rating as the monitored network. The P1N ground adaptor must be connected with the system for the operation of IM400THR and IM400LTHR. The compatibility of voltage adaptors with insulation fault location is as follows:</p> <ul style="list-style-type: none"> <li>• The IM400–1700C, IM400VA2, and P1N voltage adaptors are not compatible with insulation fault location (IFL12 series).</li> <li>• The PHT1000 voltage adaptor is compatible with insulation fault location (IFL12 series).</li> </ul>			
<p><b>Dimensions</b></p>	<p><b>IM400–1700C</b></p> 	<p><b>PHT1000</b></p> 	<p><b>IM400VA2</b></p> 	<p><b>P1N</b></p> 
<p><b>Mounting</b></p>	<p>On DIN rail</p>	<p>On mounting plate</p>	<p>On DIN rail or mounting plate</p>	<p>On mounting plate</p>

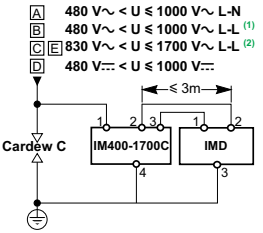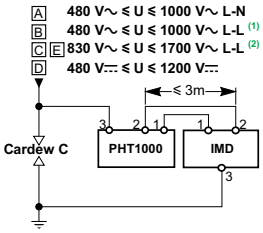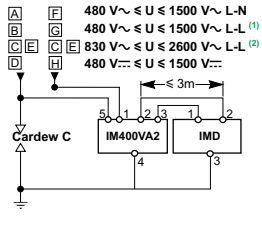
<p><b>Connection</b></p>	<p>Wiring diagram, page 27</p> 	<p>Wiring diagram, page 27</p> 	<p>Wiring diagram, page 27</p> 	<p>Wiring diagram, page 27</p>
<p>(1) Voltage adaptor connected to a phase</p> <p>(2) Voltage adaptor connected to neutral</p>				

# Installation

## Dimensions


Device dimensions and cut-out for flush mount is illustrated in the following figure:

**NOTE:** All dimensions are measured in mm (in).

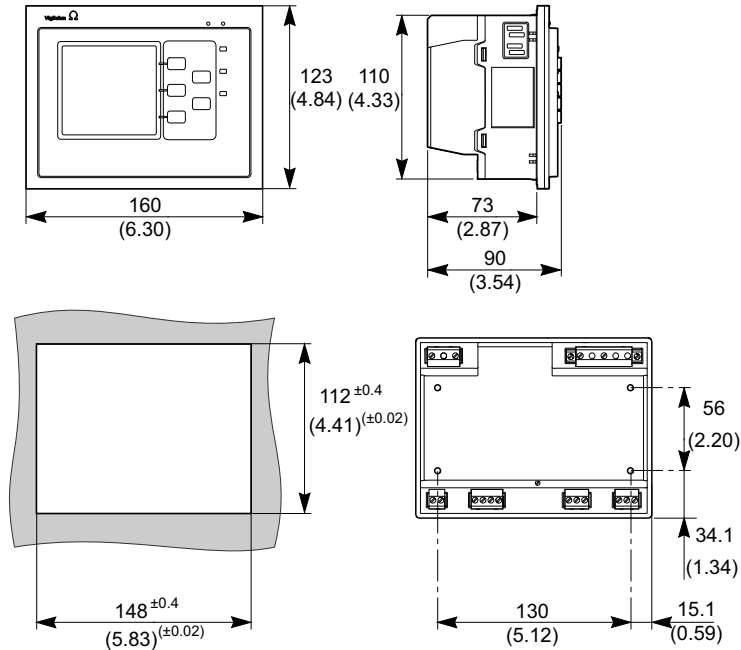

Observe the correct distances between devices for flush-mounting as per the following figure:

**NOTE:** All dimensions are measured in mm (in).

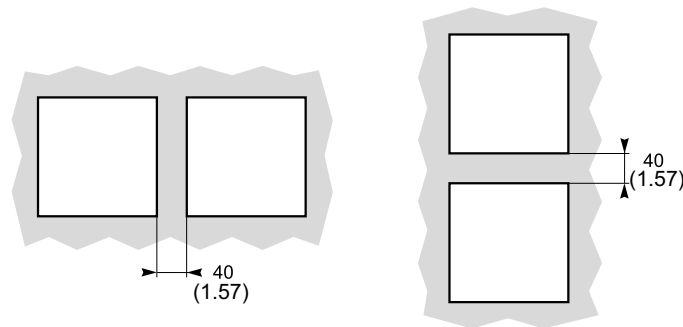

## Flush-mounting and dismounting


You can attach the device to any flat, rigid vertical support using the 3 spring clips supplied. You must not tilt the device after installation. To free up space for control gear, you can attach the device to the front panel of the floor-standing or wall-mounted enclosure. For USA and Canada, the device mounting should be open type only.

## Mounting

Before installing the device, check the following:

- The mounting plate must have a thickness of between 0.8 (0.03) and 3.2 (0.13) mm (in).


- A rectangle measuring 148 (5.83) x 112 (4.41) mm (in) must be cut out from the plate so the device can be installed.
  - No terminal blocks may be connected to the unit.
1. Insert the device in the cut-out in the mounting plate by tilting the device forward slightly.

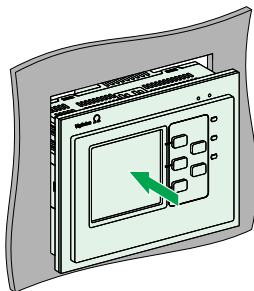

2. Depending on the thickness of the mounting plate, clip the spring clips into the mounting slots on the top of the device as follows:

Mounting plate thickness	Fixing slots to be used
$0.8 \text{ mm} \leq X \leq 2 \text{ mm}$ (0.031 in $\leq$ X $\leq$ 0.079 in)	
$2 \text{ mm} < X \leq 3.2 \text{ mm}$ (0.079 in < X $\leq$ 0.126 in)	


3. Clip the 2 spring clips on the side of the device and the 2 spring clips on the bottom of the device.

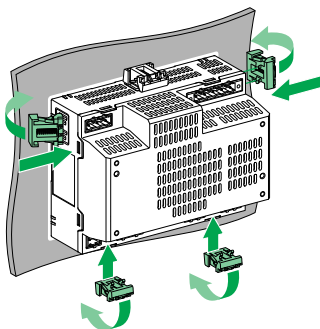


4. Do the wiring and insert the terminal blocks as shown in the relevant wiring diagram (See Wiring diagram, page 27).

## Dismounting


1. Disconnect the terminal blocks from the device.
2. Insert the blade of a screwdriver between the spring clip and the device and use the screwdriver as a lever to release the spring clip. Release the spring clips at the top and bottom of the device.

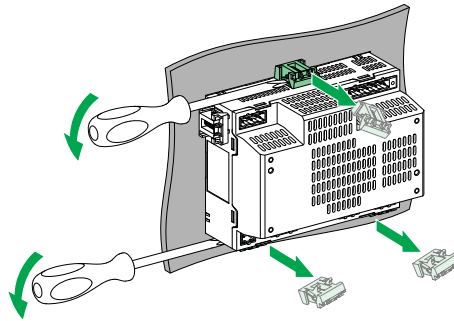

3. Release the 2 spring clips at the side of the device.

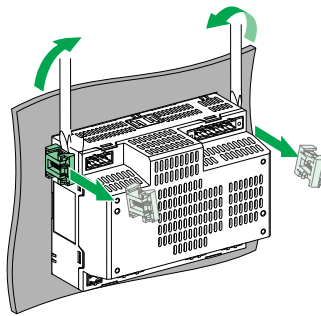

4. Remove the device from the mounting plate.

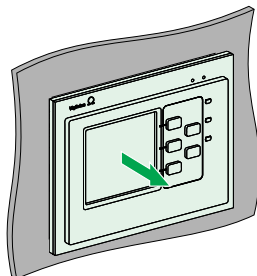


5. Reinsert the terminal blocks and make sure that the correct positions on the device are observed (See Hardware overview, page 19).

## Mounting and dismounting from a Grid


You can install the device on a grid using fixing brackets (reference 01199 Prisma catalog) or equivalent. The device must not be tilted after installation. When mounting or dismounting the device, you can keep the terminal blocks connected and wired up, or you can remove them. For USA and Canada, the device mounting should be open type only.

## Mounting

1. Position the fixing brackets on the device and tighten the screws and washers as illustrated (tightening torque: 1.2 N.m (8.85 lb-in.).

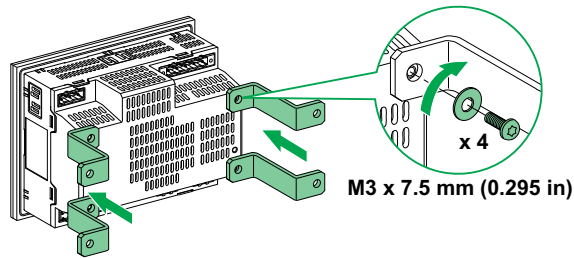

2. Attach the device to the grid using clamps.

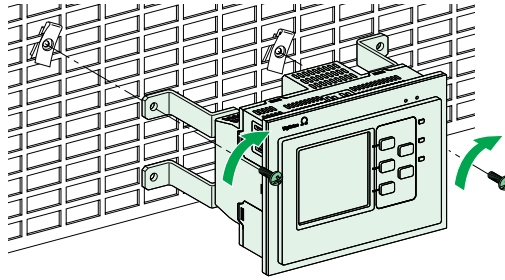

## Dismounting

1. Unscrew the clamps from the grid.
2. Unscrew the fixing brackets from the device.

## Wiring diagram

All the device wiring terminals have identical wiring capabilities. The following are the list of characteristics of the cables that can be used to connect the terminals:


- Stripped length: 7 mm (0.28 in)
- Cable cross sectional area: 0.2 to 2.5 mm<sup>2</sup> (24 to 14 AWG)
- Tightening torque: 0.8 N.m (7.1 lb-in)
- Type of screwdriver: Flat, 3 mm (0.12 in)

Cross-section area and voltage rating of wires must be suitable to the load current and to the voltage to which it is connected. The following characteristics need to be considered:

- Auxiliary power supply consumption: 25 VA / 10 Ω
- Current flowing to the monitoring network wiring terminal: less than 20 mA
- Current flowing to the injection inhibition wiring terminal: 5 mA
- Current flowing to the insulation alarm and to the preventive insulation alarm wiring terminals depends on the power rating of the insulation alarm indicator.


The illustration shows the connection of the device to a single-phase or three-phase 3- or 4-wire power system, or a DC power system.

Wiring diagram of IM400, IM400C, IM400L, IM400THR, and IM400LTHR

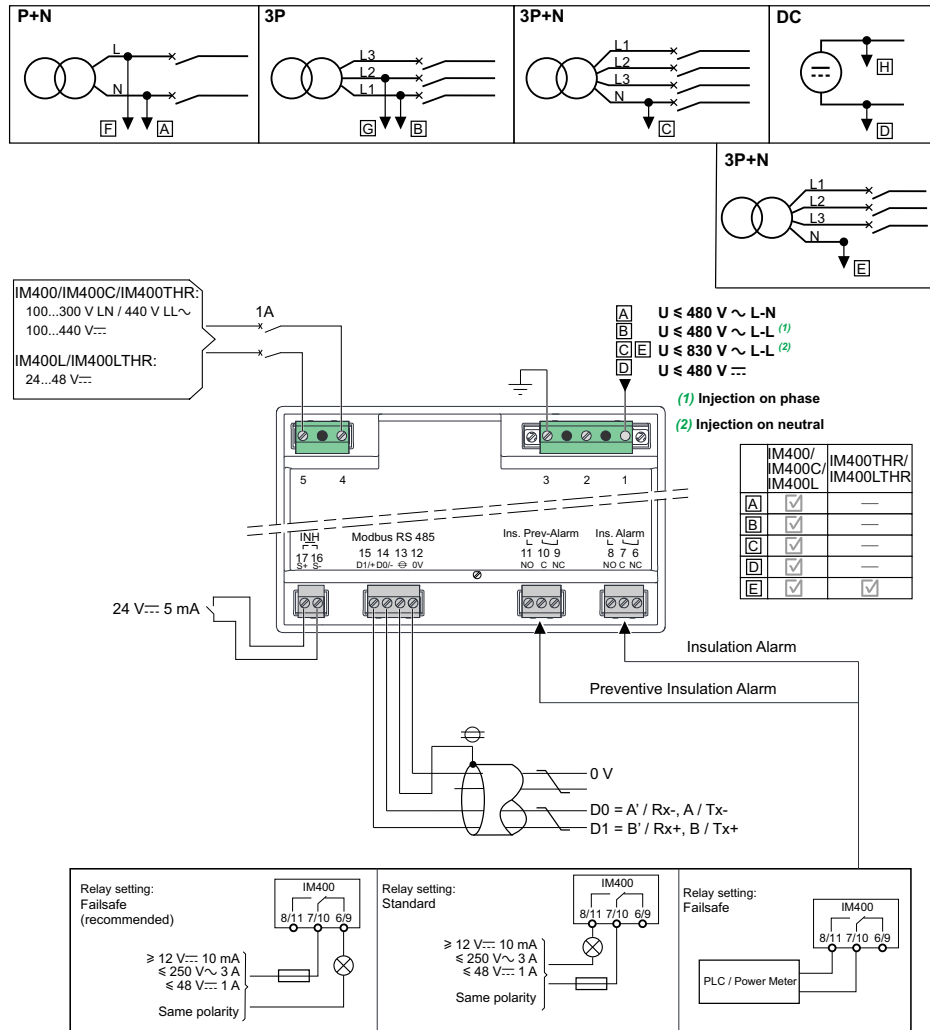

**NOTE:** Circuit breakers (reference MGN61334 or equivalent) can be used to replace listed fuses.

Wiring diagram of IM400THR and IM400LTHR for medium voltage

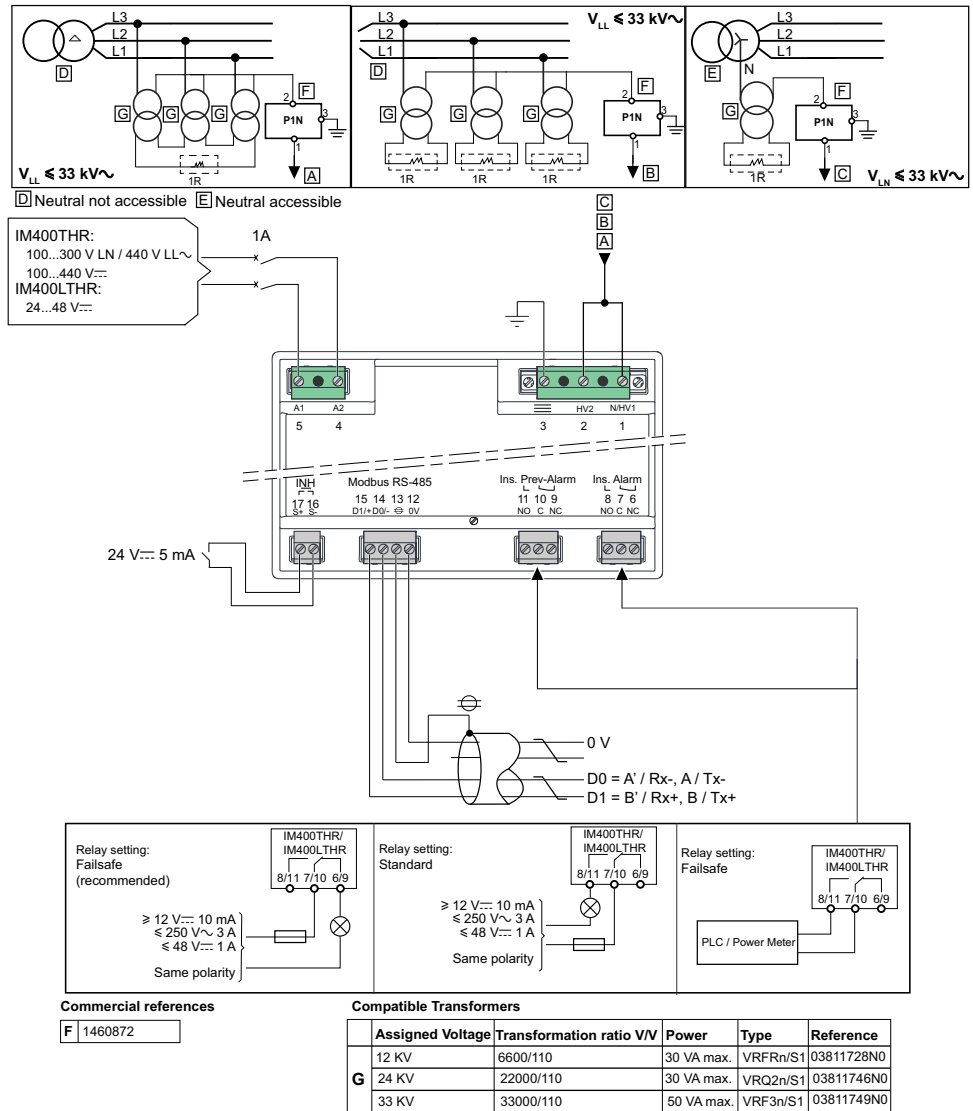

Voltage transformers and P1N ground adaptor are used to connect IM400THR to systems with voltages rated up to 33 kVac. Voltage transformers should be selected appropriately depending on system voltage. Refer to the Schneider Electric medium voltage transformer catalogue.

**NOTE:** Ensure that maximum voltage between pins 2 and 3 of P1N ground adaptor is less than 250 Vac, 400 Vdc.

The Load Resistance '1R' of the Voltage Transformer is calculated based on its characteristics. Refer to the calculation notes on [www.se.com/IM400THR](http://www.se.com/IM400THR) for more information.

## Application

This section explains the following examples of the insulation monitoring applications for an ungrounded power system:

- Standalone IMD
- IMD and the insulation alarm and preventive insulation alarm outputs are sent to a supervisor
- IMD connected to a communication network
- IMD and the insulation alarm and preventive insulation alarm outputs are sent to a supervisor, and locating the insulation fault is done using an IFL<sup>(7)</sup> automatic fault location and an MFLK1 mobile fault locator
- IMD connected to a communication network, and locating the insulation fault is done using an IFL<sup>(8)</sup> insulation fault locator


### Example application: Ungrounded power system insulation monitoring

You can use an IMD to monitor an ungrounded power system.

An ungrounded power system is a system involving the use of a transformer whose neutral is not connected to ground.

The insulation is monitored by an IMD having the following characteristics:

- It is generally powered by the system that it monitors.
- It is connected to neutral (or to one phase) and ground.
- Its only setting is the fault threshold level. The preventive insulation alarm threshold can also be set.
- It has a single relay output to a light or a buzzer.

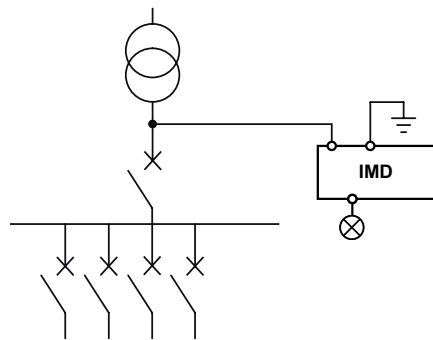

### Example application: Ungrounded power system insulation monitoring and the alarm output is sent to a supervisor


You can use an IMD to monitor an ungrounded power system and send the alarm to a supervisor.

An ungrounded power system is a system involving the use of a transformer whose neutral is not connected to ground.

<sup>(7)</sup> Applicable models are IFL12, IFL12C, IFL12MC, IFL12LMC, and IFL12MCT  
<sup>(8)</sup> Applicable models are IFL12C, IFL12MC, IFL12LMC, and IFL12MCT

The insulation is monitored by an IMD whose insulation alarm and preventive insulation alarm outputs are connected to an available input on a networked device (For example: PLC). This device is connected to a supervisor via a communication network.

**NOTE:** In this scenario, only the insulation alarm and preventive insulation alarm information are available to the supervisor.

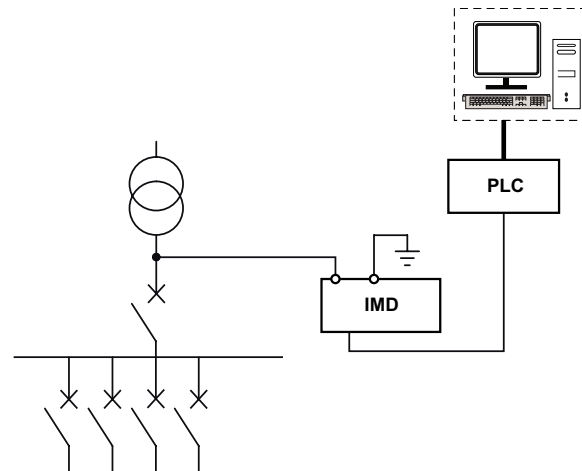


## Example application : Ungrounded power system insulation monitoring connected to a communication network

You can use an IMD to monitor an ungrounded power system and remotely provide display and configuration functionality.

An ungrounded power system is a system involving the use of a transformer whose neutral is not connected to ground.

When the IMD is linked to the supervisor via a Modbus connection, the following actions are supported:

- **Display:** The product status, the status of the insulation alarm (active, inactive, acknowledged), the status of the preventive insulation alarm, details of the last 60 time-tagged events, the values for R, C and Zc in order to create tables or curves for monitoring these values over variable periods
- **Configure the product remotely.** All the settings can be accessed remotely, with the exception of the Modbus parameters.

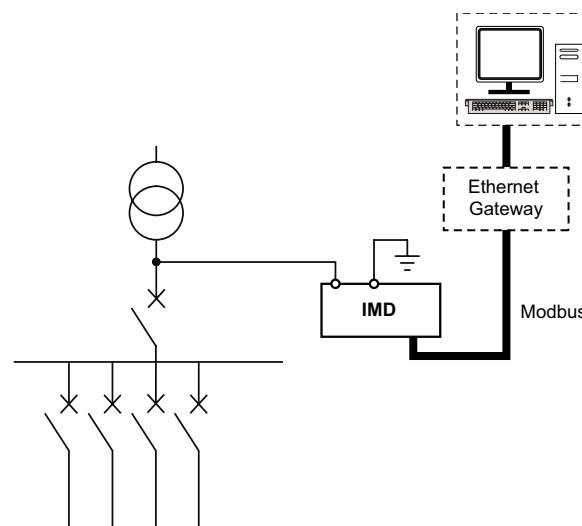

**NOTE:** Using an Ethernet gateway enables you to make use of an existing Ethernet network.

## Example application: Ungrounded power system insulation monitoring and the insulation fault location is sent to a supervisor

You can use an IMD and insulation fault locator to monitor an ungrounded power system and send the alarm to a supervisor.


An ungrounded power system is a system involving the use of a transformer whose neutral is not connected to ground.

The insulation is monitored by an IMD whose insulation alarm and preventive insulation alarm outputs are connected to an available input on a networked device (For example: PLC). This device is connected to a supervisor via a communication network.

Locating the insulation fault is done using IFL devices. The IFL<sup>(9)</sup> output relay is connected to an available input on a networked device.

The MFLK1 mobile insulation fault locator is used to locate accurately the area where the insulation fault has occurred.

**NOTE:** In this scenario, only the insulation alarm, preventive insulation alarm, and faulty channel information are available to the supervisor.

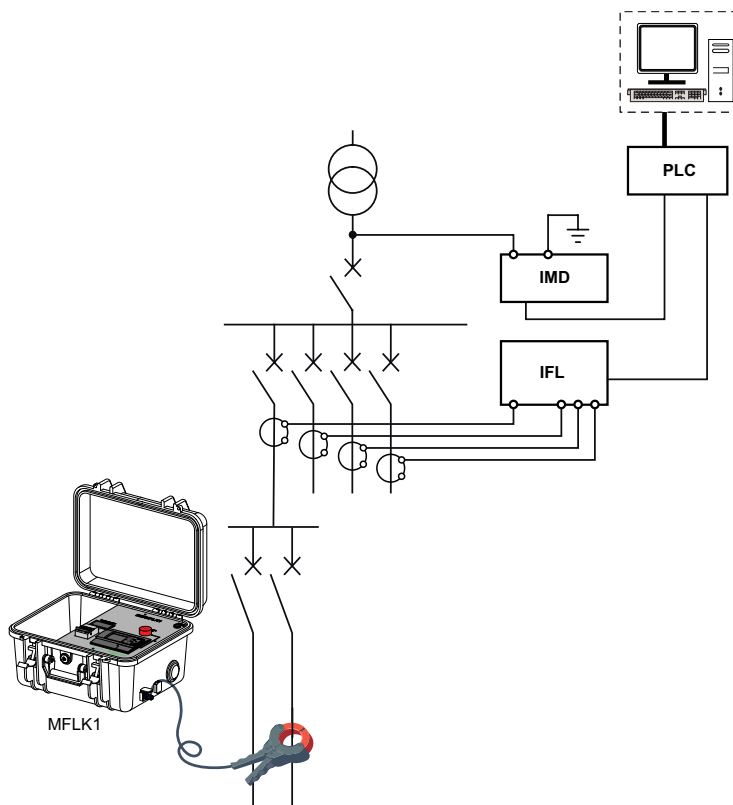

## Example application: Ungrounded power system insulation monitoring and the insulation fault location connected to a communication network

You can use an IMD to monitor an ungrounded power system and remotely provide display and configuration functionality.

An ungrounded power system is a system involving the use of a transformer whose neutral is not connected to ground.


<sup>(9)</sup> Applicable models are IFL12, IFL12C, IFL12MC, IFL12LMC, and IFL12MCT



# Human Machine Interface (HMI)


## Vigilohm IM400, IM400C, and IM400L menu

Using the device display, you can navigate through the different menus to perform basic setup on your device.

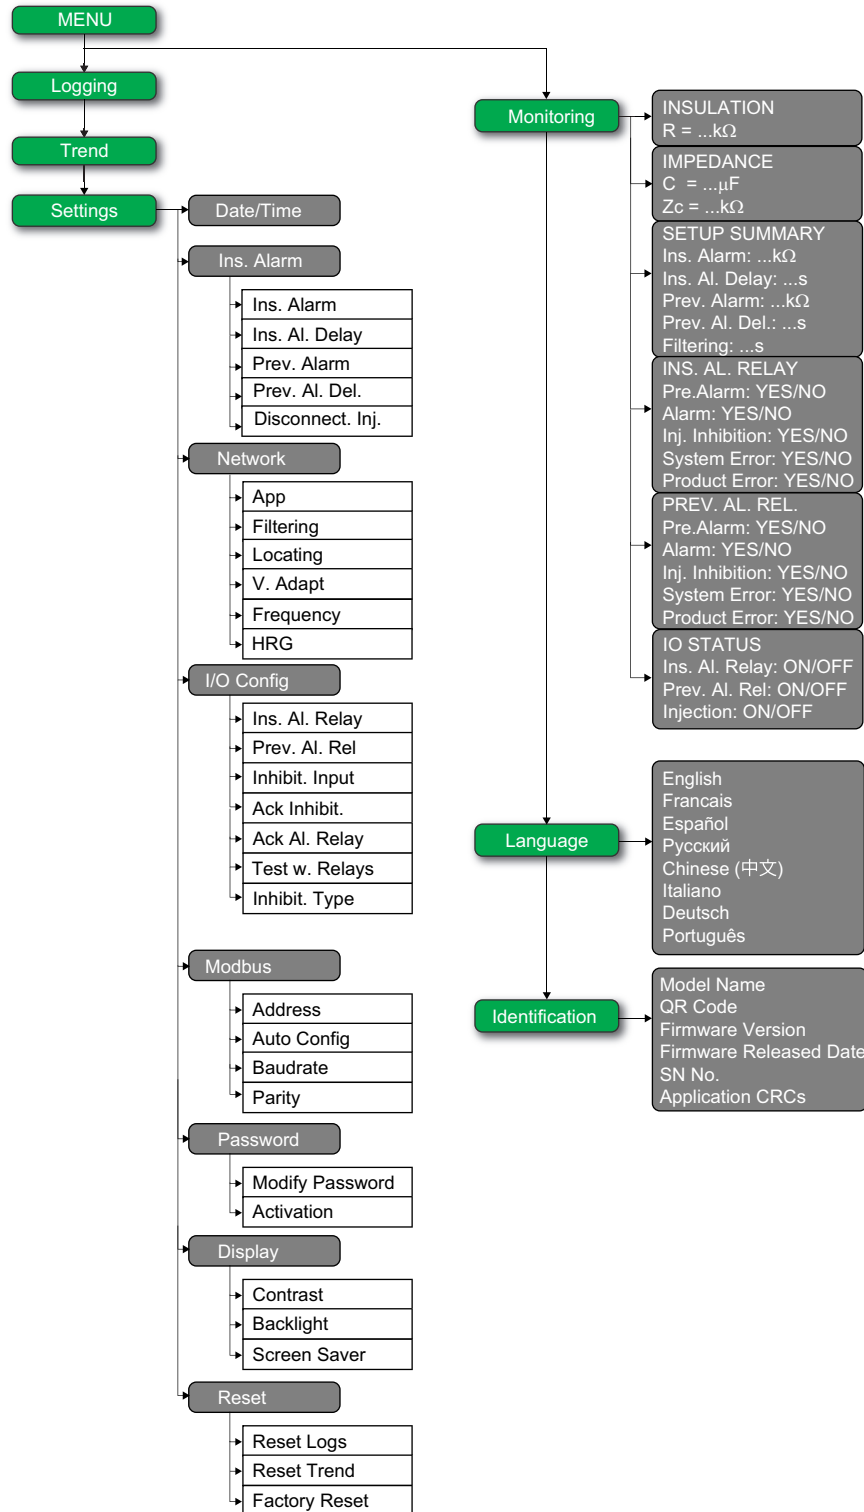


# Vigilohm IM400THR and IM400LTHR menu

Using the device display, you can navigate through the different menus to perform basic setup on your device.

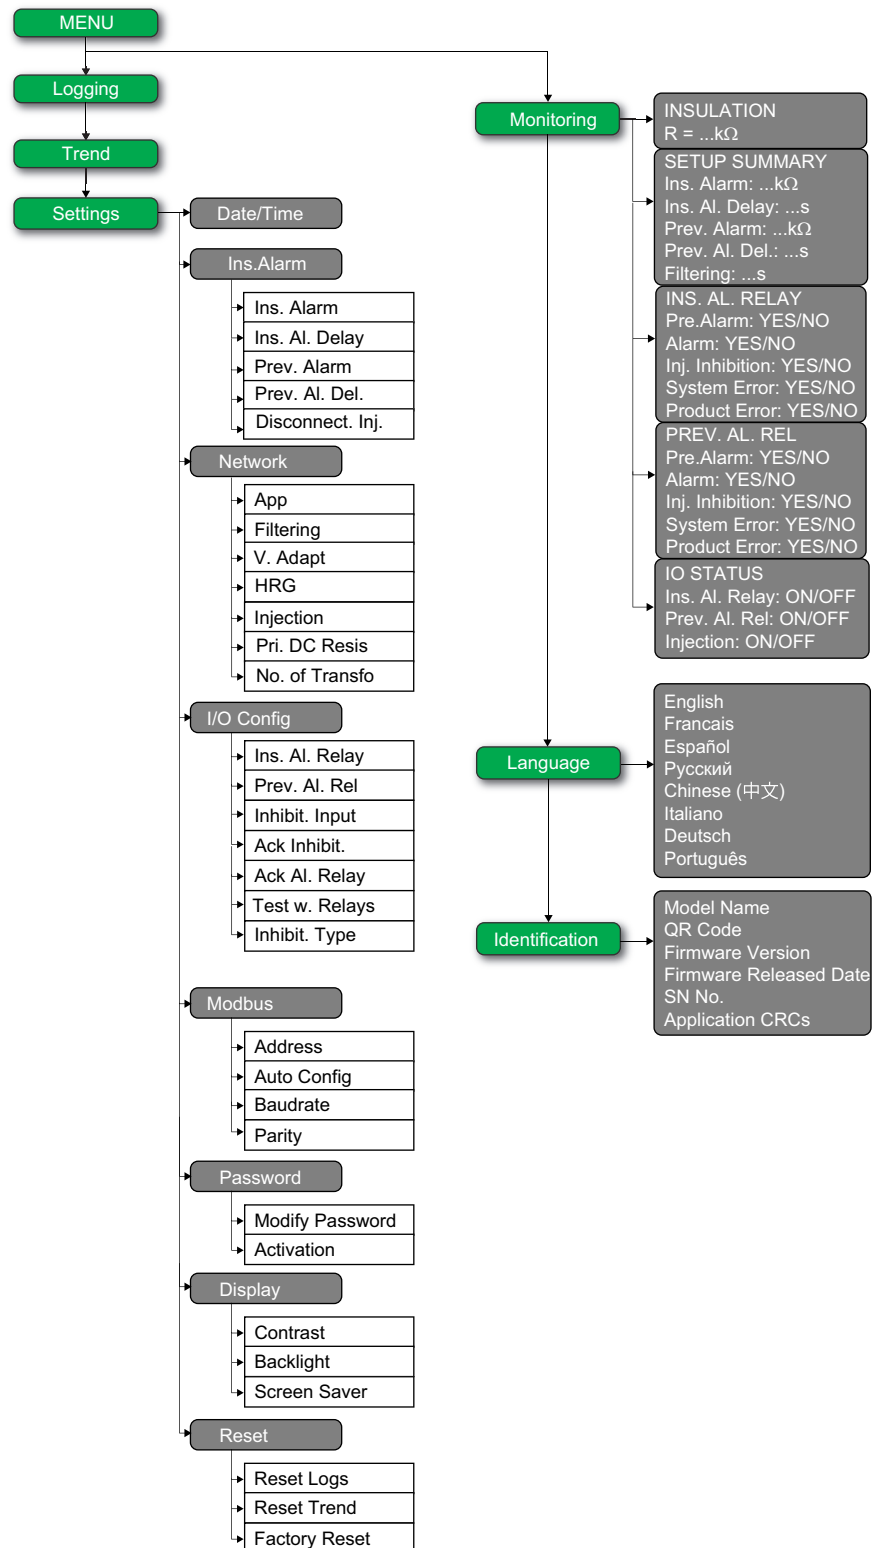

## Display interface


Use the device display to perform various tasks such as configuring the device, displaying status screens, acknowledging alarms, or viewing events.

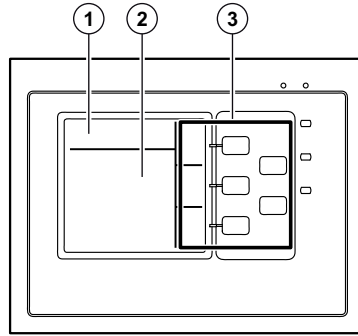

1	Screen identification area containing a menu icon, and the name of the menu or the parameter
2	Information area displaying information specific to the screen (measurement, insulation alarm, settings)
3	Navigation buttons

## Navigation buttons and icons



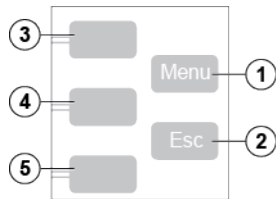






Use the display buttons to navigate through menus and perform actions.



Legend	Button	Icon	Description
1	<b>Menu</b>	–	Display the level 1 menu ( <b>Menu</b> ).
2	<b>Esc</b>	–	Go back to the previous level.
3	Contextual menu button 3		Scroll up the display or move to the previous item in a list.
			Access the date and time setting. If the clock icon flashes, it means that the Date/Time parameter needs to be set.
			Increase a numerical value.
4	Contextual menu button 2		Scroll down the display or move to the next item in a list.
			Move one digit to the left within a numerical value. If the digit on the far left is already selected, pressing the button loops you back to the digit on the right.
5	Contextual menu button 1		Validate the selected item. Acknowledge the transient alarm.
			Run the auto-test manually.
			Go to a menu or submenu, or edit a parameter.
			Acknowledge the insulation alarm.

## Information icons

Icons in the information area of the LCD display provide information such as what menu is selected and the insulation alarm status.


Icon	Description
	Main menu
	<ul style="list-style-type: none"> <li>System resistance (in the absence of an insulation fault)</li> <li>Measurement parameters menu</li> <li>Monitoring menu</li> <li>System impedance</li> <li>System resistance as primary record in Logging page</li> <li>Setup Summary</li> </ul>
	Fault log menu
	Trend menu
	Setting parameters menu and submenu
	Display language selection menu
	Product identification
	<ul style="list-style-type: none"> <li>Indication of an insulation alarm</li> <li>Indication of a preventive insulation alarm</li> <li>Indication of a transient alarm</li> <li>Indication of product status</li> </ul>
	Scanning the device's QR code opens the product website.

## Status screens

### Introduction

The default screen shows the insulation resistance value of the system. It is automatically replaced by a screen that notifies an insulation alarm. The screen backlight flashes to indicate an insulation alarm.


Each insulation measurement screen displays a status bar at the bottom that provides additional information.

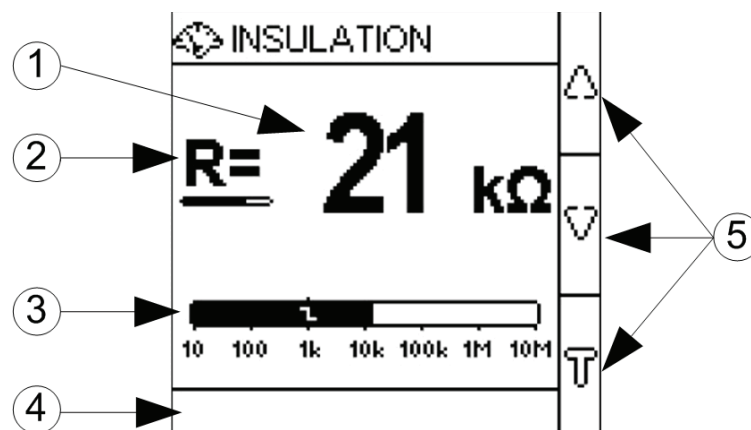

1	Insulation value
2	Progress bar for the refresh time <b>NOTE:</b> The progress bar is not displayed if the <b>Filtering</b> parameter is set to <b>4s</b> <sup>(11)</sup> / <b>2s</b> <sup>(12)</sup> .
3	Bargraph indicating the insulation level on a logarithmic scale. The symbol indicates the insulation alarm threshold value.
4	Status bar displaying additional information related to the current insulation alarm state. Different types of status bar are as follows: <ul style="list-style-type: none"> <li>Insulation alarm active time delay: an insulation fault has been measured and the insulation alarm time delay is active. This bar shows a progress bar for the time delay.</li> <li>Insulation alarm pickup date and time</li> <li>Insulation alarm dropout date and time</li> <li>Insulation alarm relay acknowledgment</li> </ul> The status bars can also indicate: <ul style="list-style-type: none"> <li>a cyclic auto-test is running in the background</li> <li>a first measurement is in progress (at startup or after reactivating the injection function)</li> </ul>
5	Contextual buttons for navigating the insulation screens or for launching a manual auto-test.

## Insulation resistance measurement (R)


The device displays the insulation resistance measurement for the system by default.

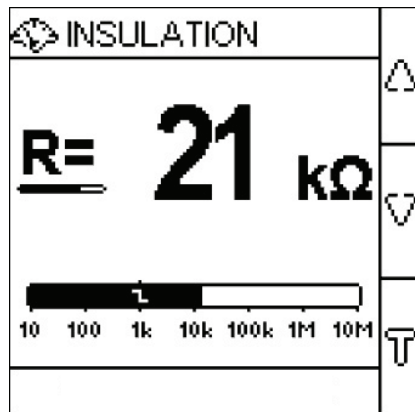

## Insulation alarm detected: insulation fault


The device displays the insulation fault screen when the insulation value falls below the insulation alarm threshold.

(11) Applicable for IM400, IM400C, and IM400L.  
(12) Applicable for IM400THR and IM400LTHR.

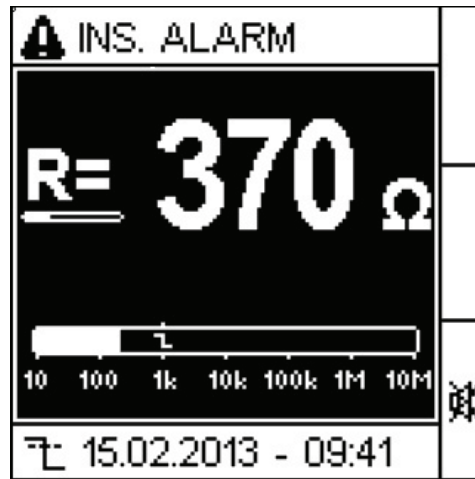


The screen flashes whenever an insulation alarm is detected.

There are two possible scenarios:

- Acknowledge the insulation alarm by pressing the  button.
- If you do not acknowledge the insulation alarm and the system insulation returns to a value above the insulation alarm threshold, the screen displays transient fault.


## Insulation alarm acknowledged

This screen is displayed when you have acknowledged the insulation alarm. The status bar shows the time when the insulation fault is acknowledged.

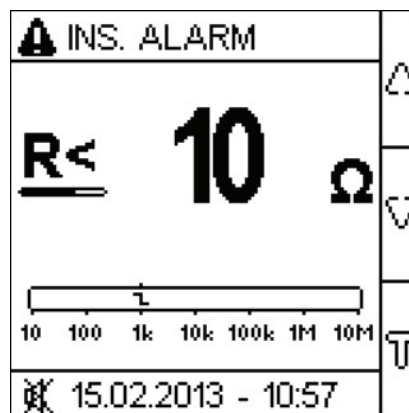


## Preventive alarm activated


This screen is displayed when the preventive alarm has been activated.

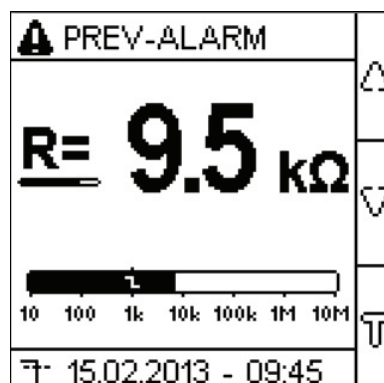


## Transient fault

This screen is displayed when a transient fault has occurred.

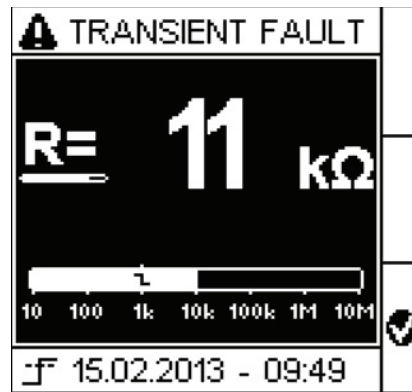

Acknowledge the transient fault by pressing the  button.

This screen is displayed when a transient fault has occurred.

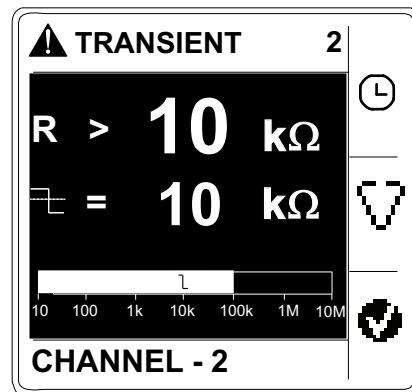

Acknowledge the transient fault by pressing the button.

## Special status screens

### Introduction


The special status screens are displayed depending on events that occur during the product life. The screens depend on the event type but always trigger the product status LED to red and the insulation alarm relay is active. If the preventive insulation alarm relay is configured in mirror mode, it is also triggered and no longer mirrors the insulation alarm relay.

### Over-limit capacitance detection


**NOTE:** This screen is applicable for IM400, IM400C, and IM400L.

The over-limit capacitance detection state is triggered when the capacitance of the monitored system becomes too high. For details on the device specification, refer to *Specifications*, page 108. In case of detected over-limit capacitance, the device can not monitor the system.


#### Power Circuit or Control Circuit

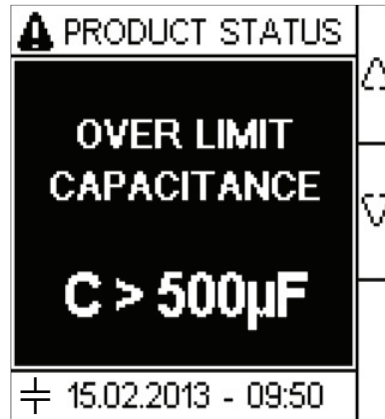

Photovoltaic Circuit (IM400-1700C)

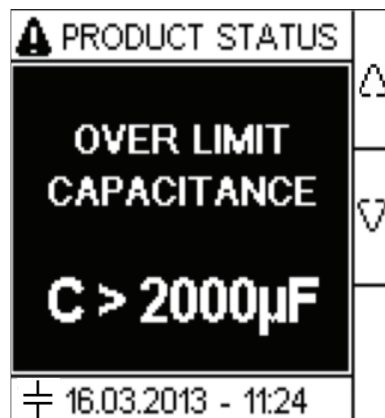


Photovoltaic Circuit (IM400VA2)

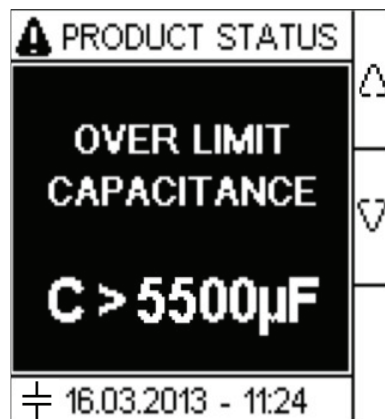


## Overvoltage

The overvoltage state is triggered when the voltage of the monitored system becomes too high. For details on the device specification, refer to [Specifications](#), page 108. In case of overvoltage, the device can not monitor the system and the device automatically disconnects the power system. Disconnect the auxiliary power supply of device and reconnect.

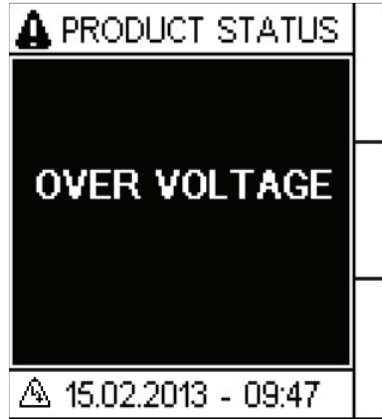

## Inoperative product


The inoperative product state is triggered when the device is inoperative.

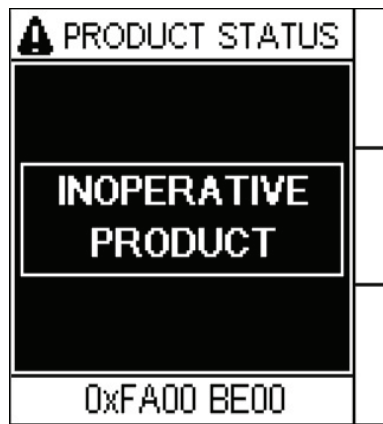

## Disconnected Injection Detection

The state of disconnected injection is triggered when the injection circuit of the device is interrupted. In case of disconnected injection detected, the device is no longer able to monitor the ungrounded system.

If the **Disconnect Inj.** parameter in the **Ins. Alarm** menu is set to **ON**, the following screen displays:

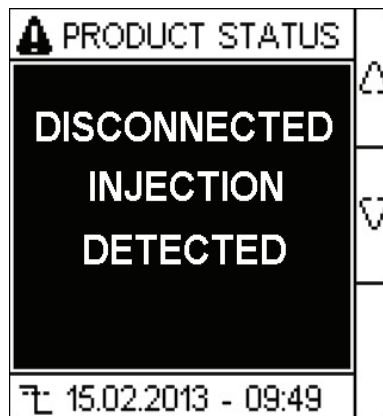


If the **Disconnect Inj.** parameter is set to **OFF**, the device displays **R > 10 MΩ**.

## HV1 and HV2 open detection

Applicable for IM400THR and IM400LTHR.

The HV1 and HV2 open detection is triggered when the terminals HV1 and HV2 are not shorted and the **V. Adapt** parameter in the **Network** menu is set to **P1N** (See Wiring diagram, page 27).

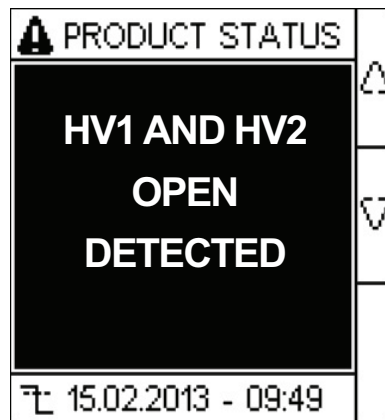

When the terminals HV1 and HV2 are not shorted and the **V. Adapt** parameter is set to **None**, the device displays the resistance of the ungrounded system.

## Parameter modification using the display

To modify the values, you must be thoroughly familiar with the interface menu structure and general navigation principles.

For more information about how the menus are structured, see Vigilohm IM400, IM400C, and IM400L menu, page 34 and Vigilohm IM400THR and IM400LTHR menu, page 35


To modify the value of a parameter, follow either of these two methods:

- Select an item (value plus unit) in a list.
- Modify a numerical value, digit by digit.

For the following parameters, the numerical value can be modified:


- Date
- Time
- Password
- Modbus address



## Selecting a value in a list

To select a value in a list, use the up and down menu buttons to scroll through the parameter values until you reach the desired value, then press  to confirm the new parameter value.

## Modifying a numerical value

The numerical value of a parameter is made up of digits and the one on the far right is selected by default. To modify a numerical value, use the menu buttons as follows:

-  to modify the selected digit.

-  to select the digit to the left of the one that is currently selected, or to loop back to the digit on the right.
-  to confirm the new parameter value.

## Saving a parameter

After you have confirmed the modified parameter, one of following two actions occur:

- If the parameter has been saved correctly, the screen displays **Saved** and then returns to the previous display.
- If the parameter has not been saved correctly, the screen displays **Error** and the editing screen remains active. A value is deemed to be out of range when it is classed as forbidden or when there are several interdependent parameters.

## Canceling an entry

To cancel the current parameter entry, press the **Esc** button. The previous screen is displayed.

# Function

## General configuration

### Date/Time

The date/time must be set:

- On first power up.
- Whenever the power supply is interrupted.
- When switching between summer and winter time and vice versa.

If the auxiliary power supply is interrupted, the device retains the date and time setting from immediately before the interruption. The device uses the date and time parameter to time-tag the system insulation faults recorded. The date is displayed in the format: dd/mm/yyyy. The time is displayed using the 24-hour clock in the format: hh/mm.

When the device is powered up, the clock icon flashes on the system monitoring screens to indicate that the clock needs to be set. To set the date and time, see Parameter modification using the display, page 43.

### Password

You can set a password to limit access to configuration of the device parameters to authorized personnel only.

When a password is set, the information displayed on the device can be viewed but the parameter values cannot be edited. By default, the password protection is not activated. The default password is **0000**. You can set a 4-digit password from **0000** to **9999**.

To activate the password, navigate to **Menu > Settings > Password > Activation** and select **ON**.

To modify the password, navigate to **Menu > Settings > Password > Modify Password** and edit the new password. To modify the parameter value, see Parameter modification using the display, page 43.

### Language

The device supports 8 languages for HMI display.

The list of languages supported by the device HMI are as follows:

- English (Default)
- French
- Spanish
- Russian
- Chinese
- Italian
- German
- Portuguese

To set the language, navigate to **Menu > Language**. To modify the parameter value, see Parameter modification using the display, page 43.

## Identification

You can view the information about the device on the **Identification** screen.

The **Identification** screen displays the following information:

- Model name
- Firmware version
- Firmware release date
- CRC App

**NOTE:** The App and Boot CRC values are not displayed in firmware versions 3.6.0 and higher

- Serial number
- QR code

**NOTE:** Scan the QR code to view the device webpage.

- IM400
- IM400C
- IM400L
- IM400THR
- IM400LTHR

To view the **Identification** screen, navigate to **Menu > Identification**.

## Display

You can set the contrast and backlight and enable screen saver for the display.

You can access the device display parameters by selecting **Menu > Settings > Display**.

The display parameters and its allowed and default values are as follows:

Parameter	Default value	Allowed values
Contrast	50 %	10 % to 100 %
Backlight	100 %	10 % to 100 %
Screen Saver	OFF	<ul style="list-style-type: none"> <li>• <b>ON</b> If you select this value, the display turns OFF after 5 minutes of inactivity. If you press any button or on any fault, the display turns ON.</li> <li>• <b>OFF</b></li> </ul>

To modify the parameter value, see **Parameter modification using the display**, page 43.

## Network configuration

You can configure the electrical network parameters to suit the electrical applications you want to monitor.

You can access the device network parameters by selecting **Menu > Settings > Network**.

The network parameters for IM400, IM400C, and IM400L are:

- **App**
- **Filtering**
- **Locating**

- **V.Adapt**
- **Frequency**
- **HRG**

The network parameters for IM400THR and IM400LTHR are:

- **App**
- **Filtering**
- **V.Adapt**
- **HRG**
- **Injection**
- **Pre. DC Resis.**
- **No. of Transfo.**

To modify the parameter value, see Parameter modification using the display, page 43.

## Application (App)

The device is designed and tested to be compliant with different applications, which can be monitored.

- Power circuits: industrial or marine applications that contain power loads and power electronics such as speed drives, inverters, or rectifiers.
- Control circuits: auxiliary control circuits used to drive power systems. These circuits contain sensitive loads such as PLCs, IOs, or sensors.
- Adaptive system: Specific to Marine, Railways and large Photovoltaic systems. This application is characterized by high DC rated voltage (up to 1500 V) and high system leakage capacitance (up to 5500 µF with IM400VA2 voltage adaptor, and up to 2000 µF with HV1700 voltage adaptor)
- Medium voltage system: Applications up to 33 kV with compatible Schneider Electric voltage transformer.

To optimize the measurement performance of the device according to the application, you can set the application parameter depending on the type of application on which the device is installed:

Parameter Value	Applicable Models	Application
<b>Power C.</b> (Default)	<ul style="list-style-type: none"> <li>• IM400</li> <li>• IM400L</li> <li>• IM400C</li> </ul>	Power circuits
<b>Control C.</b>	<ul style="list-style-type: none"> <li>• IM400</li> <li>• IM400L</li> <li>• IM400C</li> </ul>	Control circuits
<b>Adaptive</b> <sup>(13)</sup>	IM400C	Harsh environment
<b>THR</b> <sup>(14)</sup>	<ul style="list-style-type: none"> <li>• IM400THR</li> <li>• IM400LTHR</li> </ul>	Medium voltage system

**NOTE:** For ,IM400THR and IM400LTHR, the **App** value is fixed to **THR**.

The following measurement parameters accessible in the **Network** menu are automatically preset depending on the **App** value:

- **Filtering**
- **Locating**
- **V. Adapt**
- **Frequency**

<sup>(13)</sup> Applicable for IM400C

<sup>(14)</sup> Applicable for IM400THR and IM400LTHR

• **Injection** <sup>(15)</sup>

There is no need to configure these parameters in typical conditions. The following table list the preset values of the measurement parameters according to the **App** value:

Preset Values	App value			
	Power C.	Control C.	Adaptive	THR
Filtering	40s	40s	40s	20s
Locating	OFF	OFF	OFF	-
V. Adapt	None	None	None	None
Frequency	50 Hz	DC	DC	-
Injection <sup>(16)</sup>	-	-	-	60V

## Filtering

You can set the filtering parameter as per the monitored application.

This parameter is used to smooth out values of insulation measures that always depend on equipment operating on the application. The criteria are:

- Number of loads
- Type of loads
- Size of the system (effects capacitance)
- Load switching

The device is designed to provide accurate insulation resistance and capacitance measurement on highly disturbed systems with power electronic devices. This feature improves the measurement stability to avoid display fluctuation, undesired transient insulation alarm, and preventive insulation alarm. The response time associated with this filtering function does not affect the ungrounded power system. Three values are available for this parameter:

The following table is applicable for IM400, IM400C, and IM400L

Value	Response time required to detect an insulation fault (for C = 1 µF)	Advised Usage	Measurement refresh time
4s <sup>(17)</sup>	4 seconds	Use in maintenance mode.  Diagnose fast variation of the insulation resistance and leakage capacitance.  Use in the following cases: <ul style="list-style-type: none"> <li>• Detecting short time transient insulation faults.</li> <li>• When manually locating insulation faults by opening circuit breakers.</li> </ul>	0.8 s
40s (Default)	40 seconds	Use in operation mode.  To monitor insulation of typical installations.	8 s
400s	400 seconds	Use in operation mode.  To monitor insulation of highly disturbed installations and/or installations with high leakage capacitance.	80 s

<sup>(15)</sup> Applicable for IM400THR and IM400LTHR

<sup>(16)</sup> Applicable for IM400THR and IM400LTHR

<sup>(17)</sup> Not available in Adaptive application

**NOTE:**

When you use **IM400–1700C** voltage adaptor in Photovoltaic applications, the **Filtering** parameter can be set to **40s** or **400s**.

When you use **IM400VA2** voltage adaptor in Photovoltaic applications, the **Filtering** parameter can be set only to **400s**.

The following table is applicable for IM400THR and IM400LTHR:

Value	Response time required to detect an insulation fault (for C = 1 µF)	Advised Usage	Measurement refresh time
<b>2s</b>	2 seconds	Use in maintenance mode.  Diagnose fast variation of the insulation resistance and leakage capacitance.  Use in the following cases: <ul style="list-style-type: none"> <li>• Detecting short time transient insulation faults.</li> <li>• When manually locating insulation faults by opening circuit breakers.</li> </ul>	0.4 s
<b>20s</b> (Default)	20 seconds	Use in operation mode.  To monitor insulation of typical installations.	4 s
<b>200s</b>	200 seconds	Use in operation mode.  To monitor insulation of highly disturbed installations and/or installations with high leakage capacitance.	40 s

## Locating

Applicable for IM400, IM400C<sup>(18)</sup>, and IM400L.

You can use the device with automatic insulation fault locator or manual insulation fault locator to locate the insulation fault.

You can use the following automatic insulation fault locators:

- IFL12: Twelve-channel insulation fault locator with one LED indicator per channel and one output relay (commercial reference: IMDIFL12)
- IFL12C: Twelve-channel insulation fault locator with LCD display ( indication for 12 channels) and one output relay (commercial reference: IMDIFL12C)
- IFL12MC: Twelve-channel insulation fault locator with LCD display (indication for 12 channels with R, C, and Zc display) and one output relay (commercial reference: IMDIFL12MC)
- IFL12LMC: Twelve-channel insulation fault locator with LCD display (indication for 12 channels with R, C, and Zc display), low voltage auxiliary supply, and one output relay (commercial reference: IMDIFL12MC)
- IFL12MCT: Twelve-channel insulation fault locator with LCD display (indication for 12 channels with R, C, and Zc display) and one output relay with conformal coating (commercial reference: IMDIFL12MCT)

<sup>(18)</sup> When you use IM400C in Adaptive mode with fault location, use IFL12MC or IFL12MCT.

**NOTE:** You are strongly advised to use the following devices:

- IFL12
- IFL12C
- IFL12MC
- IFL12LMC
- IFL12MCT

You can use the MFLK1 manual insulation fault locators.

Two values are available for this parameter:

Value	Advised Usage
OFF	The device does not inject a fault locating current.
IFL	The device injects a fault locating current when an insulation alarm is detected and compatible with IFL12, IFL12MC, IFL12LMC, and IFL12MCT devices.

**NOTE:** Insulation fault location is not compatible with IM400-1700C, IM4000VA2, and P1N voltage/ground adaptors.

## Voltage adaptor (V. Adapt)

You can use voltage adapter to monitor ungrounded power system with a rated voltage higher than 480 V AC/DC. IM400-1700C or IM4000VA2 voltage adaptor can also be used in ungrounded power systems below 480 V AC/DC to increase the internal impedance of the device. The IM400THR and IM400LTHR can be used with P1N ground adaptor and compatible Schneider Electric voltage transformer to monitor power systems with a rated voltage up to 33 kV.

The following three values are applicable for IM400 and IM400L

Value	Advised Usage
None (Default)	Use when the monitored ungrounded power system rated voltage is $\leq 480$ V AC/DC.
PHT1000	Use when the monitored ungrounded power system rated voltage is $> 480$ V AC/DC and $\leq 1500$ V AC/DC. <b>NOTE:</b> Locating an insulation fault can be done using the device with PHT1000.
HV1700	Use when the monitored ungrounded power system rated voltage is $> 480$ V AC/DC and $\leq 1500$ V AC/DC. <b>NOTE:</b> Locating an insulation fault can not be done using the device with IM400-1700C. This value cannot be set up when the <b>Locating</b> parameter is set to <b>ON</b> .

The following four values are applicable for IM400C:

Value	Advised Usage
None (Default)	Use when the monitored ungrounded power system rated voltage is $\leq 480$ V AC/DC.
PHT1000	Use when the monitored ungrounded power system rated voltage is $> 480$ V AC/DC and $\leq 1500$ V AC/DC. <b>NOTE:</b> Locating an insulation fault can be done using the device with PHT1000.
HV1700C	Use when the monitored ungrounded power system rated voltage is $> 480$ V AC/DC and $\leq 1500$ V AC/DC. <b>NOTE:</b> Locating an insulation fault can not be done using the device with IM400-1700C. This value cannot be set up when the <b>Locating</b> parameter is set to <b>ON</b> .
VA2	Use when the monitored ungrounded power system rated voltage is $> 480$ V AC/DC and $\leq 1500$ V AC/DC. <b>NOTE:</b> Locating an insulation fault can not be done using the device with IM400VA2. This value cannot be set up when the <b>Locating</b> parameter is set to <b>ON</b> .

The following two values are applicable for IM400THR and IM400LTHR:

Value	Advised Usage
<b>None</b> (Default)	Use when the monitored ungrounded power system rated voltage is $\leq 480$ V AC/DC.
<b>P1N</b>	Use when the monitored ungrounded power system rated voltage is up to 33 kV. <b>NOTE:</b> Locating an insulation fault can not be done using the device with P1N.

See *Accessories*, page 20 for more information on voltage adaptors.

## Frequency

Applicable for IM400, IM400C, and IM400L.

You can set the rated frequency of the monitored application.

Four values are available for this parameter:

- **50 Hz** (by default)
- **60 Hz**
- **400 Hz**
- **DC**

## Injection

Applicable for IM400THR and IM400LTHR.

You can set the level of measurement voltage and measurement current that are injected between the monitored power system and ground.

Four setting are available for this parameter:

Value	Measurement current value
<b>20V</b> <sup>(19)</sup>	< 0.469 mA DC
<b>40V</b>	< 0.94 mA DC
<b>60V</b> (Default)	< 1.56 mA DC
<b>80V</b>	< 2.48 mA DC

## High Resistance Grounding (HRG)

You can use the device to monitor power systems with a grounding resistance inserted between the neutral and the earth.

The device compensates the measured insulation resistance with the value of the neutral grounding resistance. The device offset the value of the neutral grounding resistance to report the actual insulation resistance. Further, the actual insulation resistance ( derived after compensating the neutral grounding resistance) is compared against the insulation alarm threshold and the preventive alarm threshold to trigger the insulation and preventive insulation alarm relays.

This compensation is applicable only if the neutral is connected to ground through a resistance. This feature is not compatible with RLC (non -linear) grounding circuits.

Two setting are available for this parameter:

<sup>(19)</sup> Recommended injection voltage for network resistances bit wine 10 k $\Omega$  to 500 k $\Omega$ .

Value	Description
<b>OFF</b> (Default)	The device does not compensate the reported insulation resistance with the value of the neutral grounding resistance.
<b>0.1...500 kΩ</b>	The device compensates the measured insulation resistance with the value of the neutral grounding resistance.

## Primary DC Resistance (Pri. DC Resis)

This parameter is applicable for IM400THR and IM400LTHR and when **V.Adapt** parameter value is set to **P1N**.

This is the value of resistance of the compatible Schneider Electric voltage transformer primary winding.

You can select any value from **0** to **50** kΩ.

If you have connected more than one transformer, select the value of resistance of single transformer. The device automatically calculates the total resistance depending on the value of the number of transformer parameter.

## Number of Transformer (No. of Transfo)

This parameter is applicable for IM400THR and IM400LTHR and when **V.Adapt** parameter value is set to **P1N**.

This is the value of number of transformer connected.

Three settings are available for the **No. of Transfo** parameter:

- **0**
- **1**
- **3**

## Example to set Primary DC Resistance and Number of Transformer

If	Then
You have connected 3 transformers and DC primary resistance of each transformer is 15 kΩ.	Select <b>15 kΩ</b> value for <b>Pri.DC Resis</b> parameter. Set <b>3</b> value for <b>No. of Transfo</b> parameter.
You have connected 1 transformer and DC primary resistance of transformer is 15 kΩ.	Select <b>15 kΩ</b> value for <b>Pri.Dc Resis</b> parameter. Set <b>1</b> value for <b>No. of Transfo</b> parameter.

## Alarm configuration

You can configure the insulation alarm threshold and delay, preventive insulation alarm threshold and delay, and injection detection to suit to the electrical applications you want to monitor.

You can access the device alarm parameters by selecting **Menu > Settings > Ins. Alarm**.

The alarm parameters are:

- **Ins. Alarm**
- **Ins. Al. Delay**
- **Prev. Alarm**
- **Prev. Al. Del.**

- **Disconnect. Inj.**

To modify the parameter value, see Parameter modification using the display, page 43.

## Insulation alarm (Ins. Alarm) and preventive insulation alarm (Prev. Alarm) thresholds

You can set the insulation alarm and preventive insulation alarm threshold values as per the level of insulation of the application you monitor.

Parameter	Allowed Values	Default Value
<b>Ins. Alarm</b> (Insulation alarm threshold)	<b>0.04...500 kΩ</b>	<b>1 kΩ</b>
<b>Prev. Alarm</b> (Preventive insulation alarm threshold)	<ul style="list-style-type: none"> <li>• <b>1 kΩ...1 MΩ</b></li> <li>• <b>OFF</b></li> </ul>	<b>OFF</b>

When the device is powered up, it retrieves the last preventive insulation alarm and insulation alarm threshold values recorded.

**NOTE:** The preventive insulation alarm threshold must always be higher than the insulation alarm threshold.

An insulation alarm is cleared when the insulation level reaches 20% above the threshold.

## Insulation alarm and preventive insulation alarm threshold hysteresis


A hysteresis is applied to limit the error in the insulation alarm due to fluctuations in the measurement when approaching threshold value.

A hysteresis principle is applied:


- When the insulation value measured decreases and falls below the setting threshold, the insulation alarm or preventive insulation alarm is triggered or the countdown is started if an insulation alarm time delay has been set.
- When the insulation value measured increases and exceeds 1.2 times the set threshold (i.e. the setting threshold +20%), the insulation alarm or the preventive insulation alarm is deactivated.

The following diagrams show the behaviors:

- Without hysteresis:

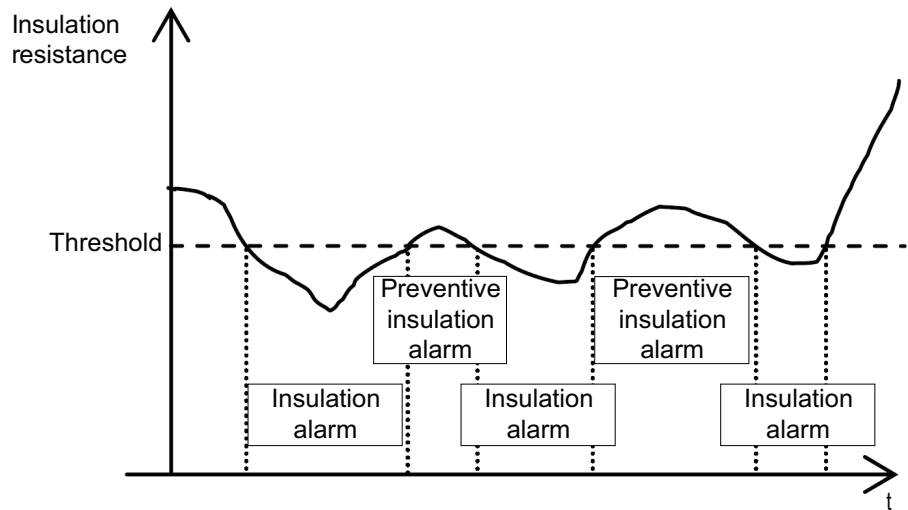

- With hysteresis:

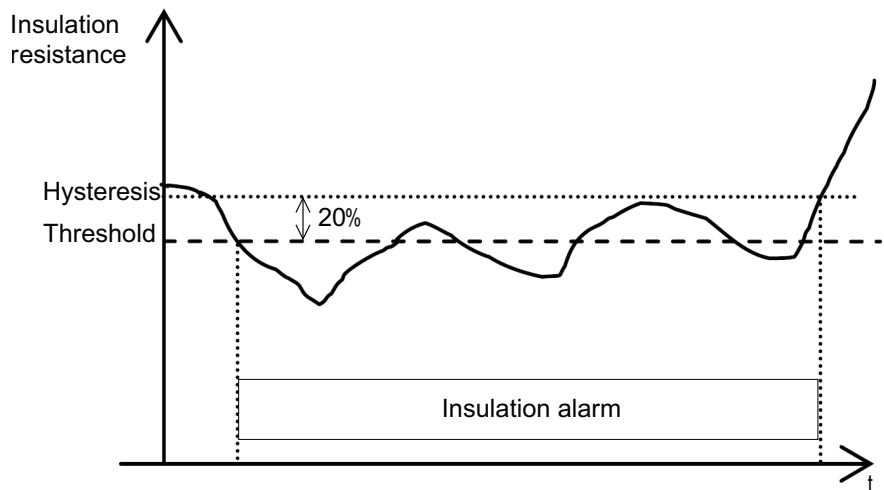

## Insulation alarm time delay (Ins. Al. Delay) and preventive insulation alarm time delay (Prev. Al. Del.)

In some applications you might want to delay the triggering of an alarm while certain machines are starting up, otherwise erroneous alarms could be triggered. You can set the threshold delay to filter these erroneous alarms.

The threshold delay is time filter. This delay can be used in harsh electrical systems to avoid false insulation alarms and preventive insulation alarms. The device does not report insulation fault that do not remain for a duration longer than the delay set up.

Parameter	Allowed Values	Default Value
Ins. Al. Delay (Insulation alarm time delay)	0 s...120 mn	0 s
Prev. Al. Del. (Preventive insulation alarm time delay)	0 s...120 mn	0 s

**NOTE:** The preventive insulation alarm time delay setup is not displayed when the preventive insulation alarm threshold value is set to **OFF**.

## Disconnected injection (Disconnect. Inj.)

You can detect the high insulation resistance in the system and can detect the disconnections.

The device detects a high insulation resistance in the system and can detect the following disconnections:

- Injection wire
- Ground wire
- Between the device and IM400-1700C voltage adaptor
- Between the device and PHT1000 voltage adaptor
- Between the device and IM400VA2 voltage adaptor

The allowed values for this parameter are **OFF** and **ON**. The default value is **OFF**.

### NOTE:

On small networks without loads and transformer, where the insulation level is high, or during commissioning without loads and transformer, it is advised to set the parameter to **OFF**.

Detection of disconnection between the device and IM400-1700C, PHT1000, or IM400VA2 voltage adaptors is always active and does not depend on the value of the parameter.

If the injection disconnects, the device displays **DISCONNECTED INJECTION DETECTED** and product status LED turns ON. See [Special status screens](#), page 40 for device display.

## I/O configuration

You can configure the relay parameters to suit the type of relay output information and configure the injection.

You can access the device I/O parameters by selecting **Menu > Settings > I/O Config**.

The I/O parameters are:

- **Ins. Al. Relay**
- **Prev. Al. Rel**
- **Inhibit. Input**
- **Ack Inhibit**
- **Ack. Al. Relay**
- **Test w.Relays**
- **Inhibition Type**

To modify the parameter value, see [Parameter modification using the display](#), page 43.

## Insulation alarm relay (Ins. Al. Relay)

You can set the insulation alarm relay mode depending on the status of insulation.

The allowed values for this parameter are **FS** and **Std.**. The default value is **FS**.

**NOTE:** The preventive insulation alarm relay activation and deactivation and insulation alarm relay activation and deactivation are based on the following default states as per the configured mode. The device allows assigning various state to either of the relays (Preventive insulation alarm relay and Insulation alarm relay). See [Relay assignment](#), page 60.

When the insulation alarm relay is configured in failsafe (**FS**) mode:

- The insulation alarm relay is activated, that is, energized, in the following case:
  - No insulation fault is detected.
  - Transient fault is detected.
  - Insulation fault is detected and acknowledged (if **Menu > Settings > I/O Config > Ack. Al. Relay** is set to **ON**). (See Insulation alarm relay acknowledgement (**Ack Al. Relay**), page 68)
- The insulation alarm relay is deactivated, that is, de-energized, in the following cases:
  - First measurement
  - Insulation fault is detected.
  - Insulation fault is detected and acknowledged (if **Menu > Settings > I/O Config > Ack. Al. Relay** is set to **OFF**). (See Insulation alarm relay acknowledgement (**Ack Al. Relay**), page 68)
  - When you trigger an auto-test with relays, the relay toggles for 3 seconds. (See Test with relays (**Test w. Relays**), page 70)
  - Injection is inhibited (if **Menu > Settings > I/O Config > Ack Inhibit** is set to **ON**). (See Acknowledge inhibition (**Ack Inhibit.**), page 68)
  - The auxiliary power supply is lost.
  - Product error
    - NOTE:** Auto-test failure state is identified as product error.
  - System error
    - NOTE:**
    - The following states are identified as system error:
      - Disconnected injection
      - Over voltage
      - Over capacitance

When the insulation alarm relay is configured in Standard (**Std**) mode:

- The insulation alarm relay is activated, that is, energized, in the following case:
  - Insulation fault is detected.
  - Insulation fault is detected and acknowledged (if **Menu > Settings > I/O Config > Ack. Al. Relay** is set to **OFF**). (See Insulation alarm relay acknowledgement (**Ack Al. Relay**), page 68)
  - When you trigger an auto-test with relays, the relay toggles for 3 seconds. (See Test with relays (**Test w. Relays**), page 70)
  - Injection is inhibited (if **Menu > Settings > I/O Config > Ack Inhibit** is set to **ON**) (See Acknowledge inhibition (**Ack Inhibit.**), page 68)
  - Product error
    - NOTE:** Auto-test failure state is identified as product error.
  - System error
    - NOTE:**
    - The following states are identified as system error:
      - Disconnected injection
      - Over voltage
      - Over capacitance

- The insulation alarm relay is deactivated, that is, de-energized, in the following cases:
  - First measurement
  - No insulation fault is detected.
  - Insulation fault is detected and acknowledged (if **Menu > Settings > I/O Config > Ack. AI. Relay** is set to **ON**). (See Insulation alarm relay acknowledgement (**Ack AI. Relay**), page 68)
  - Transient fault is detected.
  - The auxiliary power supply is lost.

## Preventive insulation alarm relay (Prev. AI. Rel)

You can set the preventive insulation alarm relay mode depending on the status of insulation.

The allowed values for this parameter are **FS**, **Std.**, and **Mirror**. The default value is **FS**.

	I/O Config.	Relay State	ENERGIZED PRODUCT				DE-ENERGIZED PRODUCT
			Normal Operation / No Insulation Fault	Preventive Insulation Alarm	Insulation Alarm	Inoperative / Special Status	
Insulation Alarm Relay	Failsafe	ON OFF	—	—	—	—	—
	Standard	ON OFF	—	—	—	—	—
Preventive Insulation Alarm Relay (Prev. Ins. Alarm Threshold not OFF)	Failsafe	ON OFF	—	—	—	—	—
	Standard	ON OFF	—	—	—	—	—
Preventive Insulation Alarm Relay in Mirror mode	Insulation alarm relay Failsafe	ON OFF	—	—	—	—	—
	Insulation alarm relay Standard	ON OFF	—	—	—	—	—

States in which insulation alarm relay is mirrored

States in which both relays are identical

When the preventive insulation alarm relay is configured in failsafe (**FS**) mode:

- The preventive insulation alarm relay is activated, that is, energized, in the following case:
  - No insulation fault is detected.
  - No preventive insulation fault is detected.
  - Transient fault is detected.
  - Insulation fault is detected and acknowledged (if **Menu > Settings > I/O Config. > Ack. AI. Relay** is set to **ON**). (See Insulation alarm relay acknowledgement (**Ack AI. Relay**), page 68)
  - Injection is inhibited (if **Menu > Settings > I/O Config. > Ack Inhibit** is set to **ON**). (See Acknowledge inhibition (**Ack Inhibit.**), page 68)

- The preventive insulation alarm relay is deactivated, that is, de-energized, in the following cases:
  - First measurement
  - Preventive insulation fault is detected.
  - Insulation fault is detected.
  - Insulation fault is detected and acknowledged (if **Menu > Settings > I/O Config. > Ack. Al. Relay** is set to **OFF**). (See Insulation alarm relay acknowledgement (**Ack Al. Relay**), page 68)
  - When you trigger an auto-test with relays, the relay toggles for 3 seconds. (See Test with relays (**Test w. Relays**), page 70)
  - The auxiliary power supply is lost.
  - Product error

**NOTE:** Auto-test failure state is identified as product error.

- System error

**NOTE:**

The following states are identified as system error:

- Disconnected injection
- Over voltage
- Over capacitance

When the preventive insulation alarm relay is configured in Standard (**Std**) mode:

- The preventive insulation alarm relay is activated, that is, energized, in the following case:
  - Preventive insulation fault is detected.
  - Insulation fault is detected.
  - When you trigger a auto-test with relays, the relay toggles for 3 seconds. (See Test with relays (**Test w. Relays**), page 70)
  - Product error

**NOTE:** Auto-test failure state is identified as product error.

- System error

**NOTE:**

The following states are identified as system error:

- Disconnected injection
- Over voltage
- Over capacitance

- The preventive insulation alarm relay is deactivated, that is, de-energized, in the following cases:
  - First measurement
  - No insulation fault is detected.
  - Insulation fault is detected and acknowledged (if **Menu > Settings > I/O Config. > Ack. Al. Relay** is set to **ON**). (See Insulation alarm relay acknowledgement (**Ack Al. Relay**), page 68)
  - No preventive insulation fault is detected.
  - Transient fault is detected.
  - Injection is inhibited (if **Menu > Settings > I/O Config. > Ack Inhibit** is set to **ON**) (See Acknowledge inhibition (**Ack Inhibit.**), page 68)
  - The auxiliary power supply is lost.

When the preventive insulation alarm relay is configured in mirror (**Mirror**) mode:

- The preventive insulation alarm relay mirrors (symmetrically matches) the insulation alarm relay as long as the device is operating correctly.


- The preventive insulation alarm relay stops mirroring the insulation alarms when the device is de-energized or inoperative. You can identify an inoperative product using this feature.

## Examples of application of preventive alarm relay mirroring modes

When the device is inoperative, the system should automatically switch to another device by managing exclusions using the injection inhibition input. See *Injection inhibition input (Inhibit. Input)*, page 62 for more information on injection inhibition input.


Set the preventive insulation alarm relay to mirror mode and wire the relays in series to create a logical AND function. It is advised to configure the insulation alarm relay in failsafe mode and wire both relays in (NC/C). In this case, the logical function returns true only when the device is inoperative or de-energized, or when a special status is active.

The following wiring diagram is an example of the device wired in standard mode:

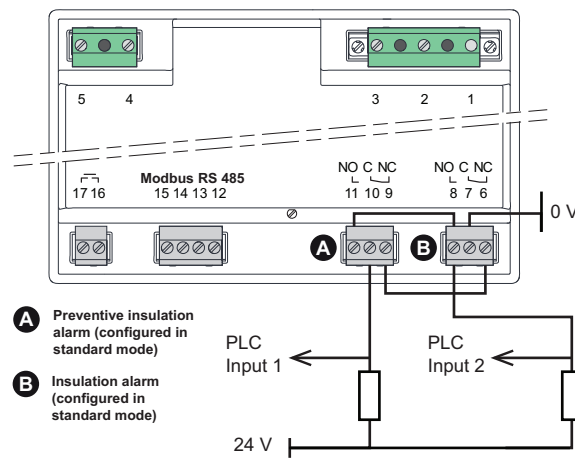

Mode	Input	State				
		No fault	Preventive alarm	Alarm	Inoperative product	No power
Standard	PLC 1	1	1	1	0	0
Standard	PLC 2	1	1	0	0	1

The following wiring diagram is an example of the device wired in failsafe mode:

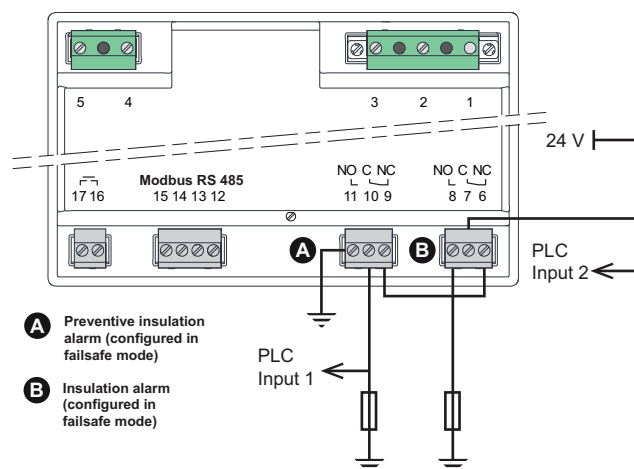

Mode	Input	State				
		No fault	Preventive alarm	Alarm	Inoperative product	No power
Failsafe	PLC 1	0	0	0	1	1
Failsafe	PLC 2	0	0	1	1	1

**ALARM=(RelayState:ON) || ((StatusInput:CLOSED) & (RelayState:OFF))**

- An insulation alarm is detected when both PLC inputs are at a logic 1.
- A product failure is detected when PLC input 1 is a logic 0.

## Relay assignment

The device allows assigning various states to either of the relays (Preventive insulation alarm relay (**PREV. AL. REL**) and Insulation alarm relay (**INS. AL. RELAY**)). These assignments can only be done through Modbus communication. The assigned states can be viewed on the HMI in **Monitoring** screen. Refer Vigilohm IM400, IM400C, and IM400L menu, page 34 and Vigilohm IM400THR and IM400LTHR menu, page 35.

The various states that can be assigned are:

- Preventive insulation alarm (**Pre.Alarm**)
- Insulation alarm (**Alarm**)
- Injection inhibit (**Inj. Inhibition**)
- System error (**System Error**)

**NOTE:**

The following states are identified as system error:

- Disconnected injection
- Over voltage
- Over capacitance
- Product error (**Product Error**)

**NOTE:** Auto-test failure state is identified as product error.

Two registers are defined for this assignment. Refer Modbus registers table, page 79 for details on the registers.

- Insulation alarm relay bitmap (Register Address: 3044)
- Preventive insulation alarm relay bitmap (Register Address: 3046)

For the assignment of states to each relay, use the bit configuration of these register as follows:

Bit	Assignment
0	Preventive insulation alarm <b>NOTE:</b> This bit is read-only for the preventive insulation alarm relay bitmap register (3046).
1	Reserved
2	Reserved
3	Reserved
4	Insulation alarm <b>NOTE:</b> This bit is read-only for the insulation alarm relay bitmap register (3044).
5	Reserved
6	Reserved
7	Reserved
8	Injection inhibit

Bit	Assignment
9	Reserved
10	Reserved
11	Reserved
12	Reserved
13	Reserved
14	Reserved
15	Reserved
16	System error
17	Reserved
18	Reserved
19	Reserved
20	Reserved
21	Reserved
22	Reserved
23	Reserved
24	Product error
25	Reserved
26	Reserved
27	Reserved
28	Reserved
29	Reserved
30	Reserved
31	Reserved

**NOTE:**

- After factory reset,
  - insulation alarm relay bitmap is assigned with insulation alarm, product error, and system error bits.
  - preventive insulation alarm relay bitmap is assigned with product error and system error bits, because the **Prev. Alarm** parameter is set to **OFF**.

See [Reset](#), page 74 for more information on factory reset.

- When the **Prev. Alarm** parameter is set to any value other than **OFF**, the preventive insulation alarm relay bit is assigned in the Preventive insulation alarm relay bitmap. You can also assign the preventive insulation alarm relay bit in the insulation alarm relay bitmap.

See [Insulation alarm and preventive insulation alarm threshold hysteresis](#), page 53 for more information on **Prev. Alarm** parameter.

- When the **Prev. Al. Rel** parameter is set to **Mirror**, the preventive insulation alarm relay bitmap is cleared to mirror the insulation alarm operation and you can not assign any bits in the preventive insulation alarm relay bitmap. You can assign bits when the **Prev. Al. Rel** parameter is set to **Standard** or **Failsafe**.

See [Preventive insulation alarm relay \(Prev. Al. Rel\)](#), page 57 for more information on **Prev. Al. Rel** parameter.

- When the **Ack Inhibit** parameter is set to **OFF**, the injection inhibit bit is cleared in insulation alarm relay and preventive insulation alarm relay bitmaps and you can not assign any bits in both the bitmaps. When the **Ack Inhibit** parameter is set to **ON**, the injection inhibit bit is assigned in the Insulation alarm relay bitmap. To assign the injection inhibit bit in preventive insulation alarm bitmap only, assign the bit in preventive insulation alarm bitmap and reset the bit in the insulation alarm bitmap.

See [Acknowledge inhibition \(Ack Inhibit.\)](#), page 68 for more information on **Ack Inhibit** parameter.

## Injection inhibition input (Inhibit. Input)

The device injects several patented combinations of low frequency voltage into the system. In a system with several incoming feeders, depending on the circuit breaker position, there must be no more than one device injecting into the system. The inhibition of injection is managed by the state of inhibition input of the device, which can, for example, be connected to the auxiliary contacts of the circuit breakers.

You can configure the injection inhibition input to use an NO or an NC contact as follows:


Value or Contact type	Injection activated when the contact is...	Injection deactivated when the contact is...
<b>NO</b> (Default)	Open	Closed
<b>NC</b>	Closed	Open
<b>OFF</b>	Ignored	Ignored

You can set this parameter value to **OFF**. In this mode, the electrical input state is ignored and the exclusion management can still be done over Modbus communication. See [Modbus functions](#), page 78 for Modbus functions. This is especially useful in functional safety standards compliant environments. See [Safety standards compliance requirements](#), page 104 for more information on functional safety standards compliance.


### Example: injection exclusion with two incoming feeders

You can use injection exclusion to monitor two incoming feeders.

Use of circuit breakers with normally open (NO) auxiliary contacts:

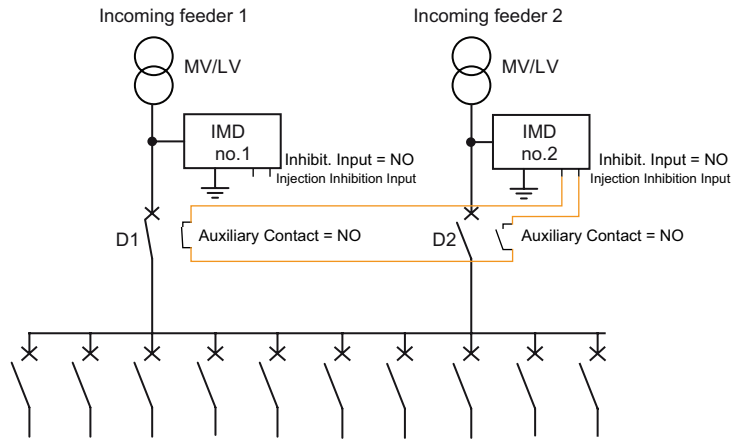

Use of circuit breakers with normally closed (NC) auxiliary contacts:

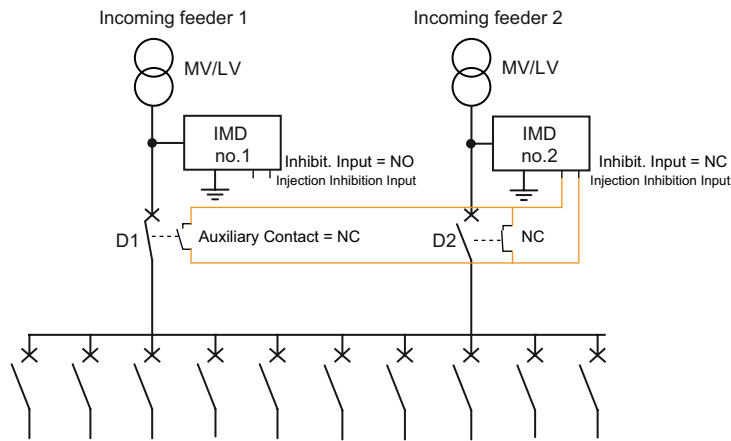


If	Then
<ul style="list-style-type: none"> <li>D1 is closed and</li> <li>D2 is open</li> </ul>	Both devices are active: <ul style="list-style-type: none"> <li>Device No. 1 monitors the insulation of the system,</li> <li>Device No. 2 only monitors the insulation of transformer 2 connection as far as D2.</li> </ul>
<ul style="list-style-type: none"> <li>D1 is open and</li> <li>D2 is closed</li> </ul>	Both devices are active: <ul style="list-style-type: none"> <li>Device No. 1 monitors the insulation of the transformer 1 connection as far as D1.</li> <li>Device No. 2 monitors the insulation of the system.</li> </ul>
<ul style="list-style-type: none"> <li>D1 is closed and</li> <li>D2 is closed</li> </ul>	<ul style="list-style-type: none"> <li>Device No. 1 monitors the insulation of the system.</li> <li>Device No. 2 must be inhibited.</li> </ul>


### Example: injection exclusion with two incoming feeders and one coupling

You can use exclusion injection and a coupling to monitor two incoming feeders.

Use of circuit breakers with normally open (NO) auxiliary contacts:

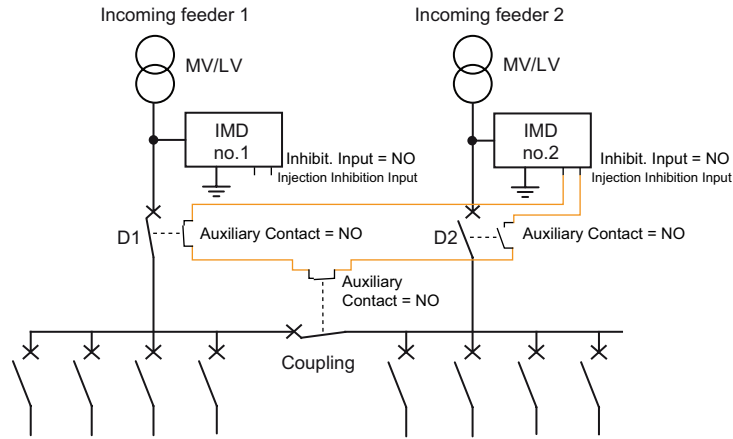

Use of circuit breakers with normally closed (NC) auxiliary contacts:

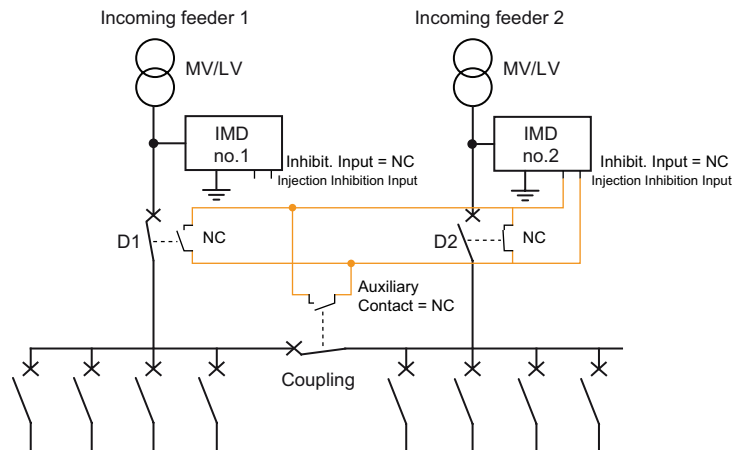

If	Then
The coupling is closed	The same applies as in the example for injection exclusion with two incoming feeders. See Example: injection exclusion with two incoming feeders, page 63 for example of injection exclusion with two incoming feeders.
The coupling is open: <ul style="list-style-type: none"> <li>• D1 is closed AND</li> <li>• D2 is closed</li> </ul>	Both devices are active: <ul style="list-style-type: none"> <li>• Device no.1 monitors the insulation of system 1,</li> <li>• Device no.2 monitors the insulation of system 2.</li> </ul>


Device no.2 must be inhibited when the following three conditions are met:

- D1 is closed
- D2 is closed
- Coupling is closed


### Example: injection exclusion with three incoming feeders

You can use injection exclusion to monitor three incoming feeders.

Use of circuit breakers with normally open (NO) auxiliary contacts:

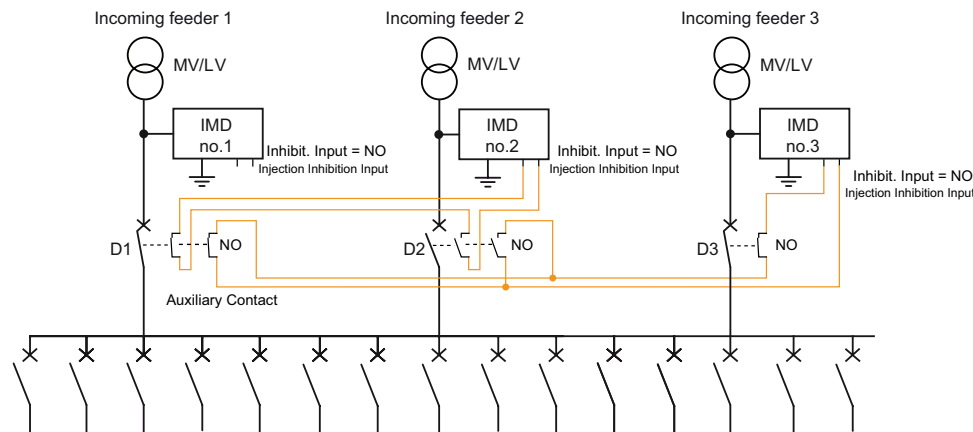

Use of circuit breakers with normally closed (NC) auxiliary contacts:

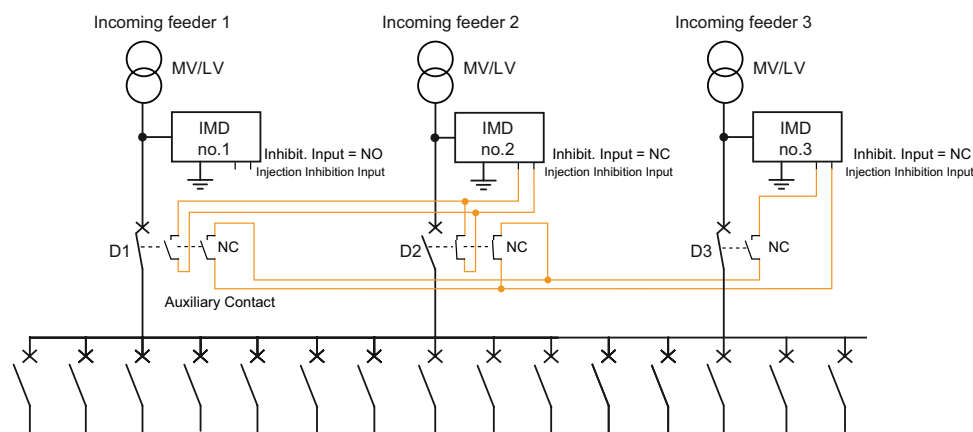

The device priority is as follows:

- Device no.1 is the device with the highest priority 1: it always injects into the system if D1 is closed or open.
- Device no.2 is the device with priority 2: it always injects into the system except when there is a closed path between the device and one device with a higher priority, in this case device no.1. Therefore, device no.2 is inhibited when D2 and D1 are closed.

Device no.2 injection inhibition =  $D1 \text{ AND } D2$

To implement this logic, wire the injection inhibition of device no.2 to the 2 auxiliary contacts of D1 and D2.

- Device no.3 is the device with priority 3: it always injects into the system except when there is a closed path between the device and one device with a higher priority, in this case device no.1 or device no.2. Therefore, device no.2 is inhibited when D3 and D2 are closed, or D3 and D1 are closed.

Device no.3 injection inhibition =  $(D3 \text{ AND } D1) \text{ OR } (D3 \text{ AND } D2) = D3 \text{ AND } (D1 \text{ OR } D2)$

To implement this logic, wire the injection inhibition of device no.3 to the auxiliary contacts of D1, D2 and D3.

### Example: injection exclusion with multiple interconnected incoming feeders

By using a PLC, the wiring can be simplified and complex configurations can be considered.


The PLC can have the following characteristics:

- Number of digital inputs: is the number of circuit breakers for incoming feeder and for coupling. These inputs can be self-powered by the PLC or powered by an external power supply.

- Number of digital outputs: is the number of devices minus 1. These digital outputs can be electromechanical or solid-state outputs.
- Processing cycle is equal to 0.1 s or less.

Using a basic PLC to manage device exclusion allows to:

- Monitor continuously each part of ungrounded power system.
- Have a short response time to detect insulation faults.
- Be compatible with complex power systems with high number of incoming feeders and couplings.

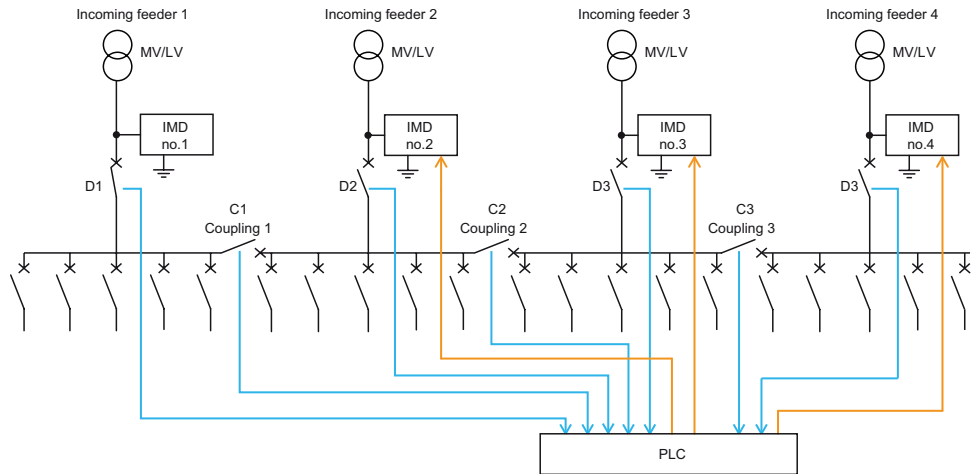

There are two methods to determine the logic driving the injection inhibition input of each device:

**Method 1:** Give a priority to each device using indexes of incoming feeders. In this example:

- Priority of device no.1 is 1 (highest priority)  
This device is always injecting, its injection inhibition input is left unwired.
- Priority of device no.2 is 2  
This device is always injects into the system except when there is a closed path between itself and one device with a higher priority, that is, device no.1 in this case. The closed path occurs when D2, C1 and D1 are closed.

Therefore, Injection inhibition of device no.2 =  $D2 \text{ \<AND\> } C1 \text{ \<AND\> } D1$

The representation in Ladder PLC programming language is as follows:



- Priority of device no.3 is 3  
This device is always injects into the system except when there is a closed path between itself and one device with a higher priority, that is, device no.2 and device no.1 in this case. The closed path occurs when:

- (D3, C2, and D2) are closed, or
- (D3, C2, C1, and D1) are closed.

Therefore,

- Injection inhibition of device no.3 =  $(D3 \text{ \<AND\> } C2 \text{ \<AND\> } D2) \text{ \<OR\> } (D3 \text{ \<AND\> } C2 \text{ \<AND\> } C1 \text{ \<AND\> } D1)$
- Injection inhibition of device no.3 =  $(D3 \text{ \<AND\> } C2) \text{ \<AND\> } (D2 \text{ \<OR\> } (C1 \text{ \<AND\> } D1))$

The representation in Ladder PLC programming language is as follows:



- Priority of device no.4 is 4(lowest priority)


This device is always injects into the system except when there is a closed path between itself and one device with a higher priority, that is, device no.3, device no.2, and device no.1 in this case. The closed path occurs when:

- (D4, C3, and D3) are closed, or
- (D4, C3, C2, and D2) are closed, or
- (D4, C3, C2, C1, and D1) are closed.

Therefore,

- Injection inhibition of device no.4 = (D4 <AND> C3 <AND> D3) <OR> (D4 <AND> C3 <AND> C2 <AND> D2) OR (D4 <AND> C3 <AND> C2 <AND> C1 <AND> D1)
- Injection inhibition of device no.3 = (D4 <AND> C3) <AND> (D3 <OR> (C2 <AND> D2) <OR> (C2 <AND> C1 <AND> D1))

The representation in Ladder PLC programming language is as follows:

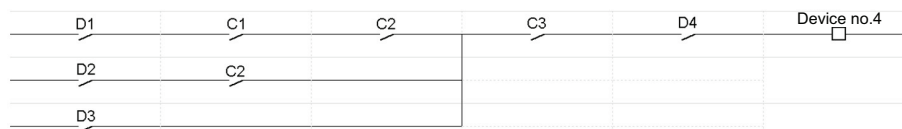


**Method 2:** Use a truth table.

Possible configurations 0 = open, 1 = closed							Injection Inhibition 0 = injection, 1 = injection inhibited			
D1	D2	D3	D4	C1	C2	C3	De-vice no.1	De-vice no.2	De-vice no.3	De-vice no.4
0	0	0	0	0	0	0	0 (20)	0 (20)	0 (20)	0 (20)
0	0	0	0	0	0	1	0 (20)	0 (20)	0 (20)	0 (20)
...										
0	1	1	1	1	0	1	0 (20)	0 (21)	0 (21)	1 (22)
...										
1	1	1	1	0	0	0	0 (21)	0 (21)	0 (21)	0 (21)
...										
1	1	1	1	1	1	1	0 (21)	1 (22)	1 (22)	1 (22)

## Injection inhibition screen

When the injection inhibition function is activated (that is, **Inhibit. Input** is set to **N.O.**), the following status screen displays and replaces any system status screen that may be displaying already (insulation measurement, insulation alarm or preventive insulation alarm).

(20) Device monitors the transformer  
 (21) Device injects a signal into the system  
 (22) Device is excluded from the system (injection inhibited)

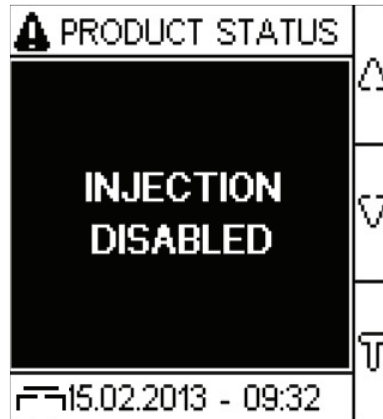

You can perform the following actions on this screen:

- Press the **Menu** button to go to the main menu.
- Press the arrow buttons to view the settings screen.
- Press the **T** button to run the auto-test.

**NOTE:**

If you activate the injection of the device,

- If **Inhibition Type** value is **Int.**, then an auto test is launched automatically before returning to the default insulation monitoring screen.
- If **Inhibition Type** value is **Ext.**, then the device displays the default insulation monitoring screen.

## Acknowledge inhibition (Ack Inhibit.)

You can configure the injection inhibition input to activate the insulation alarm relay when the injection is disabled. This is critical in an UL-FS type environment to obtain a feedback (acknowledgment) on the injection status.

The allowed values for this parameter are **ON** and **OFF**. The default value is **OFF**.

To set the acknowledgement of the inhibition signal ON , select **Menu > Settings > I/O Config > Ack Inhibit > ON**.

To set the acknowledgement of the inhibition signal OFF , select **Menu > Settings > I/O Config > Ack Inhibit > OFF**.

## Insulation alarm relay acknowledgement (Ack AI. Relay)

You can set the insulation alarm relay acknowledgment as per the usage of loads connected to the relay.

When the relays are connected to loads (for example, horns or lamps), it is advised to turn off these external signaling devices before the insulation level rises back to a level above the setup thresholds. This can be done by pressing the acknowledge button while in insulation alarm state.

In certain system configurations, it is required to prevent this type acknowledgement and only retrigger the relays when the insulation level rises above the setup thresholds. This is done by changing the corresponding parameter.


The allowed values for this parameter are **ON** and **OFF**. The default value is **ON**.

To set the acknowledge alarm relay ON, select **Menu > Settings > I/O Config > Ack AI. Relay > ON**.

To set the acknowledge alarm relay OFF, select **Menu > Settings > I/O Config > Ack AI. Relay > OFF**.


The device monitors the ungrounded power system insulation in accordance with the following timing diagram:

**Acknowledge alarm relay ON**

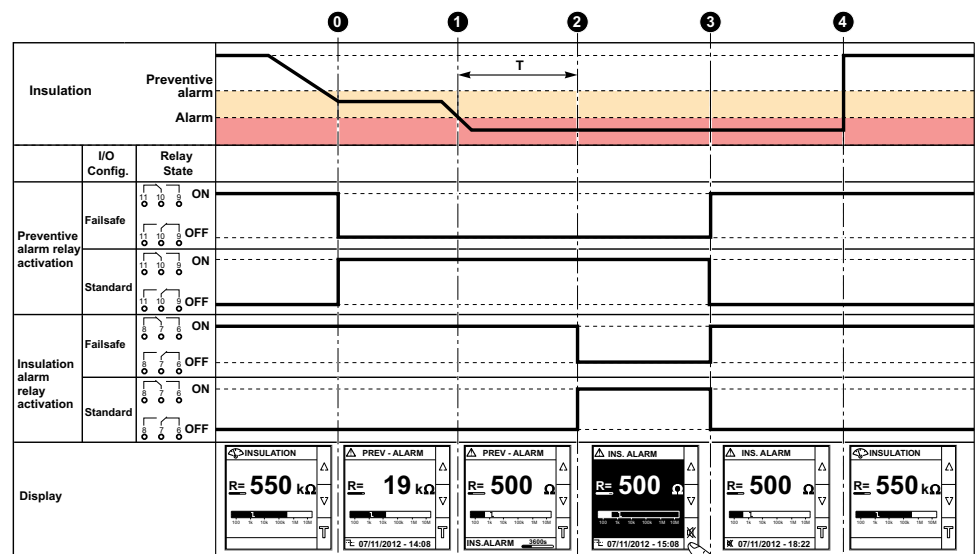


0	An insulation decrease is detected on the system. The insulation resistance drops below the preventive insulation alarm threshold. The preventive insulation alarm relay switches and the preventive insulation alarm indicator light lights up.
1	An insulation fault is detected on the system.
2	Once T (insulation alarm delay) has elapsed, the device switches to the insulation alarm state. The insulation alarm relay switches and the insulation alarm indicator LED turns ON.
3	Press the <b>X</b> button to acknowledge the insulation alarm. Both the insulation alarm relay and the preventive insulation alarm relay revert back to their initial state.
4	The insulation fault is corrected. The alarm LED turns off. The device reverts to normal status.

**Acknowledge alarm relay OFF**

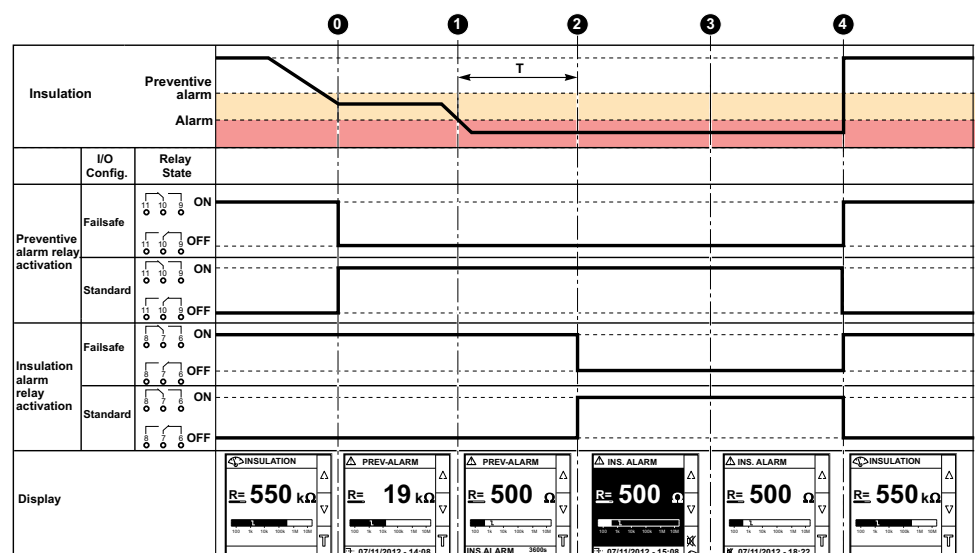

0	An insulation decrease is detected on the system. The insulation resistance drops below the preventive insulation alarm threshold. The preventive insulation alarm relay switches and the preventive insulation alarm indicator light lights up.
1	An insulation fault is detected on the system.
2	Once T (insulation alarm delay) has elapsed, the device switches to the insulation alarm state. The insulation alarm relay switches and the insulation alarm indicator LED turns ON.

3	Press the  button to acknowledge the insulation alarm. Both the insulation alarm relay and the preventive insulation alarm relay does not revert back to their initial state.
4	The insulation fault is corrected. The alarm LED turns off. The device reverts to normal status.

## Test with relays (Test w. Relays)

You can set a three-second toggle to the preventive insulation alarm relay and insulation alarm relay during a manually launched auto test. See [Auto test overview](#), page 76 for information on auto test.

The allowed values for this parameter are **ON** and **OFF**. The default value is **ON**.

## Inhibition type (Inhibit. Type)

You can configure the inhibition type depending on the ungrounded system with several incoming feeders.

Two values are available for this parameter:

Value	Description
Int. (Default)	During inhibition state, the device relay is disconnected from external network. When injection is enabled, an auto test is launched automatically before returning to the default insulation monitoring screen.
Ext.	During inhibition state, the device relay is connected to the external network. When injection is enabled, the device displays the default insulation monitoring screen. <b>NOTE:</b> The auto test is not launched.

## R and C measurements

### Insulation measurements

The device monitors the insulation of ungrounded power system.

The device (IM400, IM400C, and IM400L) :

- measures and displays:
  - the insulation resistance R ( $\Omega$ ) continuously,
  - the insulation capacitance C, which is the leakage capacitance of the distribution system to ground ( $\mu\text{F}$ ),
- calculates and displays the impedance Zc ( $\text{k}\Omega$ ) associated with C.

The device (IM400THR and IM400LTHR) measures and displays the insulation resistance R ( $\Omega$ ) continuously.

To view these values, navigate to **Menu > Monitoring**.

## Effect of leakage capacitance and frequency disturbances on the measurement accuracy of R

The leakage capacitance (C) creates a leakage path for the measurement signal and reduces the level of the useful signal that flows through the insulation resistance (R).

IMD injects an adaptive multi-frequency measurement signal with low frequencies and includes high-performance integration algorithms. It makes the device compatible with large power systems that have a high value of leakage capacitance and this operates out of the frequency disturbance range. So, the device operates correctly even with impact of leakage capacitance and frequency disturbances.


For other devices using switching mode measurement signals, the leakage capacitance (C) has an impact on the measurement accuracy of the insulation resistance (R).

The device operates in:

- power systems with leakage capacitance up to 500  $\mu\text{F}$
- photovoltaic systems with leakage capacitance up to 5500  $\mu\text{F}$  with IM400VA2 voltage adaptor and 2000  $\mu\text{F}$  with IM400-1700C voltage adaptor


## Monitoring Power system insulation

The device monitors the ungrounded power system insulation in resistance in accordance with the following timing diagram which represents the default settings:

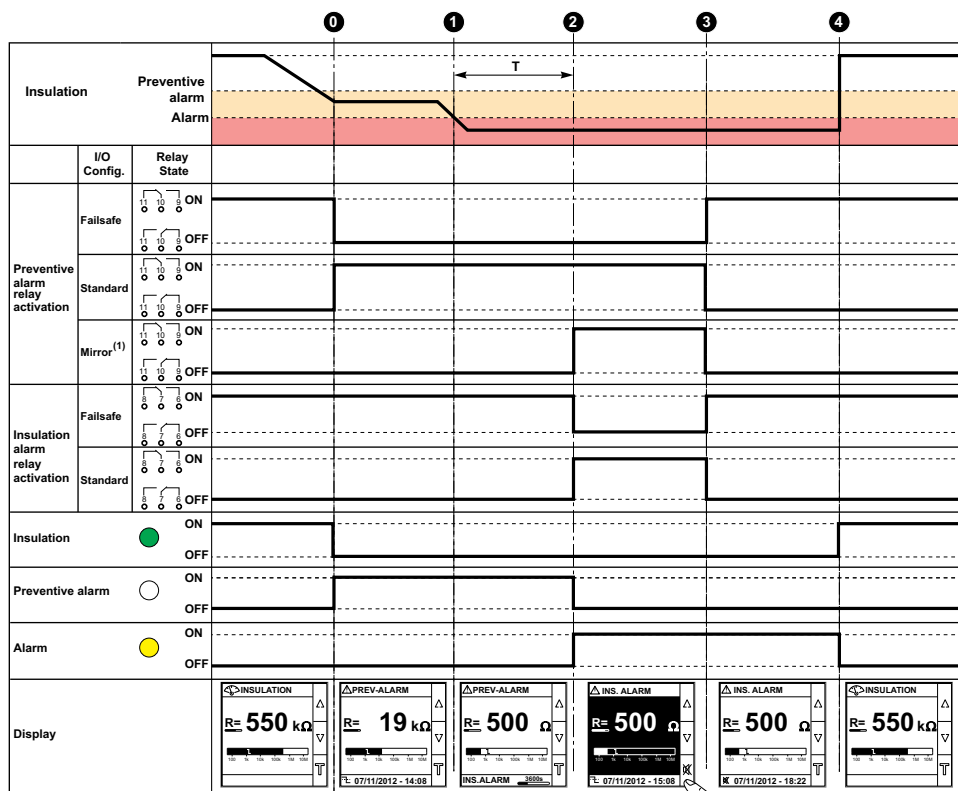

(1) In this example, Insulation Alarm Relay parameter (Menu → Settings → I/O Config. → Ins. Al. Relay) is setup in Failsafe mode.

0	An insulation decrease is detected on the system. The insulation resistance drops below the preventive insulation alarm threshold. The preventive insulation alarm relay switches and the preventive insulation alarm indicator light lights up.
1	An insulation fault is detected on the system.
2	Once T (insulation alarm delay) has elapsed, the device switches to the insulation alarm state. The insulation alarm relay switches and the insulation alarm indicator LED turns ON.

3	Press the  button to acknowledge the insulation alarm. Both the insulation alarm relay and the preventive insulation alarm relay revert back to their initial state. Depending on the setup of the I/Os, the preventive insulation alarm relay and the insulation alarm relay may or may not revert back to their initial states. The timing diagram represents the case when the I/Os are set up to acknowledge the relays. See <i>Relay Mode</i> , page 55 for more information on relay modes. See <i>Relay Acknowledgement</i> , page 68 for more information on relay acknowledgement.
4	The insulation fault is corrected. The alarm LED turns off. The device reverts to normal status.

**NOTE:** If you don't acknowledge the insulation alarm state, and the insulation rises again above the insulation alarm threshold, then the insulation fault is recorded as transient.

## Log

The device records the details of the 60 most recent insulation fault events. The fault events are triggered by one of following statuses:

- insulation fault
- preventive insulation fault


Event 1 is the event that was recorded most recently and event 60 is the oldest recorded event.



The oldest event is deleted when a new event occurs (the table is not reset).

By referring to this information, the performance of the distribution system can be improved and maintenance work is facilitated.

## Insulation fault log display screen

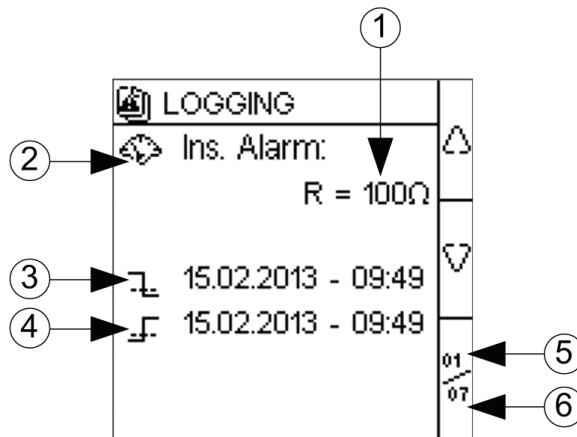You can view the details of an insulation fault event by navigating to **Menu > Logging**.



1	Insulation fault value recorded
2	Type of fault recorded: <ul style="list-style-type: none"> <li>• insulation fault</li> <li>• preventive insulation fault</li> </ul> <p><b>NOTE:</b> These faults are recorded as primary record.</p>
3	Date and time when the fault appeared <b>NOTE:</b> This information is stored as primary record.
4	Date and time when the fault disappeared due to any one of the following event: <ul style="list-style-type: none"> <li>•  Insulation fault acknowledgement</li> <li>•  Disappearance of the preventive insulation fault or transient insulation fault</li> </ul>

	<ul style="list-style-type: none"> <li>ⓘ Power failure while on active alarm.</li> <li>☒ Product error while on active alarm.</li> <li>☐ Injection disable</li> <li>⊕ Over capacitance</li> <li>⚡ Over voltage</li> </ul> <p><b>NOTE:</b> This information is stored as secondary record.</p>
5	Number of the event displayed
6	Total number of events recorded

Use the up and down arrows to scroll through the events.

## Trends

The device records and displays the average of the system insulation in form of curves. The device displays curves as per the following durations:

- last hour (1 point every 2 minutes)
- last day (1 point per hour)


The chart scale automatically adjusts to the shown data to optimize the display accuracy.

The curves show a general trend how the system insulation evolves over time. They are calculated from averages related to shorter or longer durations depending on the charts. So charts may not show transient insulation faults when they are smoothed over time.

## Trend screen

You can view the trends by navigating to **Menu > Trend**.

An example of Last Day trend page is as follows:

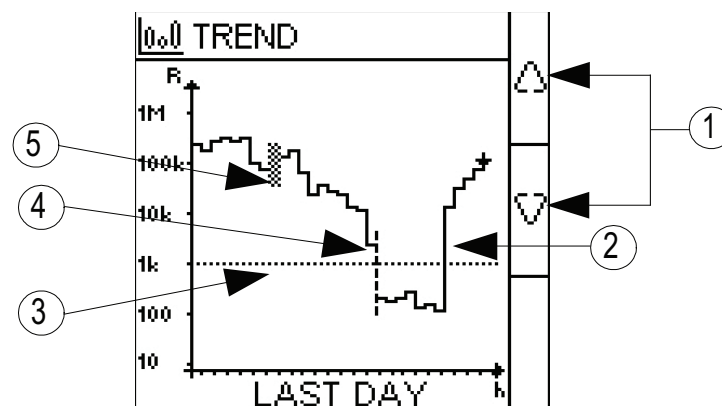

1	Up and down arrows: To view the pages of trend. The pages are Last hour, Last day
2	Measured value of the insulation resistance
3	Existing value of the insulation alarm threshold
4	Vertical dotted line: indicates a power interruption (duration undefined)
5	Squared area: indicates that the injection has been inhibited

## Reset

You can reset logs and trends. Further, you can perform factory reset.

You can access the device reset parameters by selecting **Menu > Settings > Reset**.

The reset parameters are **Reset Logs**, **Reset Trend**, and **Factory Reset**.

On performing reset of logs or trends, the existing logs or trend information is erased but the settings parameter value remains unchanged. On performing factory reset, the settings parameter values are reset to default.

The complete list of parameter settings, its default value, and allowed values are:

Parameter	Default Value	Allowed Values
Ins. Alarm	1 kΩ	0.04...500 kΩ
Ins. Al. Delay	0 s	0 s...120 minutes
Prev. Alarm	OFF	<ul style="list-style-type: none"> <li>• 1 kΩ...1 MΩ</li> <li>• OFF</li> </ul>
Prev. Al. Del	0 s	0 s...120 minutes
Disconnect. Inj	OFF	<ul style="list-style-type: none"> <li>• ON</li> <li>• OFF</li> </ul>
App	IM400, IM400L, and IM400C: <b>Power C</b>  IM400THR and IM400LTHR: <b>THR</b>	IM400 and IM400L: <ul style="list-style-type: none"> <li>• <b>Power C</b></li> <li>• <b>Control C</b></li> </ul> IM400C: <ul style="list-style-type: none"> <li>• <b>Power C</b></li> <li>• <b>Control C</b></li> <li>• <b>Adaptive</b></li> </ul> IM400THR and IM400LTHR: <b>THR</b>
Filtering	IM400, IM400L, and IM400C: <b>40s</b>  IM400THR and IM400LTHR: <b>20s</b>	IM400, IM400L, and IM400C: <ul style="list-style-type: none"> <li>• <b>4s</b></li> <li>• <b>40s</b></li> <li>• <b>400s</b></li> </ul> IM400THR and IM400LTHR: <ul style="list-style-type: none"> <li>• <b>2s</b></li> <li>• <b>20s</b></li> <li>• <b>200s</b></li> </ul>
Locating <sup>(23)</sup>	OFF	<ul style="list-style-type: none"> <li>• OFF</li> <li>• IFL</li> <li>• XD</li> </ul>
V.Adapt	IM400, IM400L, and IM400C: <b>None</b>  IM400THR and IM400LTHR: <b>None</b>	IM400 and IM400L: <ul style="list-style-type: none"> <li>• <b>None</b></li> <li>• <b>PHT1000</b></li> <li>• <b>HV1700</b></li> </ul> IM400C: <ul style="list-style-type: none"> <li>• <b>None</b></li> <li>• <b>VA2</b></li> <li>• <b>PHT1000</b></li> <li>• <b>HV1700C</b></li> </ul> IM400THR and IM400LTHR: <ul style="list-style-type: none"> <li>• <b>None</b></li> <li>• <b>P1N</b></li> </ul>
Frequency <sup>(23)</sup>	50 Hz	<ul style="list-style-type: none"> <li>• 50 Hz</li> <li>• DC</li> </ul>

<sup>(23)</sup> Applicable for IM400, IM400L, and IM400C

Parameter	Default Value	Allowed Values
		<ul style="list-style-type: none"> <li>• 400 Hz</li> <li>• 60 Hz</li> </ul>
HRG	OFF	<ul style="list-style-type: none"> <li>• OFF</li> <li>• 0.1....2 MΩ</li> </ul>
Injection <sup>(24)</sup>	20V	<ul style="list-style-type: none"> <li>• 20V</li> <li>• 40V</li> <li>• 60V</li> <li>• 80V</li> </ul>
Pri.DC Resis <sup>(24)</sup>	0 kΩ	0....50 kΩ
No. of Transfo <sup>(24)</sup>	0	<ul style="list-style-type: none"> <li>• 0</li> <li>• 1</li> <li>• 3</li> </ul>
Ins. AI. Relay	FS	<ul style="list-style-type: none"> <li>• Std.</li> <li>• FS</li> </ul>
Prev. AI. Rel	FS	<ul style="list-style-type: none"> <li>• Std.</li> <li>• FS</li> <li>• Mirror</li> </ul>
Inhibit. Input	N.O.	<ul style="list-style-type: none"> <li>• N.O.</li> <li>• N.C.</li> <li>• OFF</li> </ul>
Ack Inhibit	OFF	<ul style="list-style-type: none"> <li>• ON</li> <li>• OFF</li> </ul>
Ack AI. Relay	ON	<ul style="list-style-type: none"> <li>• ON</li> <li>• OFF</li> </ul>
Test w. Relays	ON	<ul style="list-style-type: none"> <li>• ON</li> <li>• OFF</li> </ul>
Inhibition Type	Int.	<ul style="list-style-type: none"> <li>• Int.</li> <li>• Ext.</li> </ul>
Address	1	1...247
Auto Config	OFF	<ul style="list-style-type: none"> <li>• ON</li> <li>• OFF</li> </ul>
Baudrate	19200	<ul style="list-style-type: none"> <li>• 4800</li> <li>• 9600</li> <li>• 19200</li> <li>• 38400</li> </ul>
Parity	Even	<ul style="list-style-type: none"> <li>• None</li> <li>• Even</li> <li>• Odd</li> </ul>
Modify Password	0000	0000...9999
Activation (Password)	OFF	<ul style="list-style-type: none"> <li>• ON</li> <li>• OFF</li> </ul>
Contrast	50%	10...100%
Backlight	100%	10...100%
Screen Saver	OFF	<ul style="list-style-type: none"> <li>• ON</li> <li>• OFF</li> </ul>

<sup>(24)</sup> Applicable for IM400THR and IM400LTHR

# Auto-test

## Auto test overview

The device performs a series of auto-tests on start-up, and then at regular intervals during operation, to help detect any potential faults in its internal and external circuits.

The device's auto test function tests:

- The product: indicator lights, internal electronics.
- The measuring chain, the insulation alarm relay and the preventive insulation alarm relay.

The auto-test is triggered:

- Manually at any time by pressing the **T** contextual menu button on one of the system insulation monitoring screens.

- Automatically:

Whenever the device starts up (power-up or reset)

Every 5 hours (except when the device has detected an insulation fault, regardless of whether the alarm is active, has been acknowledged, or is transient).

When injection is activated again after exiting the inhibited injection state.

## Auto test sequence


During auto test, the device's indicator lights illuminate and information is shown on the display.

The following LEDs turn ON in sequence and turn OFF after the predefined time:

1. Insulation status yellow
2. Preventive insulation alarm white
3. Insulation status green
4. Modbus communication yellow
5. Product status red

The relay toggles. See [Test with relays](#), page 70 for information on performing auto test with relays.

- If the auto test is successful, the following screen appears for 3 seconds and a status screen is displayed:

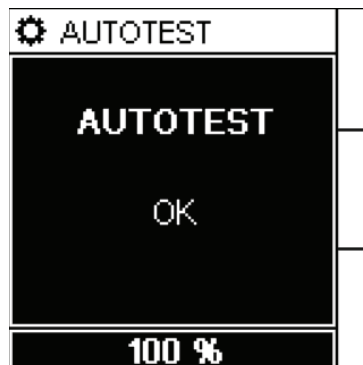

- If the auto test fails, the device automatically restarts. If the fault persists:
  - The red status indicator LED turns ON
  - The insulation alarm relay is triggered
  - **Product Inoperative** message is displayed.

Disconnect the auxiliary power supply of device and reconnect. If the fault persists, contact technical support.

# Communication

## Communication parameters

Before initiating any communication with the device, you must configure the Modbus communication port. You can configure communication parameters by selecting (**Menu > Settings > Modbus**).

The communication parameters and its allowed and default values are as follows:

Parameter	Default value	Allowed values
Address	1	1...247
Auto Config	OFF	<ul style="list-style-type: none"> <li>• ON</li> <li>• OFF</li> </ul>
Baud rate	19200	<ul style="list-style-type: none"> <li>• 4800</li> <li>• 9600</li> <li>• 19200</li> <li>• 38400</li> </ul>
Parity	Even	<ul style="list-style-type: none"> <li>• None</li> <li>• Even</li> <li>• Odd</li> </ul>

To modify the parameter value, see [Parameter modification using the display](#), page 43.

In point-to-point mode, when the device is directly connected to a computer, the reserved address 248 can be used to communicate with the device irrespective of the device internal address.

## Modbus functions

The device supports Modbus function codes.

Function Code		Function Name
Decimal	Hexadecimal	
3	0x03	Read Holding Registers <sup>(25)</sup>
4	0x04	Read Input Registers <sup>(25)</sup>
6	0x06	Write Single Register
8	0x08	Diagnostic Modbus
16	0x10	Write Multiple Registers
43 / 14	0x2B / 0E	Read Device Identification
43 / 15	0x2B / 0F	Get Date/Time
43 / 16	0x2B / 10	Set Date/Time
98	0x62	Modbus/98 <sup>(26)</sup>

### Read Device Identification request

Number	Type	Value
0	VendorName	Schneider Electric
1	ProductCode	IMD-IM400 / IMD-IM400C / IMDIM400L / IMDIM400THR / IMDIM400LTHR

<sup>(25)</sup> The Read Holding and Read Input registers are identical.

<sup>(26)</sup> Refer to Safety standards compliance requirements, page 104 for more details on the Modbus/98 function

**Read Device Identification request (Continued)**

Number	Type	Value
2	MajorMinorRevision	XXX.YYY.ZZZ
3	VendorURL	www.se.com
4	ProductName	Insulation Monitoring Device
5	ModelName	IM400 / IM400C / IM400L / IM400THR / IM400LTHR

The device answers any type of requests (basic, regular, extended).

## Modbus register table format

Register tables have the following columns.

Column heading	Description
Address	The address of the Modbus, in decimal (dec) and hexadecimal (hex) formats.
Register	The register of the Modbus, in decimal (dec) and hexadecimal (hex) formats.
R/W	Read only (R) or read/write (R/W) register.
Unit	The unit in which the information is expressed.
Type	The coding data type. <b>NOTE:</b> For the Float32 data type, the byte order follows the Big Endian format.
Range	Permitted values for this variable, usually a subset of what the format allows.
Description	Provides information about the register and the values applied.

## Modbus registers table

The following table lists the Modbus registers that apply to your device.

**System status registers**

Address		Register		R/W	Unit	Type	Range	Description
dec	hex	dec	hex					
100	64	101	65	R	–	Uint16	–	Product identifier <ul style="list-style-type: none"> <li>• 17004 - IM400</li> <li>• 17005 - IM400C</li> <li>• 17006 - IM400L</li> <li>• 17007 - IM400THR</li> <li>• 17008 - IM400LTHR</li> </ul>
114..115	72...73	115...116	73...74	R	–	Uint32	–	Product state <ul style="list-style-type: none"> <li>• Bit1 - Reserved</li> <li>• Bit2 - Auto test</li> <li>• Bit3 - Reserved</li> <li>• Bit4 - Safe state</li> <li>• Bit5 - Monitoring</li> <li>• Bit6 - Reserved</li> <li>• Bit7 - Product error</li> <li>• Bit8 - System error</li> <li>• Bit9 - Injection disabled</li> </ul>

**System status registers (Continued)**

Address		Register		R/W	Unit	Type	Range	Description
dec	hex	dec	hex					
								<ul style="list-style-type: none"> <li>Bit10 - Reserved</li> </ul>
116	74	11722	75	R	–	Uint16	–	Product error codes <ul style="list-style-type: none"> <li>0xFFFF - No error</li> <li>0x0000 - Unknown error</li> <li>0x0DEF - Undefined model</li> <li>0xAF00 - Auto-test failure</li> <li>0xBE00 - Metering</li> <li>0xC0F1 - Configuration error</li> <li>0x5EFA - Sensor call problem</li> <li>0xD1A1 - Glued IO</li> <li>0xD1A2 - RAM</li> <li>0xD1A3 - EEPROM</li> <li>0xD1A4 - Relay</li> <li>0xD1A5 - Status input</li> <li>0xD1A6 - Flash</li> <li>0xD1A7 - SIL</li> <li>0xE000 - NMI interrupt</li> <li>0xE001 - Hard fault exception</li> <li>0xE002 - Memory fault exception</li> <li>0xE003 - Bus fault exception</li> <li>0xE004 - Usage fault exception</li> <li>0xE005 - Unexpected interrupt</li> <li>0xFAF5 - Unexpected interrupt</li> </ul>
120...1-39	78...8B	121...140	79...8C	R	–	UTF8	–	Product family
140...1-59	8C...9F	141...160	8D...A0	R/W	–	UTF8	–	Product name (User application name)
160...1-79	A0...B3	161...180	A1...B4	R	–	UTF8	–	Product code <ul style="list-style-type: none"> <li>IMD-IM400</li> <li>IMD-IM400C</li> <li>IMDIM400L</li> <li>IMDIM400THR</li> <li>IMDIM400LTHR</li> </ul>
180...1-99	B4...C7	181...200	B5...C8	R	–	UF8	–	Manufacturer: Schneider Electric
208...2-19	D0...DB	209...220	D1...DC	R	–	UF8	–	ASCII serial number
220	DC	221	DD	R	–	Uint16	–	Manufacturing unit identifier
227...2-46	E3...F6	228...247	E4...F7	R	–	UTF8	–	Product capability
247...2-66	F7...10-A	248...267	F8...10B	R	–	UTF8	–	Product model <ul style="list-style-type: none"> <li>IM400</li> <li>IM400C</li> <li>IM400L</li> <li>IM400THR</li> <li>IM400LTHR</li> </ul>
300...3-06	12C...-132	301...307	12D...133	R	–	Uint16	–	Date and time in 7 register format The following parameters correspond to each register: <ul style="list-style-type: none"> <li>300 - Year</li> <li>301 - Month</li> </ul>

## System status registers (Continued)

Address		Register		R/W	Unit	Type	Range	Description
dec	hex	dec	hex					
								<ul style="list-style-type: none"> <li>• 302 - Day</li> <li>• 303 - Hour</li> <li>• 304 - Minute</li> <li>• 305 - Second</li> <li>• 306 - Millisecond</li> </ul>
307...3-10	133...1-36	308...311	134...137	R/W	–	Uint16	–	Date and time in TI081 format. See Date and time (TI081 format), page 92.
320...3-24	140...1-49	321...325	141...145	R	–	Uint16	–	Present firmware version <ul style="list-style-type: none"> <li>• X represents the primary revision number, which is encoded in register 321</li> <li>• Y represents the secondary revision number, which is encoded in register 322</li> <li>• Z represents the quality revision number, which is encoded in register 323</li> </ul>
325...3-29	145...1-49	326...330	146...14A	R	–	Uint16	–	Previous firmware version <ul style="list-style-type: none"> <li>• X represents the primary revision number, which is encoded in register 326</li> <li>• Y represents the secondary revision number, which is encoded in register 327</li> <li>• Z represents the quality revision number, which is encoded in register 328</li> </ul>
340...3-44	154...1-58	341...345	155...159	R	–	Uint16	–	Boot firmware version <ul style="list-style-type: none"> <li>• X represents the primary revision number, which is encoded in register 341</li> <li>• Y represents the secondary revision number, which is encoded in register 342</li> <li>• Z represents the quality revision number, which is encoded in register 343</li> </ul>
550...5-55	226...2-2B	551...556	227...22C	R	–	UTF8	–	Existing OS version
556...5-61	22C...2-231	557...562	22D...232	R	–	UTF8	–	Previous OS version
562...5-67	232...2-37	563...572	233...23C	R	–	UTF8	–	Existing RS/Boot version

## Modbus

Address		Register		R/W	Unit	Type	Range	Description
dec	hex	dec	hex					
750	2EE	751	2EF	R/W	–	Uint16	1...247	Device address Default value: 1
751	2EF	752	2F0	R/W	–	Uint16	<ul style="list-style-type: none"> <li>• 0 = 4800</li> <li>• 1 = 9600</li> <li>• 2 = 19200</li> <li>• 3 = 38400</li> </ul>	Baud rate Default value: 2 (19200)
752	2F0	753	2F1	R/W	–	Uint16	<ul style="list-style-type: none"> <li>• 0 = Even</li> <li>• 1 = Odd</li> <li>• 2 = None</li> </ul>	Parity Default value: 0 (Even)

**Modbus (Continued)**

Address		Register		R/W	Unit	Type	Range	Description
dec	hex	dec	hex					
753	2F1	754	2F2	R/W	–	Uint16	<ul style="list-style-type: none"> <li>• 0 = Disabled</li> <li>• 1 = Enabled</li> </ul>	Automatic configuration Default value: 0 (Diabled)
754	2F2	755	2F3	R/W	–	Uint16	<ul style="list-style-type: none"> <li>• 0 = OFF</li> <li>• 1 = ON</li> </ul>	Disable modbus write Default value: 0 (OFF)  <b>NOTE:</b> This register is only accessible in write mode only using the Modbus/98 protocol (See Safety standards compliance requirements, page 104). It is accessible in read only mode using standard Modbus.

**Insulation monitoring registers**

Address		Register		R/W	Unit	Type	Range	Description
dec	hex	dec	hex					
1020...-1021	3F-C...3FD	1021...10-22	3FD...3FE	R	Ohm	Float32	–	Resistance  The value NaN (Not a Number) 0xFFC00000 is returned during the auto-test.
1022...-1023	3F-E...3FF	1023...10-24	3FF..400	R	nF	Float32	–	<b>NOTE:</b>  Applicable for IM400, IM400C, and IM400L. Capacitance  The value NaN (Not a Number) 0xFFC00000 is returned during the auto-test.
1026	402	1027	403	R	–	Uint16	<ul style="list-style-type: none"> <li>• 0 = equal</li> <li>• 1 = under</li> <li>• 2 = over</li> <li>• 3 = understrict</li> <li>• 4= overstrict</li> </ul>	R equality
1027	403	1028	404	R	–	Uint16	<ul style="list-style-type: none"> <li>• 0 = equal</li> <li>• 1 = under</li> <li>• 2 = over</li> <li>• 3 = understrict</li> <li>• 4= overstrict</li> </ul>	<b>NOTE:</b>  Applicable for IM400, IM400C, and IM400L. C equality
1029	405	1030	406	R	V	Float32	–	RMS Voltage to ground
1031	407	1032	408	R	V	Float32	<ul style="list-style-type: none"> <li>• 0 = Injection active</li> <li>• 1 = Injection inactive</li> </ul>	Injection status

## Insulation alarm

Address		Register		R/W	Unit	Type	Range	Description
dec	hex	dec	hex					
1100	44C	1101	44D	R	–	Uint16	<ul style="list-style-type: none"> <li>• 0 = No alarm</li> <li>• 1 = Insulation alarm active</li> <li>• 2 = Preventive insulation alarm active</li> <li>• 4 = Transient insulation alarm active</li> <li>• 8 = Insulation alarm acknowledged</li> </ul>	Insulation alarm
1102	44E	1103	44F	R	–	Uint16	–	Product alarm status <ul style="list-style-type: none"> <li>• Bit 1 - Status This bit is set for any of the following states:               <ul style="list-style-type: none"> <li>◦ Active alarm</li> <li>◦ Active preventive alarm</li> <li>◦ Alarm acknowledged</li> <li>◦ First measurement</li> </ul> </li> <li>• Bit 13 - System error This bit is set for the following states:               <ul style="list-style-type: none"> <li>◦ Disconnected injection</li> <li>◦ Over voltage</li> <li>◦ Over capacitance</li> </ul> </li> <li>• Bit 14 - Product error This bit is set for auto test failure state.</li> <li>• Bit 15 - Injection disabled</li> </ul>
1103	44F	1104	450	R	–	Uint16	–	Compliment for product alarm status

**Insulation alarm (Continued)**

Address		Register		R/W	Unit	Type	Range	Description
dec	hex	dec	hex					
1104...-1105	450...45-1	1105...1-106	451...452	R	–	Uint32	0...0xFFFFFFFF	Status counter
1110...1-111	456...45-7	1111...1-112	457...458	R	–	Uint32	–	Product status <ul style="list-style-type: none"> <li>• 0 - No alarm</li> <li>• Bit 1 - Active alarm</li> <li>• Bit 2 - Active pre-alarm</li> <li>• Bit 3 - Transient alarm</li> <li>• Bit 4 - Alarm acknowledged</li> <li>• Bit 5 - Reserved</li> <li>• Bit 6 - Reserved</li> <li>• Bit 7 - Reserved</li> <li>• Bit 8 - Reserved</li> <li>• Bit 9 - First measurement</li> <li>• Bit 10 - Reserved</li> <li>• Bit 11 - Reserved</li> <li>• Bit 12 - Reserved</li> <li>• Bit 13 - Auto test</li> <li>• Bit 14 - Reserved</li> <li>• Bit 15 - Injection disable</li> <li>• Bit 16 - Reserved</li> <li>• Bit 17 - Disconnected injection</li> <li>• Bit 18 - Over limit capacitance</li> <li>• Bit 19 - Over voltage</li> <li>• Bit 20 - Reserved</li> <li>• Bit 21 - Reserved</li> <li>• Bit 22 - Reserved</li> <li>• Bit 23 - Reserved</li> <li>• Bit 24 - Reserved</li> <li>• Bit 25 - Product error</li> <li>• Bit 26 - Reserved</li> <li>• Bit 27 - Reserved</li> <li>• Bit 28 - Reserved</li> <li>• Bit 29 - Reserved</li> <li>• Bit 30 - Reserved</li> <li>• Bit 31 - HV1 and HV2 open</li> <li>• Bit 32 - Power Down</li> </ul>

**Diagnostics**

Address		Register		R/W	Unit	Type	Range	Description
dec	hex	dec	hex					
2000	7D0	2001	7D1	W	–	Uint16	0xA456 = run auto-test	Run the auto-test of the product without testing the relay (same as the auto-test cycle).
2001...-2004	7D1...7-D4	2002...2-005	7D2...7D5	R	–	Date/Time	–	Total uptime since first power up of product.  Registers correspond to (result - 01/01/2000) = total uptime.  TI081 date format (See Date and time (TI081 format), page 92)
2005...-2006	7D5...7-D6	2006...2-007	7D6...7D7	R	–	Uint32	–	Total number of power cycles since first power-up of the product
2050	802	2051	803	W	–	Uint16	–	Write 0x1919 to reset factory settings (default factory settings)

**Diagnostics (Continued)**

Address		Register		R/W	Unit	Type	Range	Description
dec	hex	dec	hex					
2051	803	2052	804	W	–	Uint16	–	Write 0xF0A1 to reset all logs
2052	804	2053	805	W	–	Uint16	–	Write 0x25AB to reset all graphs

**CRC**

Address		Register		R/W	Unit	Type	Range	Description
dec	hex	dec	hex					
2500...- 2501	9C4...9- C5	2501...2- 502	9C5...9C6	R	–	Uint32	–	Application CRC value.
2502...- 2503	9C6...9- C7	2503...2- 504	9C7...9C8	R	–	Uint32	–	Boot CRC value

**Settings**

Address		Register		R/W	Unit	Type	Range	Description
dec	hex	dec	hex					
2997...- 2998	BB5... BB6	2998...2- 999	BB6...BB7	R	–	Uint16	–	Total number of settings changed since first power-up. Incremented by 1 for each change of one or several parameters.
3000	BB8	3001	BB9	R/W	–	Uint16	<ul style="list-style-type: none"> <li>• 0 = Normally open</li> <li>• 1 = Normally closed</li> <li>• 2 = OFF</li> </ul>	Injection inhibition Default value: 0 (Normally open)
3001	BB9	3002	BBA	R/W	–	Uint16	<ul style="list-style-type: none"> <li>• 1 = Standard</li> <li>• 2 = Failsafe</li> </ul>	Insulation alarm relay logic command Default value: 2 (Failsafe)
3002...- 3003	BBA... BBB	3003...3- 004	BBB... BBC	R/W	Ohm	Uint32	0.04...500 kΩ	Insulation alarm threshold Default value: 1 kΩ
3004...- 3005	BBC... BBD	3005...3- 006	BBD... BBE	R/W	Ohm	Uint32	<ul style="list-style-type: none"> <li>• 1 kΩ...1 MΩ</li> <li>• 0xFFFFFFFF = OFF</li> </ul>	Preventive alarm threshold OFF is used to deactivate the preventive alarm. Default value: 0xFFFFFFFF
3007	BBF	3008	BC0	R/W	s	Uint16	0...7200 s	Insulation alarm time delay (in seconds) Default value: 0 s
3008	BC0	3009	BC1	R/W	–	Uint16	For IM400, IM400C, and IM400L: <ul style="list-style-type: none"> <li>• 0 = 4s</li> <li>• 1 = 40s</li> <li>• 2 = 400s</li> </ul> For IM400THR and IM400LTHR: <ul style="list-style-type: none"> <li>• 0 = 2s</li> <li>• 1 = 20s</li> <li>• 2 = 200s</li> </ul>	Network filtering For IM400, IM400C, and IM400L: Default value: 1(40s)  For IM400THR and IM400LTHR: Default value: 1(20s)
3009	BC1	3010	BC2	R/W	Hz	Uint16	<ul style="list-style-type: none"> <li>• 0 Hz</li> <li>• 50 Hz</li> <li>• 60 Hz</li> <li>• 400 Hz</li> </ul>	Network frequency Default value: 50 Hz
3014	BC6	3015	BC7	R/W	–	Uint16	0000...9999	Password Default value: 0000

## Settings (Continued)

Address		Register		R/W	Unit	Type	Range	Description
dec	hex	dec	hex					
3015	BC7	3016	BC8	R/W	–	Uint16	<ul style="list-style-type: none"> <li>0 = OFF</li> <li>1 = ON</li> </ul>	Password protection Default value: 0 (password protection deactivated)
3016	BC8	3017	BC9	R/W	–	Uint16	<ul style="list-style-type: none"> <li>0 = English</li> <li>1 = French</li> <li>2 = Spanish</li> <li>3 = Russian</li> <li>4 = Chinese</li> <li>5 = Italian</li> <li>6 = German</li> <li>7 = Portuguese</li> </ul>	Interface language Default value: 0 (English)
3017	BC9	3018	BCA	R/W	%	Uint16	10...100%	Screen contrast Default value: 50%
3018	BCA	3019	BCB	R/W	%	Uint16	10...100%	Screen brightness. Default value: 100%
3019	BCB	3020	BCC	R/W	–	Uint16	For IM400 and IM400L: <ul style="list-style-type: none"> <li>0 = None</li> <li>1 = HV1700</li> <li>2 = PHT1000</li> </ul> For IM400C: <ul style="list-style-type: none"> <li>0 = None</li> <li>1 = HV1700C</li> <li>2 = PHT1000</li> <li>3 = VA2</li> </ul> For IM400THR and IM400LTHR: <ul style="list-style-type: none"> <li>4 = P1N</li> <li>5 = None</li> </ul>	High voltage adapter Default value: 0 (no adapter) For IM400THR and IM400LTHR: Default value: 5 (no adapter)
3021	BCD	3022	BCE	R/W	s	Uint16	0...7200 s	Preventive insulation alarm time delay (in seconds) Default value: 0 s
3023	BCF	3024	BD0	R/W	–	Uint16	<ul style="list-style-type: none"> <li>0 = Disabled</li> <li>1 = Enabled</li> </ul>	Acknowledge alarm relay Default value: 1 (Enabled)
3024	BD0	3025	BD1	R/W	–	Uint16	For IM400THR and IM400LTHR: <ul style="list-style-type: none"> <li>0 = 20V</li> <li>1 = 40V</li> <li>2 = 60V</li> <li>3 = 80V</li> </ul>	<b>NOTE:</b> Applicable for IM400THR and IM400LTHR. Injection voltage Default value: 2 (60V)
3025	BD1	3026	BD2	R/W	–	Uint16	For IM400 and IM400L: <ul style="list-style-type: none"> <li>0 = Power</li> <li>1 = Control</li> </ul> For IM400C: <ul style="list-style-type: none"> <li>0 = Power</li> <li>1 = Control</li> <li>2 = Adaptive</li> </ul> For IM400THR and IM400LTHR: 3 = THR	User application Default value: 0 (Power) For IM400THR and IM400LTHR: Default value: 3 (THR)
3026	BD2	3027	BD3	R/W	–	Uint16	<ul style="list-style-type: none"> <li>0 = OFF</li> <li>1 = ON</li> </ul>	Disconnected injection detection Default value: 0 (OFF)

## Settings (Continued)

Address		Register		R/W	Unit	Type	Range	Description
dec	hex	dec	hex					
3027	BD3	3028	BD4	R/W	–	Uint16	<ul style="list-style-type: none"> <li>• 0 = OFF</li> <li>• 1 = XD</li> <li>• 3 = IFL</li> </ul>	<p><b>NOTE:</b></p> <p>Applicable for IM400, IM400L, and IM400C.</p> <p>Insulation fault locating</p> <p>Default value: 0 (OFF)</p>
3028	BD4	3029	BD5	R/W	–	Uint16	0...50	<p><b>NOTE:</b></p> <p>Applicable for IM400, IM400L, and IM400C.</p> <p>Number of IFL</p> <p>Default value: 0</p>
3029	BD5	3030	BD6	R/W	–	Uint16	<ul style="list-style-type: none"> <li>• 0 = OFF</li> <li>• 1 = ON</li> </ul>	<p>Auto-test: test with relays</p> <p>Default value: 1 (ON)</p>
3030...- 3031	BD6... BD7	3031...3- 032	BD7... BD8	R/W	Ω	Uint32	<ul style="list-style-type: none"> <li>• 0.1...500 kΩ</li> <li>• 0xFFFFFFFF = OFF</li> </ul>	<p>HRG (Grounding resistance for impedant ungrounded system)</p> <p>Default value: 0xFFFFFFFF = OFF (Disabled)</p>
3032	BD8	3033	BD9	R/W	–	Uint16	<ul style="list-style-type: none"> <li>• 0 = OFF</li> <li>• 1 = ON</li> </ul>	<p>Alarm when injection inhibition is active.</p> <p>Default value: 1 (ON)</p>
3033	BD9	3034	BDA	R/W	–	Uint16	<ul style="list-style-type: none"> <li>• 0 = OFF</li> <li>• 1 = ON</li> </ul>	<p>Screen saver activation</p> <p>Default value: 0 (OFF)</p>
3034	BDA	3035	BDB	R/W	s	Uint16	30...3600 s	<p>Screen saver delay</p> <p>Default value: 300 s (5 min)</p>
3035	BDB	3036	BDC	R/W	–	Uint16	<ul style="list-style-type: none"> <li>• 0 = OFF</li> <li>• 1 = ON</li> </ul>	<p>Inhibition input</p> <p>Default value: 0 (OFF)</p>
3036	BDC	3037	BDD	R/W	Ω	Uint16	0...50 KΩ	<p><b>NOTE:</b></p> <p>Applicable for IM400THR and IM400LTHR.</p> <p>Transformer primary DC resistance.</p> <p>Default value: 0</p>
3037	BDD	3038	BDE	R/W	–	Uint16	<ul style="list-style-type: none"> <li>• 0</li> <li>• 1</li> <li>• 3</li> </ul>	<p><b>NOTE:</b></p> <p>Applicable for IM400THR and IM400LTHR.</p> <p>Number of transformers.</p> <p>Default value: 0</p>
3038...- 3039	BDE... BDF	3039...3- 040	BDF...BE0	R/W	Ω	Float32	–	<p><b>NOTE:</b></p> <p>Applicable for IM400THR and IM400LTHR.</p> <p>Adapter offset resistance.</p> <p>Default value: 0</p>
3040	BE0	3041	BE1	R/W	–	Uint16	<ul style="list-style-type: none"> <li>• 1 = Standard</li> <li>• 2 = Failsafe</li> <li>• 2 = Mirror</li> </ul>	<p>Logical command of the preventive insulation alarm relay</p> <p>Default value: 2 (Failsafe)</p>
3041	BE1	3042	BE2	R/W	s	Uint16	0...7200 s	<p>Preventive insulation alarm time delay (in seconds)</p> <p>Default value: 0 s</p>

**Settings (Continued)**

Address		Register		R/W	Unit	Type	Range	Description
dec	hex	dec	hex					
3044...-3045	BE4...BE5	3045...3-046	BE5...BE6	R/W	–	Uint32	–	Insulation alarm relay bit map <ul style="list-style-type: none"> <li>• Bit0 - Preventive insulation alarm</li> <li>• Bit1..3 - Reserved</li> <li>• Bit4 - Insulation alarm (read only)</li> <li>• Bit5..7 - Reserved</li> <li>• Bit8 - Injection inhibit</li> <li>• Bit9..15 - Reserved</li> <li>• Bit16 - System error</li> <li>• Bit17..23 - Reserved</li> <li>• Bit24 - Product error</li> <li>• Bit25..31 - Reserved</li> </ul>
3046...-3047	BE6...BE7	3047...3-048	BE7...BE8	R/W	–	Uint32	–	Preventive insulation alarm relay bit map <ul style="list-style-type: none"> <li>• Bit0 - Preventive insulation alarm (read only)</li> <li>• Bit1..3 - Reserved</li> <li>• Bit4 - Insulation alarm</li> <li>• Bit5..7 - Reserved</li> <li>• Bit8 - Injection inhibit</li> <li>• Bit9..15 - Reserved</li> <li>• Bit16 - System error</li> <li>• Bit17..23 - Reserved</li> <li>• Bit24 - Product error</li> <li>• Bit25..31 - Reserved</li> </ul>
3048	BE8	3049	BE9	R/W	–	Uint16	<ul style="list-style-type: none"> <li>• 0 = Internal Inhibition</li> <li>• 1 = External Inhibition</li> </ul>	Inhibition type Default value: 0 (Internal Inhibition)

**Trending**

Address		Register		R/W	Unit	Type	Range	Description
dec	hex	dec	hex					
12000	2EE0	12001	2EE1	R	–	Uint16	Hour trending	Number of new records in trending buffer not yet read by the Modbus master.
12001	2EE1	12002	2EE2	R	–	Uint16	Day trending	Number of new records in trending buffer not yet read by the Modbus master.
12010.-...12011	2EE-A...2EE-B	12011...-12012	2EE-B...2EEC	R	–	Float32	Hour value	Reading hour values Each reading decrements the counter at address 12000.
12012	2EEC	12013	2EED	R	–	Uint16	Hour value status	Status: <ul style="list-style-type: none"> <li>• 0x0000 - Data not initialized</li> <li>• 0x0001 - Data invalid</li> <li>• 0x0002 - Data valid</li> <li>• 0x0003 - Power supply loss after this value</li> <li>• 0x0004 - Injection disable after this value</li> <li>• 0x0005 - Power supply loss and injection disable after this value</li> </ul>

## Trending (Continued)

Address		Register		R/W	Unit	Type	Range	Description
dec	hex	dec	hex					
12013...12014	2EE-D...2EE-E	12014...12015	2EEE...2-EEF	R	–	Float32	Day value	Reading day values Each reading decrements the counter at address 12031.
12015	2EEF	12016	2EF0	R	–	Uint16	Day value status	Status: <ul style="list-style-type: none"> <li>• 0x0000 - Data not initialized</li> <li>• 0x0001 - Data invalid</li> <li>• 0x0002 - Data valid</li> <li>• 0x0003 - Power supply loss after this value</li> <li>• 0x0004 - Injection disable after this value</li> <li>• 0x0005 - Power supply loss and injection disable after this value</li> </ul>

## Logging

Address		Register		R/W	Unit	Type	Range	Description
dec	hex	dec	hex					
19996...19997	4E1-C...4E1-D	19997...19998	4E1D...4-E1E	R	–	Uint32	–	Roll over counter
19998...19999	4E1-E...4E1F	19999...20000	4E1F...4-E20	R	–	Uint32	1...240	Number of event records
20001	4E21	20002	4E22	R	–	Uint16	–	Most recent record number
20002...20013	4E22...4E2D	20003...20014	4E23...4-E2E	R	–	Record	–	Record 1
20014...20025	4E2-E...4E39	20015...20026	4E2F...4-E3A	R	–	Record	–	Record 2
...								
20710...20721	50E6...50F1	20711...20722	50E7...50-F2	R	–	Record	–	Record 60
21430...21441	53B6...53C1	21431...21442	53B7...53-C2	R	–	Record	–	Record 120

## Alarm event records

Each event is stored using two records:

- A "primary" record, which is created when the insulation alarm or preventive insulation alarm occurs. This contains the insulation value.
- A "secondary" record, which is created for the following type of events:
  - Acknowledged insulation alarm
  - Transient insulation alarm
  - Power failure or power cycle
  - Product error
  - Injection disable
  - Over capacitance
  - Over voltage

**NOTE:** The listed secondary records are applicable for insulation alarm and preventive insulation alarm.

**Description of an Event Record in the Log**

Register	Unit	Type	Range	Description
Word 1	–	Uint16	1...65535	Event record number
Word 2 Word 3 Word 4 Word 5	–	Uint64	–	Time tagging of event (using the same code as for the product date/time)
Word 6 Word 7	–	Uint32	<ul style="list-style-type: none"> <li>• 0x00...0xFF</li> <li>• 0x40, 0x20</li> <li>• 1020...1021, 1110</li> </ul>	Record identifier: <ul style="list-style-type: none"> <li>• Word 6, most significant byte: information for primary/secondary record. This field identifies the type of primary and secondary record.</li> <li>• Word 6, least significant byte: type of data stored in the Value field.</li> <li>• Word 7: address of the Modbus register that is the source of the data in the Value field.</li> </ul>
Word 8 Word 9 Word 10 Word 11	–	Uint64	–	Depending on the type of record (primary or secondary): <ul style="list-style-type: none"> <li>• Primary record (when the event occurs): Insulation resistance value (in Ohm) when the event occurred (encoded in Float32 in the last 2 registers).</li> <li>• Secondary record (for the earlier list of events) (encoded in Uint32 in the last 2 registers)</li> </ul>
Word 12	–	Uint16	1...65534	Primary/secondary record identifier for the event: <ul style="list-style-type: none"> <li>• In the case of a primary record for an event, this identifier is an odd integer; numbering starts at 1 and the number is incremented by 2 for each new event.</li> <li>• In the case of a secondary record for an event, this identifier is equal to the primary record identifier plus 1.</li> </ul>

For the Word 6 (most significant bytes), the ranges are 0x00...0xFF. The assigned bytes for the primary and secondary events are listed as follows:

Event	Byte
<b>Primary events</b>	
Preventive insulation alarm	0x01
Insulation alarm	0x02
<b>Secondary events</b>	
Nominal	0x21
Transient insulation alarm	0x22
Acknowledged insulation alarm	0x23
Injection disabled	0x24
Over capacitance	0x25
Over voltage	0x26
Product error	0x27
Power failure or power cycle	0x28
Preventive Nominal	0x41
Preventive transient insulation alarm	0x42
Preventive acknowledged insulation alarm	0x43
Preventive injection disabled	0x44
Preventive over capacitance	0x45
Preventive over voltage	0x46
Preventive product error	0x47
Preventive power failure or power cycle	0x48

## Example of an event

The next 2 records relate to an example insulation alarm that occurred on October 1, 2010 at 12:00 pm and was acknowledged at 12:29 pm.

### Record number: 1

Address		Register		Unit	Type	Value	Description
dec	hex	dec	hex				
20002	4E22	20003	4E23	–	Uint16	1	Record number
20003	4E23	20004	4E24	–	Uint64	<ul style="list-style-type: none"> <li>• 10</li> <li>• 0</li> <li>• 10</li> <li>• 1</li> <li>• 12</li> <li>• 0</li> <li>• 0</li> </ul>	Date when insulation alarm occurred (October 1, 2010, 12:00 pm)
20007	4E27	20008	4E28	–	Uint32	<ul style="list-style-type: none"> <li>• 0x02</li> <li>• 0x40</li> <li>• 1020</li> </ul>	Record identifier: <ul style="list-style-type: none"> <li>• Primary record plus secondary record</li> <li>• Float32 value (insulation resistance)</li> <li>• Value of register 1020 (register for insulation resistance monitoring)</li> </ul>
20009	4E29	20010	4E2A	Ohm	Uint64	10000	Insulation resistance value at the time of the insulation alarm
20013	4E2D	20014	4E2E	–	Uint16	1	Secondary record identifier for the event

### Record number: 2

Address		Register		Unit	Type	Value	Description
dec	hex	dec	hex				
20014	4E2E	20015	4E2F	–	Uint16	2	Record number
20015	4E2F	20016	4E30	–	Uint64	<ul style="list-style-type: none"> <li>• 10</li> <li>• 0</li> <li>• 10</li> <li>• 1</li> <li>• 12</li> <li>• 29</li> <li>• 0</li> </ul>	Date when insulation alarm acknowledged (October 1, 2010, 12:29 pm)
20019	4E33	20020	4E34	–	Uint32	<ul style="list-style-type: none"> <li>• 0x23</li> <li>• 0x20</li> <li>• 1110</li> </ul>	Record identifier: <ul style="list-style-type: none"> <li>• Secondary record</li> <li>• Uint32 value (alarm acknowledged)</li> <li>• 1110 register value ( product status register).</li> </ul>
20021	4E35	20022	4E36	–	Uint64	8	Value of insulation alarm register at the time of insulation alarm acknowledgement
20025	4E39	20026	4E3A	–	Uint16	2	Secondary record identifier for the event

## Date and time (TI081 format)

The following structure is used for date-time information exchange using Modbus protocol.

The date/time are encoded in 8 bytes as follows:

b15	b14	b13	b12	b11	b10	b09	b08	b07	b06	b05	b04	b03	b02	b01	b00	Word
0	0	0	0	0	0	0	0	R4	Y	Y	Y	Y	Y	Y	Y	Word 1
0	0	0	0	M	M	M	M	WD	WD	WD	D	D	D	D	D	Word 2
SU	0	0	H	H	H	H	H	iV	0	mn	mn	mn	mn	mn	mn	Word 3
ms	ms	ms	ms	ms	ms	ms	ms	ms	ms	ms	ms	ms	ms	ms	ms	Word 4

- R4: Reserved bit (reserved by IEC870-5-4), set to 0
- Y - Years
  - 1 byte
  - Value from 0...127 (1/1/2000 to 31/12/2127)
- M - Months
  - 1 byte
  - Value from 1...12
- D - Days
  - 1 byte
  - Value from 1...31
- H - Hours
  - 1 byte
  - Value from 0...23
- mn - Minutes
  - 1 byte
  - Value from 0...59
- ms - Milliseconds
  - 2 byte
  - Value from 0...59999

The following fields are in CP56Time2a standard and are considered as optional:

- WD - Week Day
  - If not used, set to 0 (1 = Sunday, 2 = Monday...)
  - Value from 1...7
- SU - Summertime
  - If not used, set to 0 (0 = standard time, 1 = summertime)
  - Value from 0...1
- iV - Validity of the information contained in the structure
  - If not used, set to 0 (0 = valid, 1 = not valid or not synchronized in system)
  - Value from 0...1

This information is encoded in binary form.

# Configuring IM400 series device using PowerLogic™ ION Setup

## Overview

ION Setup is a device configuration tool that can be downloaded for free at [www.se.com](http://www.se.com).

See the ION Setup online help or in the ION Setup device configuration guide. To download a copy, go to [www.se.com](http://www.se.com) and search for ION Setup device configuration guide.

Configure the device using the PowerLogic™ ION Setup.

### **⚠ WARNING**

#### **UNINTENDED OPERATION**

- Do not use the ION Setup software and associated devices for critical control or protection applications where human or equipment safety relies on the operation of the control circuit.
- Do not rely solely on the ION Setup data to determine if your power system is functioning correctly or meeting all applicable standards and compliances.
- Do not use the ION Setup control for time-critical functions because delays can occur between the time a control action is initiated and when that action is applied.
- Do not incorrectly configure the ION Setup and its associated devices.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

### **NOTICE**

#### **LOSS OF DATA**

Before changing device configuration values, ensure that all recorded data has been saved in a secure location.

**Failure to follow these instructions can result in equipment damage.**

### **NOTICE**

#### **LOSS OF CONTROL**

Before changing scale factors, disable all affected alarms and ensure that any recorded data has been saved. Changing scale factors may affect alarm status and any recorded data.

**Failure to follow these instructions can result in equipment damage.**

## Setting up a network site

You can communicate with the IM400 series device using the RS-485 gateway. A gateway device, such as an EGX or ION7650, must be configured first to provide communications access. The gateway uses the RS-485 protocol to communicate on its serial port.

#### **Prerequisites:**

- Devices in the system are wired correctly.
- Communications for the devices are properly configured.

To set up a network site:

1. Start the ION Setup in Network mode.
2. Select the **System** icon and select **Insert Item**.
3. Select the **Site** and then select **OK**.  
The **New Site** dialog appears.
4. Enter a descriptive name for the site in the **Name** dialog. Then, choose **Serial**.
5. Select the **comm port** from the drop down list.
6. Select the **Port Settings** from the drop down list.
7. Select the **Baud** value from the drop down list and then select **OK**.

## Adding IM400 series device to a site

You can add IM400 series device to a site in the network mode.

To add IM400 series device to a site:

1. Start the ION Setup in Network mode.
2. Select the site icon and select **Insert Item**.
3. Select the **Device** and then select **OK**.  
The **New Device** dialog appears.
4. Enter a descriptive name for your device in the dialog box **Name** (for example, IM400).
5. Select the **Vigilohm IMD Insulation Monitoring Device** from the drop down list for the **Type**.
6. Enter a value between **1 - 247** in the **Unit ID** field.
7. Select the **Group** you want to assign the device from the drop down list, and then select **OK** to go back to the Network Viewer.

### NOTE:

- You may need to change the template option if the device setup screens do not correctly reflect your device **Type**.
- The **Display** tab dialog box will highlight the current **Template Options** when it has established communication with the device. Select the appropriate **Template Options (Default / IM400)** for the device and then select **OK** to go back to the Network Viewer.

## IM400 series configuration screens

### Configuring the clock parameters (Date/Time)

Configure the date and time of the internal clock of a device and synchronize the date and time of the devices in your system with your workstation using the **Clock** screen.

**NOTE:** When the power to your device is interrupted, you might see a dialog that prompts you to reset the date and time.

To configure the clock parameters (Date/Time):

1. Select **Clock** to open the dialog showing the list of parameters.

2. Select a parameter and select **Edit** to open its specific setup dialog.

Parameters	Options	Description
<b>Device</b>	<b>Device Date</b> <b>Device Time</b>	Select the device date and time.  <b>NOTE:</b> The <b>Device</b> changes to <b>Update to</b> and shows the date and time that will be sent to the device.
<b>Sync to</b>	<b>UTC (Universal Coordinated Time)</b> <ul style="list-style-type: none"> <li>• <b>Device time zone:</b> Not applicable</li> </ul>	UTC is the same as Greenwich Mean Time (GMT).  <b>NOTE:</b> Daylight Saving Time and time zones do not apply to UTC
	<b>PC Standard Time (No DST)</b> <ul style="list-style-type: none"> <li>• <b>Device time zone</b> <ul style="list-style-type: none"> <li>◦ <b>Same as this PC</b></li> <li>◦ <b>Behind this PC</b> <ul style="list-style-type: none"> <li>– <b>Time Offset</b></li> </ul> </li> <li>◦ <b>Ahead of this PC</b> <ul style="list-style-type: none"> <li>– <b>Time Offset</b></li> </ul> </li> </ul> </li> </ul>	PC Standard Time is the time on your computer without Daylight Saving Time applied. If the device you are programming is in a different time zone from your computer, select the appropriate time zone correction.  Select the offset time in hours (0 to 23) and minutes (0, 15, 30, 45). For time zone ahead of this PC, the time is displayed with + sign (example: +6h45min) and time zone behind this PC, the time is displayed with - sign (example: -6h45min).
	<b>PC Local Time (DST if applicable)</b> <ul style="list-style-type: none"> <li>• <b>Device time zone</b> <ul style="list-style-type: none"> <li>◦ <b>Same as this PC</b></li> <li>◦ <b>Behind this PC</b> <ul style="list-style-type: none"> <li>– <b>Time Offset</b></li> </ul> </li> <li>◦ <b>Ahead of this PC</b> <ul style="list-style-type: none"> <li>– <b>Time Offset</b></li> </ul> </li> </ul> </li> </ul>	PC Local Time is the time on your computer with Daylight Saving Time applied. If the device you are programming is in a different time zone from your computer, select the appropriate time zone correction.  Select the offset time in hours (0 to 23) and minutes (0, 15, 30, 45). For time zone ahead of this PC, the time is displayed with + sign (example: +6h45min) and time zone behind this PC, the time is displayed with - sign (example: -6h45min).
	<b>Synchronization Time</b>	The synchronization time and date of the device.

3. Select **OK**, and then select **Send** to save your changes to the device.

**NOTE:** When changes are not saved to the device, the status bar on the bottom left screen shows **Download Incomplete**.

## Configuring the front panel display settings

Configure the language, display contrast, and display brightness standard selection using the **Front Panel Display** screen.

To configure the front panel display settings:

1. Select **Front Panel Display** to open the dialog showing the list of parameters.
2. Select a parameter and select **Edit** to open its specific setup dialog.

Parameters	Options	Description
<b>Language</b>	<b>English</b> <b>French</b> <b>Spanish</b> <b>Russian</b> <b>Chinese</b> <b>Italian</b> <b>German</b> <b>Portuguese</b>	Select the language you want the device to display.
<b>Display Contrast</b>	<b>10 to 100</b>	Enter a value from 10 (brightest) to 100 (dimpest).
<b>Display Brightness</b>	<b>10 to 100</b>	Enter a value from 10 (dimpest) to 100 (brightest).
<b>Screensaver Activation</b>	<b>On</b> <b>Off</b>	Turn screensaver activation on or off.
<b>Screensaver Delay</b>	<b>30 to 3600</b>	Set the screensaver delay.

3. Select **OK**, and then select **Send** to save your changes to the device.

**NOTE:** When changes are not saved to the device, the status bar on the bottom left screen shows **Download Incomplete**.

## Configuring the I/O configuration parameters

Configure the input and ourputparameters using the **I/O Configuration** screen.

To configure the I/O configuration parameters:

1. Select the **I/O Configuration** folder to open the dialog showing the list of parameters.
2. Choose the parameters you need to modify and select **Edit** to open its specific setup dialog.

Parameters	Options	Description
Insulation Alarm Relay	Standard connection Failsafe	Configure the insulation alarm relay mode based on the insulation status.
Preventive Alarm Relay	Standard connection Failsafe Mirror	Configure the preventive alarm relay mode based on the preventive status.
Injection Inhibition Input	Normally open Normally closed	Injection exclusion is controlled by the device's inhibition input, which is connected to the auxiliary contacts of the circuit breakers.
Insulation Alarm Ack Relay	Off On	Turn insulation alarm acknowledgment relay on or off.
Correction Fault Signal	Off On	Turn correction fault signal acknowledgment on or off.
Self-Test with Relays	Off On	Turn self-test with relays acknowledgment on or off.

3. Select **OK**, and then select **Send** to save your changes to the device.

**NOTE:** When changes are not saved to the device, the status bar on the bottom left screen shows **Download Incomplete**.

## Configuring the insulation alarm setup

Configure the alarm parameters using the **Insulation Alarm Setup** screen.

To configure the insulation alarm setup:

1. Select the **Insulation Alarm Setup** folder to open the dialog showing the list of parameters.

2. Choose the parameters you need to modify and select **Edit** to open its specific setup dialog.

Parameters	Options	Description
<b>Insulation Alarm Threshold</b>	<b>0.1 KOhm to 500 KOhm</b> (Default: 0.1 KOhm)	Set the insulation alarm threshold for all the alarm parameters.
<b>Insulation Alarm Delay</b>	<b>0 seconds to 2 hours</b> (Default: 0 seconds)	Set the insulation alarm delay for all the alarm parameters.
<b>Preventive Alarm Threshold</b>	<b>Deactivated to 1 MOhm</b> (Default: Deactivated)	Set the preventive alarm threshold for all the alarm parameters.
<b>Preventive Alarm Delay</b>	<b>0 seconds to 2 hours</b> (Default: 0 seconds)	Set the preventive alarm delay for all the alarm parameters.
<b>Disconnected Injection Detection</b>	<b>On</b> <b>Off</b>	Turn disconnected injection detection on or off.

3. Select **OK**, and then select **Send** to save your changes to the device.

**NOTE:** When changes are not saved to the device, the status bar on the bottom left screen shows **Download Incomplete**.

## Configuring the network settings

Configure the network Parameters using the **Network** screen.

To configure the network settings:

1. Select **Network** to open the dialog showing the list of parameters.

2. Select a parameter and select **Edit** to open its specific setup dialog.

Parameters	Options	Description
<b>Application</b>	Power Control Circuits Photovoltaic	To optimize the measurement performance of the device according to the application, you can set the application parameter depending on the type of application on which the device is installed.
<b>Filtering</b>	Short (4 seconds) Medium (40 seconds) Long (400 seconds)	Set the filtering parameter as per the monitored application.
<b>Insulation Fault Locating</b>	On Off	Turn insulation fault locating on or off.
<b>Voltage Adaptor</b>	None IM400-1700 PHT1000	Set voltage adaptor to monitor ungrounded power system with a rated voltage higher than 480 V AC/DC.
<b>System Frequency</b>	DC 50 Hz 60 Hz 400 Hz	Set the rated system frequency of the monitored application.
<b>Injection Voltage</b>	Min (15 V) Low (33 V) Medium (120 V) Max (150 V)	Set the level of measurement voltage and measurement current that are injected between the monitored power system and ground.
<b>Grounding Resistance (HRG)</b>	Off to 500 kOhm	The device compensates the measured insulation resistance with the value of the grounding resistance.

3. Select **OK**, and then select **Send** to save your changes to the device.

**NOTE:** When changes are not saved to the device, the status bar on the bottom left screen shows **Download Incomplete**.

## Generating the device configuration reports

Generate reports for the current device configuration using the **Reports** screen. You can use this screen to view, print, and save a report file that records the device's current configuration.

To generate the device configuration reports:

1. Select **Reports** to open the dialog.
2. Select the **Display** to retrieve the device configuration report.  
The ION Setup retrieves and uploads report details from your device to the screen. Depending on the data, this process may take a few moments or several minutes to complete. After completion, all report parameters and their respective values will be displayed.
3. Select **Save As** to save the configuration report as a **.TXT** file, or select **Print** to print the configuration report.

## Configuring the device resets

When you initialize a device, it will reset or disable certain parameters. Make sure to read the warning message that appears, showing the parameters that are about to be reset.

1. Select **Resets** to open the dialog showing the list of parameters.
2. Select individual reset parameters or select reset all parameters and then select **Reset**.

Parameters	Options	Description
<b>Reset All Logs</b> <b>Reset Trending</b> <b>Perform Self-Test</b>	–	Set the resets parameter based on the monitored application.

3. Select **Proceed** to reset all commands.

# Commissioning, maintenance and troubleshooting

## Safety precautions

The following safety precautions must be thoroughly implemented before attempting to commission the system, repair electrical equipment or carry out maintenance.

Carefully read and follow the safety precautions described below.

### **DANGER**

#### **HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH**

- Apply appropriate Personal Protective Equipment (PPE) and follow safe electrical work practices. See NFPA 70E, CSA Z462 or other local standards.
- Turn off all power supplying this device and the equipment in which it is installed before working on or in the equipment.
- Always use a properly rated voltage sensing device to confirm that all power is off.

**Failure to follow these instructions will result in death or serious injury.**

### **NOTICE**

#### **EQUIPMENT DAMAGE**

- Do not open this unit.
- Do not attempt to repair any components of this product or any of its accessory products.

**Failure to follow these instructions can result in equipment damage.**

## Commissioning

### Validating correct insulation monitoring with exclusion management

To have proper insulation monitoring of the electrical power system, it is important that it is monitored by one insulation monitoring device at a time.

For most of the systems that do not include multiple incomers or coupling of multiple busbars, this is easily achieved because there is only one device in the system permanently active.

For systems with multiple incomers or power busbar coupling, the monitoring system embeds several devices (See). The exclusion/activation of each device according to the electrical power system configuration is managed through the injection inhibit contact. It is important at commissioning to validate that insulation of every part of the electrical power system is monitored by an active device and that the management of exclusion/activation of each device does not lead to a part of the power system monitored by more than one device or no device. This is to avoid insulation fault not being reported.

### Insulation metering and insulation fault detection testing

To verify the device is correctly installed and configured:

- Check the installation by connecting a known impedance between wiring terminals 1 and 3 of the device (10 k $\Omega$ ) and verifying that the impedance is correctly measured. For this test, do not connect the device to the monitored network.
- Check the insulation fault detection by strapping wiring terminals 1 and 3 of the device (creating a 0  $\Omega$  insulation fault). For this test, do not connect the device to the monitored network.

## Insulation alarm relay wiring testing

To verify the insulation alarm relay is correctly wired in the installation, perform a device test with the relay.

## Disconnected injection detection

By default, the disconnected injection detection parameter is set to **OFF**. This setting avoids the **Disconnected Injection Detected** message to display when installing and commissioning the device before connecting it to the power system and load.

According to the system or application requirements, you can enable the disconnected injection detection parameter (setting it to **ON**) when executing the final commissioning. Thus the device can continuously perform this check during operation and report any injection connection or wiring issue.

## HV1/HV2 wiring testing

The connection between the device and the voltage adaptors IM400-1700C, PHT1000, IM400VA2, or P1N is key for a correct behavior of device.

Check the wiring of HV1 and HV2 wiring terminals to the voltage adaptor. Connect a known impedance (for example, 10 k $\Omega$ ) between IM400-1700C wiring terminal 1 and the device wiring terminal 3, or between PHT1000 wiring terminal 3 and device wiring terminal 3, or between IM400VA2 wiring terminal 5 / terminal 1 (connecting terminal 5 and 1 together) and the device wiring terminal 3, or between P1N wiring terminal 2 and device wiring terminal 3. Check that the device correctly measures the impedance. For this test, do not connect IM400-1700C, PHT1000, IM400VA2, or P1N to the monitored power system.

## Protection password setting

To avoid any unintended operation by not authorized or untrained personnel, set the protection password.

## ON light indicator

If the **ON** light indicator is red, there is an error in the power system or your device.

The error is one of the following cases:


- Interruption of the injection circuit
- Auto test not OK
- Product error
- System error

- Over limit capacitance:
  - $C > 500 \mu\text{F}$
  - $C > 2,000 \mu\text{F}$  with IM400-1700C voltage adaptor or  $C > 5,000\mu\text{F}$  with IM400VA2 voltage adaptor in photovoltaic application

## Disconnected injection detection

The device displays a message if it does not detect an injection signal.

If the injection circuit of the device is interrupted, the display shows the following message and starts to flash:

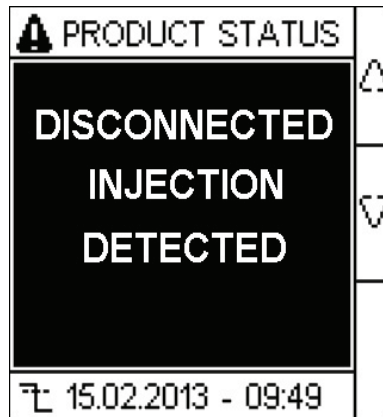

By default, the disconnected injection detection parameter is activated (parameter **Disconnect. Inj** is set to **ON**).

When installing and commissioning the unit and the electrical panel, before you plug the equipment to the electrical power system, set parameter **Disconnect. Inj.** to **OFF** to prevent the message from being displayed.

Depending on the demands of the electrical network or the application, during the final commissioning, you may need to reactivate the disconnected injection detection parameter (by selecting **Settings > Ins. Alarm > Disconnect. Inj.** set to **ON**). Therefore, the device constantly monitors during operation and reports any injection connection or wiring problem.

## Troubleshooting

There are some checks you can perform to try to identify potential issues with the device's operation.

The following table describes potential problems, their possible causes, checks you can perform and possible solutions for each. After referring to this table, if you cannot resolve the problem, contact your local Schneider Electric sales representative for assistance.

Potential problem	Possible cause	Possible solution
The device displays nothing when switched on.	No power supply to the device.	Check that the auxiliary power supply is present.
	The auxiliary power supply is not compliant.	Check the auxiliary voltage: $U = 110...480 \text{ Vac}$
The device notified an insulation fault, but your system shows no signs of abnormal behavior.	The insulation alarm threshold is not appropriate.	Check the value of the insulation alarm threshold. Modify the insulation alarm threshold as appropriate.
	The preventive alarm threshold for faults is not appropriate.	Check the value of the preventive insulation alarm threshold. Modify the preventive insulation alarm threshold as appropriate.

Potential problem	Possible cause	Possible solution
You deliberately created an insulation fault, but the device failed to detect it.	The resistance value used to simulate the fault is greater than the value of the insulation alarm threshold.	Use a resistance value that is lower than the insulation alarm threshold or modify the insulation alarm threshold.
	The fault is not detected between neutral and ground.	Start again ensuring you are between neutral and ground.
The product status LED is red and the display shows <b>DISCONNECTED INJECTION DETECTED</b> .	No electrical installation has been connected to the electrical panel when commissioning.	<ul style="list-style-type: none"> <li>• Check the connection on the injection terminal block (terminals 1 and 3) and restart the auto-test.</li> <li>• Disable the function during commissioning.</li> </ul>
	The injection wire or the ground wire for the device is cut.	
	The device considers an electrical power system with low capacitance and high resistance to be a disconnected injection.	
The product status LED is red and the display indicates that an error occurred during the auto-test.	The device's injection circuit is cut off.	Briefly disconnect the auxiliary power supply to the device.
Although the device is being supplied with power, the product status LED does not light up.	Faulty indicator light.	Restart the auto-test and check that the product status LED lights up briefly.
The alarm LED does not light up in the event of a fault.	Faulty indicator light.	Restart the auto-test and check that the alarm LED lights up briefly.
Nuisance alarms	Highly disturbed ungrounded power systems with potential power quality issues	Check the value of the filtering. Modify the filtering as appropriate.
Slow device response time	The filtering is not appropriate.	Check the value of the filtering. Modify the filtering as appropriate.

# Functional safety standards compliance

## Safety standards compliance requirements

### Introduction

The device is SIL 2 and SIL 1 certified in compliance with IEC 61508: 2010 (standard related to Functional Safety) and IEC 61557-15: 2014 (based on IEC 61508, specific for IT systems using IMDs and IFLs devices).

The classification of safety function:

Function	SIL
RIW (Remote Insulation Warning) Used with redundant actuators	SIL 2
RIW (Remote Insulation Warning) or REDC (Remote enabling / disabling command) Used with single actuator	SIL 1

The following model and commercial references are certified:

Model	Commercial Reference
IM400	IMD-IM400
IM400C	IMD-IM400C
IM400THR	IMDIM400THR

### Scope

The device and accessories (voltage adaptors) certification is valid if the installation and wiring of the system abides with the description explained.

### Product Setup

To comply with the Functional Safety Standards requirements, the device must be configured using the following parameters, accessible by selecting **Menu > Settings > I/O Config**:

Parameter	Description	Value
<b>Ins. Al. Relay</b>	Insulation alarm relay	<b>FS</b>
<b>Prev. Al. Rel</b>	Preventive insulation alarm relay	<b>Mirror</b>
<b>Inhibit. Input</b>	Injection inhibition input	<b>N.O or OFF</b>
<b>Ack Inhibit</b>	Acknowledgement of the inhibition signal	<b>ON</b>
<b>Ack. Al. Relay</b>	Allow triggering relays when acknowledging alarm	<b>OFF</b>
<b>Test w. Relays</b>	Toggle Relays during manual auto test	<b>OFF</b>

To modify the parameter value, see I/O configuration, page 55.

# Product installation and wiring


## Relays

The device provides a configuration option to comply with safety and application standards. The preventive alarm relay used as a mirrored actuators along with the insulation alarm relay to provide a global safety function (with inverted redundancy).

You can activate this function through a relay setting called Mirror Mode: **Menu > Settings > I/O Config > Prev.AI.Rel > Mirror**

**NOTE:** When this mode is activated, the Preventive Insulation Alarm is only signaled through the white LED and Modbus communication.

Once activated, the preventive alarm relay mirrors the alarm relay in inverted logic. During product deficiency or a power outage, both relays are de-energized and drops to the same level, as follows:

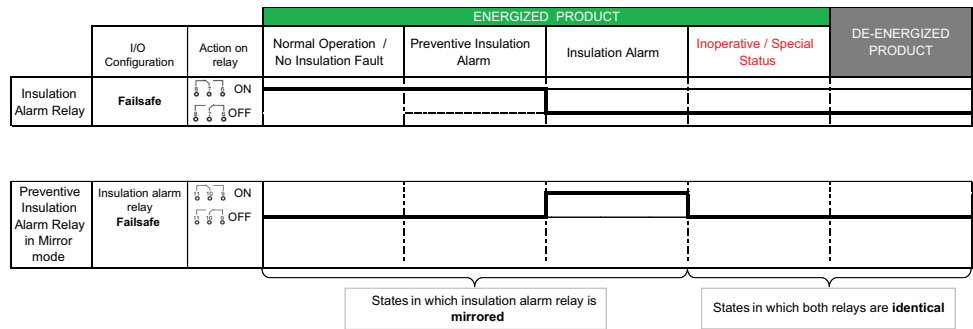

This allows you to easily separate an Insulation Fault signal from an Inoperative Product signal by implementing a series of simple wiring (or connection to a PLC).


## Status input

Enabling the **Ack Inhibit** (Acknowledge Inhibition) option activates the trigger of an alarm when the injection inhibition is activated. (See [Injection inhibition input \(Inhibit. Input\)](#), page 62). This allows the system in which the device is installed to detect errors from the injection inhibition command (external wiring and internal components).

If the installation does not require the use of exclusion management or if the system implements the Modbus/98 protocol, an **OFF** option allows you to disable the Injection Inhibition input, providing a complete functional isolation. The electrical state changes on this input are then ignored (Injection inhibition input option **OFF**) (See [Injection inhibition input \(Inhibit. Input\)](#), page 62).

## PLC

For the system to detect all the product states, the device must be connected to a PLC or equivalent device, as follows:

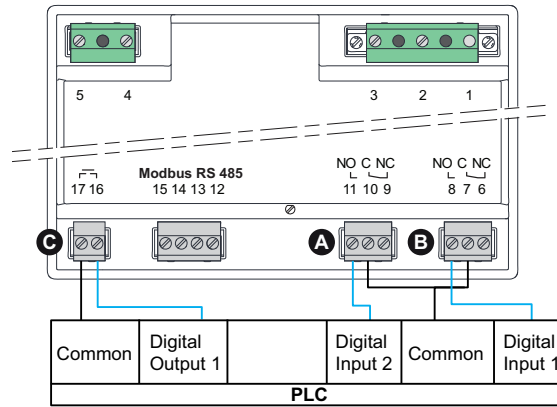

For the PLC to cover the state of all the products the following configuration must be implemented:

Operation		Injection inhibition	Insulation alarm relay	Preventive insulation alarm relay
		Digital output 1	Digital input 1	Digital input 2
Normal operation	No insulation fault/ preventive insulation alarm	Open	Closed	Open
	Insulation alarm	Open	Open	Closed
	Injection disabled	Closed	Open	Closed
Inoperative product	Status input issue	Closed	Closed	Open
	Inoperative product	-	Closed	Closed
	Inoperative product	-	Open	Open

## Commissioning for functional safety standards compliance

### Introduction

In a Functional Safety Standards-compliant installation, you must test the complete device and system setup before deployment of the installation.

### Commissioning process

Stage	Description
1	Validate the device wiring to the description in the Product Installation and Wiring section. See Product installation and wiring, page 105. <b>NOTE:</b> Make sure that the exclusion logic is implemented in the PLC or the control circuit to ensure a correct insulation alarm detection.
2	Validate the device settings to the description in the Product Setup. See Safety standards compliance requirements, page 104. <b>NOTE:</b> Make sure that the exclusion logic is implemented in the PLC or the control circuit to ensure a correct insulation alarm detection.
3	Validate the insulation monitoring with exclusion management.

## Insulation monitoring and insulation fault detection testing

1. When the device is powered off, make sure that inputs of the PLC or the control circuit as per the product installation and wiring section. See *Safety standards compliance requirements*, page 104.
2. Connect a resistor between the monitored network and the earth and check the measurement:
  - When the resistor value is alarm threshold +20%, no alarm is generated.
  - When the resistor value is alarm threshold -20%, an alarm is generated.

**NOTE:** This test must be done offline and install under test disconnected from system.
3. Check that the alarm relay toggles according to the resistance used for the test.

# Specifications

This section provides additional specifications for your device and accessories.

The information contained in this section is subject to change without notice. You can download updated documentation from [www.se.com](http://www.se.com) or contact your local Schneider Electric representative for the latest updates.

See your device's installation sheet for specifications related to installation, such as measured current and voltage ranges, inputs/outputs and control power information.

## System type to be monitored

AC or combined AC/DC ungrounded (27) power systems	Phase-to-phase voltage with device connected to neutral	≤ 830 V AC (27), (28) or ≤ 1700 V AC (29) ≤ 1500 V AC (30)
	With device connected to phase	≤ 480 V AC (27), (28) or ≤ 1000 V AC (29) ≤ 2600 V AC (30)
	Frequency (AC power system)	45...440 Hz
AC	Phase-to-phase voltage with device connected to neutral	≤ 33k V AC (31)
DC or rectified IT power systems	–	≤ 480 V DC (27), (28) or ≤ 1200 V DC (32) ≤ 1500 V DC (30)

## Electrical characteristics

Range for insulation resistance readings		10 Ω...10 MΩ
Range for capacitance readings		0.01...500 μF (2000 μF for photovoltaic applications with IM400-1700C voltage adaptor) (5500 μF for photovoltaic applications with IM400VA2 voltage adaptor)
Fault notification	Number of thresholds	2 (password protected)
	Preventive insulation alarm threshold	1 kΩ...1 MΩ
	Insulation alarm threshold	0.04...500 kΩ
Insulation alarm threshold and preventive insulation alarm hysteresis		20%
Response time		Less than or equal to the <b>Filtering</b> setting: 4s / 40s / 160s
Device operating test		Auto-testing and manual testing
Internal impedance		40 kΩ (at 50/60/400 Hz)
Internal resistance Ri of the measuring circuit		40 kΩ
Output contact	Number	2 (standard or failsafe)
	Type of contact	SPDT one changeover contact
	Operating principle	N/O N/C operation

(27) When the insulation monitoring device is linked to a non-insulated variable speed drive, the DC value and not the AC value must be used as the limit.

(28) Direct connection of the device to the system to be monitored.

(29) Device used with IM400-1700C or PHT1000 voltage adaptor.

(30) Device used with IM400VA2 voltage adaptor.

(31) IM400THR and IM400LTHR used with P1N ground adaptor and compatible Schneider Electric voltage transformer.

(32) 1000 V DC with IM400-1700C and 1200 V DC with PHT1000.

**Electrical characteristics (Continued)**

	Electrical endurance	30000 cycles
	Breaking capacity	3 A @ 250 V AC 1 A, 10 mA minimum load @ 48 V DC
	Minimum switching load	2 mA @ 24 V AC/DC
Injection inhibition input (voltage supplied by device)	Voltage supplied	24 V DC
	Current	5 mA
Notification time delay		0...7200 s
Auxiliary power supply voltage		IM400, IM400C, and IM400THR: <ul style="list-style-type: none"> <li>100...300V LN/440V LL AC <math>\pm 15\%</math>, 50...400 Hz</li> <li>100...440 V DC <math>\pm 15\%</math></li> </ul> IM400L and IM400LTHR: 24...48 V DC $\pm 15\%$
Burden		IM400, IM400C, and IM400THR: 25 VA / 10 W IM400L and IM400LTHR: 10 W
Measurement voltage		IM400, IM400C, and IM400L: 15 Vp, 33 Vp, 120 Vp IM400THR and IM400LTHR: 20 Vdc, 40 Vdc, 60 Vdc, 80 Vdc
Measurement current		IM400, IM400C, and IM400L: 375 $\mu$ Ap, 825 $\mu$ Ap, 3 mAp IM400THR and IM400LTHR: 469 $\mu$ Adc, 940 $\mu$ Adc, 1.56 mAdc, 2.48 mAdc
Fault locating current (IM400, IM400C, and IM400THR)		3.75 mAp
Extraneous DC voltage Ufg		506 V
Dielectric withstand		4000 V AC / 5500 V DC 7.3 kV impulse

**Mechanical characteristics**

Weight	0.75 kg (1.65 lb)
Mounting methods	Flush mount or on grid
IP degree of protection	IP54 (front), IP20 (back)
Mounting position	Vertical

**Environmental characteristics**

Operating temperature	<ul style="list-style-type: none"> <li>-25...+55°C</li> <li>-25...+65°C <sup>(33)</sup></li> <li>-25...+70°C <sup>(34)</sup></li> </ul>
Storage temperature	-40...+70°C
Climatic conditions <sup>(35)</sup>	IEC 60068
Location	For indoor use only

<sup>(33)</sup> With IM400-1700C voltage adaptor and 230 V  $\pm 15\%$  auxiliary supply

<sup>(34)</sup> With IM400VA2 voltage adaptor and 230 V  $\pm 15\%$  auxiliary supply

<sup>(35)</sup> The device is suitable for use in all climates:

- Damp, equipment not operating (IEC 60068-2-30)
- Damp heat, equipment operating (IEC 60068-2-78)
- Salt mist (IEC 60068-2-52)

**Environmental characteristics (Continued)**

Altitude	For IM400, IM400C, and IM400THR <ul style="list-style-type: none"> <li>• ≤ 3000 m (9843 ft) <sup>(36)</sup></li> <li>• ≤ 4000 m (13123 ft) <sup>(37)</sup></li> </ul> For IM400L and IM400LTHR: ≤ 3000 m (9843 ft)
Pollution degree	2

**Other**

Overvoltage category	300 V / OVCIII, 600 V / OVCI	
Standards	Product	IEC 61557-8
	Safety	UL 61010-1, CSA C22.2 No. 61010-1-12
	Installation	IEC 60364-4-41
	Output contact	IEC 61810-2

<sup>(36)</sup> 480 V AC/DC monitored system, CAT III, 440 V AC/DC auxiliary supply  
<sup>(37)</sup> 480 V AC/DC monitored system, CAT III, < 150 V AC/DC auxiliary supply

# China Standard Compliance

This product complies with the following standards in China:

BS/EN/IEC 61557-8 Electrical safety in low voltage distribution systems up to 1 000 V a.c. and 1 500 V d.c. - Equipment for testing, measuring or monitoring of protective measures - Part 8: Insulation monitoring devices for IT systems

Schneider Electric  
35 rue Joseph Monier  
92500 Rueil Malmaison  
France

+ 33 (0) 1 41 29 70 00

[www.se.com](http://www.se.com)

As standards, specifications, and design change from time to time, please ask for confirmation of the information given in this publication.

© 2025 – 2025 Schneider Electric. All rights reserved.

7EN02-0493-01