

## DALI-2 MC

### Datasheet

#### Multi Control Device



DALI control module with four  
potential-free inputs  
for push-buttons and switches

Art. Nr. 86459532-2

GTIN 9010342013492

factory default setting: **App-Controller activated**

Art. Nr. 86459532-int

GTIN 9010342013492

factory default setting: **Instances activated**

Art. Nr. 86459532-NFC

GTIN 9010342012730

factory default setting: **App-Controller activated**

# DALI-2 MC Control Device

## Overview

- Compact DALI-2 control module with 4 potential-free inputs
- Multi-master capable: Several modules can be installed within a DALI circuit and / or a DALI group.
- Different DALI commands can be assigned to each input
- Integrated DALI-2 application controller
- Four DALI-2 pushbutton instances are available for an easy integration
- In addition to the standard DALI commands, the application controller also supports DALI DT8 TC and RGB (W) control
- short button press, long button press (with repetition for dimming) and «toggle» are supported
- Suitable for push-buttons, as well as switches
- New: Alternative button function: A second function can be assigned to each input. Activated / deactivated via a scene command or switch at input 4. Thus, Offering an easy solution to the partition wall problem.
- With the application controller Sequences, macros and other functions can be realized.
- Easy configuration via Lunatone DALI USB interface and DALI-Cockpit Software Tool.
- New: NFC variant for simple, contactless configuration with the Lunatone NFC smartphone app
- Easy installation: the device can be installed in a flush-mounted installation box and is supplied via the DALI bus
- DALI-2 control unit according to IEC62386-103



## Specification, Characteristics

Type	DALI-2 MC	DALI-2 MC integration	DALI-2 MC NFC
article number	86459532-2	86459532-int	86459532-NFC
GTIN	GTIN 9010342013492	GTIN 9010342013492	GTIN 9010342012730
factory default setting	App-Controller activated	Instances activated	App-Controller activated

### DALI interface, power supply: DA, DA

output type	DALI, DALI-2, Multimaster
terminal markings	DA, DA
voltage range	9,5V ... 22,5Vdc according to IEC62386
typical current consumption DALI (16,5V)	1.7 mA
max. current consumption DALI (22,5V)	2 mA
DALI addresses	none
DALI-2 addresses	1

### input

Inputs for	Potential free button/switch
number of inputs	4
marking input terminals	T1, T2, T3, T4, COM
minimum length of control pulse	40ms
control pulse length for long press	configurable: 200-5100ms
max wire length	50cm

### insulation data:

impulse voltage category	II
pollution degree	2
rated insulation voltage	250V
insulation DALI / mains	reinforced isolation
insulation test voltage DALI / mains	3000Vac

### environmental conditions:

storing and transportation temperature	-20°C ... +75°C
operational ambient temperature	-20°C ... +75°C
rel. humidity, not condensing	15% ... 90%

### general data:


dimensions (l x w x h)	40mm x 28mm x 15mm
mounting	back box installation, installation in protection class II devices
rated maximum temperature tc	75°C
expected life time	200.000h
protection class	SKII (when used/installed as intended)
protection degree housing	IP40
protection degree terminals	IP20

**terminals:**

connection type	spring terminal connectors
wire size: solid core	0,5 ... 1,5 mm <sup>2</sup> (AWG20 ... AWG16)
wire size: fine wired	0,5 ... 1,5 mm <sup>2</sup> (AWG20 ...AWG16)
wire size: using wire end ferrule	0,25 ... 1 mm <sup>2</sup>
stripping length	8,5 ... 9,5 mm / 0,33 ... 0,37 inch
tightening/ release of wire	push mechanism

**standards :**

DALI	IEC62386-101:2014 IEC62386-103:2014
EMV	EN 61547 EN 50015 / IEC CISPR15
safety	EN 61347-2-11 EN 61347-1
Markings	DALI-2, CE

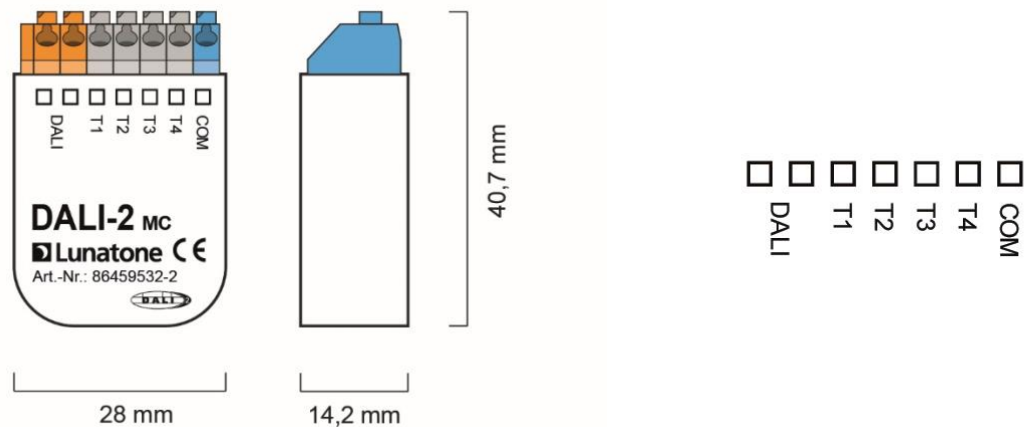

dimensions

connection plan

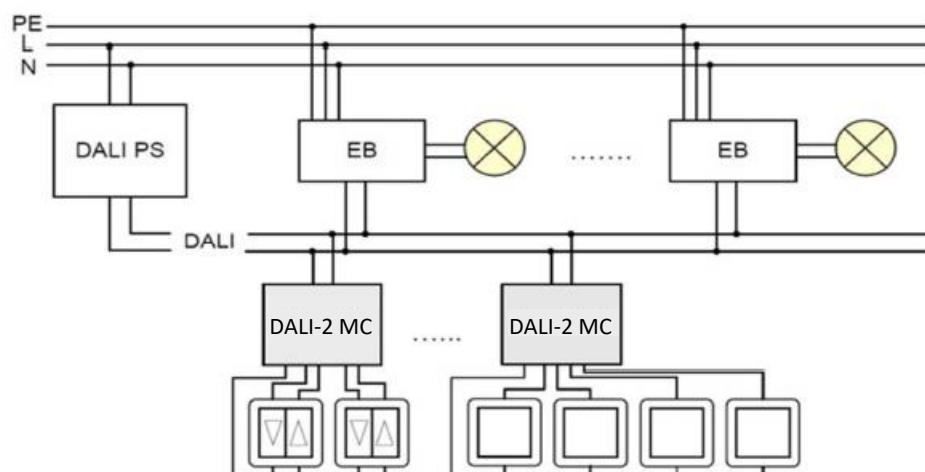


Fig. 1 Typical Application

## Installation

- The DALI-2 MC can be installed in a flush-mounted installation box
- The device is directly connected and supplied by the DALI bus. A DALI bus power supply (e.g. DALI PS) is required.
- The connection to the DALI terminals can be made regardless of polarity. The bus input is protected against overvoltage (mains voltage).
- The wiring should be carried out as a permanent installation in a dry and clean environment.
- Installation may only be carried out in a voltage-free state of the system and by qualified specialists.
- National regulations for setting up electrical systems must be followed.
- The DALI wiring can be realised with standard low-voltage installation material. No special cables are required.
- Only 1 wire may be connected to each terminal. When using double wire end ferrules, the connection capacity of the terminal must be considered.
- The maximum cable length of the button connections is 50cm. If a longer connection line is required, please use DALI MC-4L.



**Attention:** The DALI-signal is not classified as SELV circuit (Safety Extra Low Voltage). Therefore, the installation regulations for low voltage apply.



The voltage drop on the DALI line must not exceed 2V at maximum length (300m) and maximum bus load (250mA).

## Typical application

see Fig. 1. page 4

## Addressing and Configuration

- After installation, the device can already be used with the default factory settings.
- DALI-2 MC: Addressing and changes to the factory settings, such as setting the effective range and functions, are possible with the Software tool DALI Cockpit (Windows PC).
- DALI-2 MC NFC: Addressing and changes to the factory settings, such as setting the effective range and functions, are possible with the Software tool DALI Cockpit (Windows PC) and the Lunatone DALI NFC smartphone app.
- When using the DALI-Cockpit Software, the PC must be connected to the DALI bus via a suitable interface module (DALI USB, DALI 4Net, DALI SCI RS232). The DALI-2 MC is automatically recognised by the DALI Cockpit during the addressing process and listed in the device overview. Effective range and desired functions can then be assigned to each input.
- The addressing is done according to the DALI-2 specification and the device receives a corresponding address.
- For localisation a buzzer is integrated in each DALI-2 MC device. Alternatively, the

allocation can also be done via the serial number of the device.


identifies and lists the input connections (T1 to T4 on the device).

- Physical selection: At the end of the addressing process: By double-clicking the physical button, the DALI Cockpit can

## Operation and function

The DALI-2 MC is a universal module to control DALI-compatible lights. The function of each push button input can be set individually.

As with other Lunatone control devices, the settings can be made with the DALI Cockpit Software tool.



**DALI-2 MC**  
Lunatone  
Art.-Nr.: 86459532-NFC  
NFC DALI

device information

**Device Info**

Name	DALI-2 MC	Article Number	86459532-NFC	GTIN	9010342012730
Manufacturer	Lunatone	Serial Number	10149	FW Ver	1.0.1
DALI Device Type	-	Type	Control Device		
DALI Type	V2.0	Short Address	(A3²) DALI-2 MC	<input type="button" value="Set"/>	

General Application Instances

Device Description

Office 1

DALI-2 Control Device Parameters

☒ Application Controller Enable ⓘ

☐ Power cycle notification Enable ⓘ

☐ Enable All Instances ⓘ

▼ Membership in Groups for DALI-2 Controls

Settings instances

Settings Application Controller

Optional description / information about the device

Switching on / off instances and application controller

Fig.2: General Settings

It is necessary to distinguish between application controller and DALI-2 instances.

The application controller gives direct DALI control commands that are immediately executed by the DALI drivers.

The DALI-2 instances generate event messages that are interpreted and processed by higher-level control units (WAGO, Beckhoff, LUNATONE DALI-2 KNX gateway).

The screenshot shows the configuration interface for a DALI-2 MC device. On the left is a photo of the physical device, a small grey module with a 5-pin terminal block. The main interface is divided into 'Device Info' and 'Application' tabs. The 'Device Info' tab shows fields for Name, Manufacturer, Article Number, Serial Number, DALI Device Type, DALI Type, Short Address, and GTIN. The 'Application' tab is further divided into 'General' and 'Alternative config' sub-tabs. The 'General' sub-tab contains settings for four inputs (Input 1 to Input 4), a 'Function' dropdown, checkboxes for 'sending ON AND STEP UP as Start-Cmd', 'Dim Up', and 'Dim Down', and sections for 'Command X' and 'Command Y'. The 'Alternative config' sub-tab contains a 'Destination Addresses' table with four rows (1 to 4) and columns for 'Group' and 'Group 0 (G0)'. Annotations with blue boxes and lines point to various parts of the interface: 'Destination Addresses' points to the table in the Alternative config sub-tab; 'Settings for each input' points to the Input 1 to Input 4 labels; 'alternative configuration can be activated and deactivated by scene commands or input 4' points to the Alternative config sub-tab; 'Button function' points to the Function dropdown; 'DALI command / function' points to the Command X and Command Y sections; and 'interpretation of scene command for toggle functions' points to the 'Interpret scene commands as' section with radio buttons for On, Off, and Ignore.

Device Info

Name: DALI-2 MC

Manufacturer: Lunatone

DALI Device Type: -

DALI Type: unknown

Article Number: 86459532

Serial Number: 1

Type: Control Device

Short Address: (A0?) DALI-2 MC

GTIN: 9010342012310

FW Ver: ?.

General Application

Input 1 Input 2 Input 3 Input 4

Standard config Alternative config

Destination Addresses

	Group	Group 0 (G0)
1:	Group	Group 0 (G0)
2:	none	
3:	none	
4:	none	

Function: BF6 - Dim button: CmdX/CmdY/UP/DOWN depending on actual Light Level

☐ sending ON AND STEP UP as Start-Cmd ☒ Dim Up ☒ Dim Down

Command X

Light Level: 100 % Fade time: [1] 0.7 sec

Command Y

RECALL MIN LEVEL

Interpret scene commands as:

☐ On ☐ Off ☒ Ignore

Fig. 3: Application: Application Controller

## Configure inputs 1-4

### Destination address / effective range

Here you can set which devices are affected by the button function. Possible destination addresses:

- Broadcast (an alle)
- DALI group (0 - 15)
- DALI single address (0 - 63)

Up to 4 different target addresses can be defined for each button input. When the button is pressed the target addresses 1 to 4 will be processed sequentially (see Fig. 4)

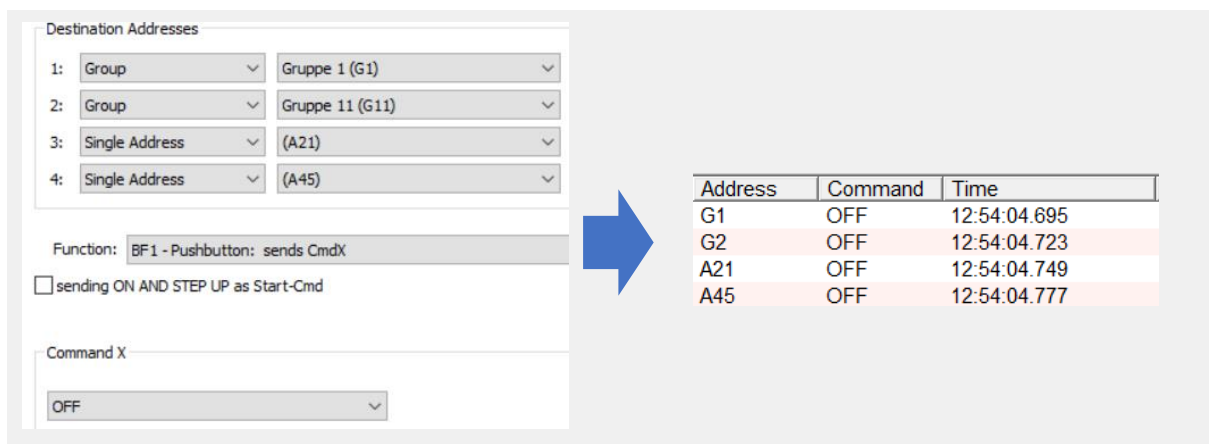


Fig.4 Example: Addressing Inputs 1-4 – sequentially processed

### Button Function (BF)

Various "Button Functions" (BF) can be assigned to the individual buttons. The "Button Function" defines the behaviour of a button. A short or long press of the button can trigger different DALI

commands. A toggle function (switching between on and off) is also possible. Key presses (short / long) are queried according to the following timing diagram and translated into internal signals (**key events**):

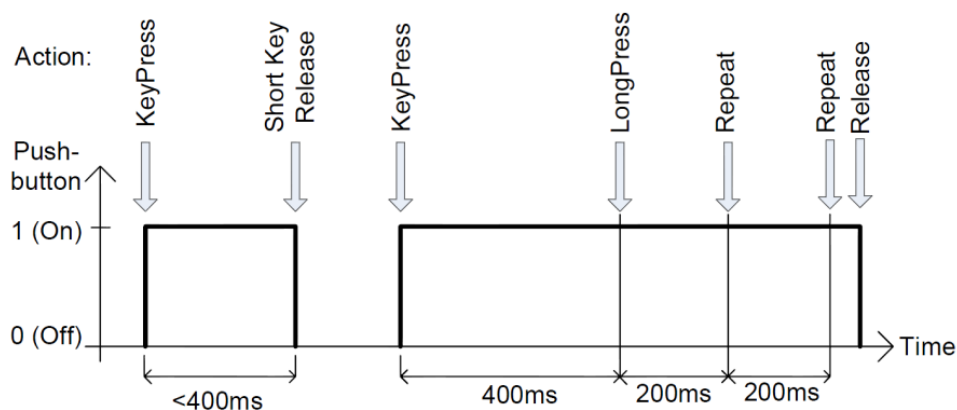


Fig.5 Key Events

The following table shows how the selected “Button Function” (lines 0 to 13) sends the commands **CmdX** and **CmdY** in connection with the “Key Events” (see Fig. 5). CmdX and CmdY refer to DALI commands.



**Note:** The DALI commands are transmitted to all assigned target addresses.

button function number (BF)	event: key press	event: release after short press	event: long press	event: repeat	function	typical application
0	-	-	-	-	-	
1	CmdX	-	-	-	sends CmdX on key press	master off
2	CmdX	-	CmdY	-	sends CmdX on key press sends CmdY after long press delay	switch to 2 different levels
3	CmdX	-	CmdY	CmdY	sends CmdX on key press sends CmdY with 200ms repetition after long press delay	switch on and dim
4	CmdX / CmdY toggle	-	-	-	sends CmdX and CmdY alternating on key press	toggle push button (impulse switch)
5	CmdX / CmdY toggle	-	-	-	CmdX/Y <b>depending on bus status</b>	changeover push button
6		CmdX / CmdY toggle-	ON and STEPUP	UP / DOWN	CmdX/Y <b>depending on bus status</b> , UP/DOWN alternating, ON AND STEPUP, if bus state is OFF before UP	push and dim button
7	CmdX	CmdY (any release)	-	-	sends CmdX on press (“switch on”-transition), sends CmdY on release (“switch off”-transition)	switch
8	CmdX / CmdY toggle	CmdX / CmdY toggle (any release)	-	-	sends CmdX/Y on press or release (“switch on/off” -transition) <b>depending on bus status</b>	changeover switch
9	CmdX	-	-	-	Staircase control. CmdY is sent after a programmable delay.	staircase control
10	-	CmdX	CmdY	CmdY	CmdX after short press, CmdY for repeat	push and dim button
11	CmdX	-	-	CmdY	Sends CmdX; repeats CmdY without long press delay	push and dim button
12	CmdX	CmdY	-	CmdX	CmdX with repeat; if button is released within short press time, CmdY is sent	dim button
13	CmdX	CmdY		COOLER/WARMER	Alternating COOLER / WARMER	Tunable white dim button

Tab. 1

### Commands:

The actual action (which function is triggered when pressing a button) is determined by the button function and command assigned to the button. In most cases, an X command (CmdX) and also a Y command (CmdY) can be selected. The following options are available:

Command number	Command name	action / function
no Nr.	DIRECT ARC POWER	direct arc power Level in %
0	OFF	off
1	UP	dim up (using fade rate)
2	DOWN	dim down (using fade rate)
3	STEP UP	increases light level by one increment
4	STEP DOWN	decreases light level by one increment
5	RECALL MAX	recalls MAX value
6	RECALL MIN	recalls MIN value
7	STEP DOWN AND OFF	decreases light level by one increment, if value at MIN switch off
8	ON AND STEP UP	increases light level by one increment, if OFF switch on
10	GOTO LAST ACTIVE LEVEL (DALI 2)	DALI-2-Cmd for switching on to the last active level (Memory-Function) (Firmware 2.0 and up)
16-31	GO TO SCENE	go to scene 0-15

Tab. 2

### Predefined macros:

Macros are predefined/ user defined command sequences that can be triggered by a single command.

The following macros are available:

Nr	Makro	Funktion
M1	Go Home	Light dims down to DAP 0 with predefined fade time, then fade time is set back to a programmable value
M2	Sequential Scenes	A list of the scenes can be defined; the scene is switched with each button press.
M3	Dynamic Scenes	A dynamic sequence of up to 16 scenes can be defined, including custom fade times and delays.
M4	Save actual light level as scene	When triggered the current level is saved in a scene (options: light level, RGB colour value, WAF colour value or colour temperature).
M5	User Defined Cmd-List	A user-defined macro script with up to 19 commands is executed.
M6	TC cooler	Activates the DT8 mode and sends the command "COOLER" 3 times.
M7	TC warmer	Activates the DT8 mode and sends the command "WARMER" 3 times.
M8	Send RGB +	Activates the DT8 mode and sends an ascending RGB color table value.
M9	Send RGB -	Activates the DT8 mode and sends a descending RGB color table value.
M10	Delayed Off	Sends a DAP level and after a delay the OFF command. DAP level and delay are user defined.

Tab. 3

Depending on the selected command, additional input fields might appear for further settings:

Command X

Light Level:

Fade time

Light Level (DAP) ▾

100 %

[1] 0.7 sec ▾

Fig. 6 Example for CmdX: DAP additional inputs: Light Level and Fade time

## New: Alternative configuration

An alternative/second configuration can be made for each button. All previously

explained configuration options and settings are available. The alternative configuration can be recalled with button input 4 or a scene command.

The screenshot shows the 'Alternative config' tab in the configuration software. It includes several sections: 'Alternative configuration setup' with radio buttons for 'Disabled', 'Activation by Input 4', and 'Activation by Scene Commands' (selected); 'Alternative configuration activation' and 'deactivation' lists with scene numbers (S0, S1, S10 and S0, S13, S14); 'Destination Addresses' with four rows for group selection; 'Alternative Function' set to 'BF1 - Pushbutton: sends CmdX'; a checkbox for 'sending ON AND STEP UP as Start-Cmd'; and a 'Command X' dropdown set to 'OFF'. Callout boxes provide additional context: one points to the activation/deactivation lists stating '- activate «Alternative configuration» - select how it is activated', and another points to the main configuration area stating 'all configuration options and settings of «Standard config» (Fig. 3.) are available'.

Fig. 7 Settings for the alternative configuration

### Activate / deactivate the "Alternative Configuration":

- **"Disabled"**: the function is switched off, there is only the standard configuration
- **"Activation by Input 4"**: the standard and alternative configuration are switched with a button connected to input 4.
- **"Activation by Scene Commands"**: scenes can be selected which will activate / deactivate the alternative configuration

### Interpretation of scene commands when using toggle function

In order to correctly trigger the on and off commands with the toggle function, scene calls must be interpreted correctly. It is possible to set whether a scene should be interpreted as Off or On (Fig 8).

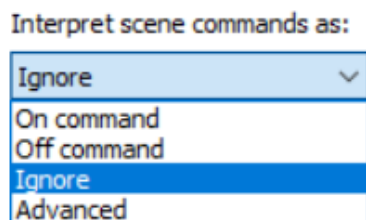


Fig. 8

### factory default setting:

A basic configuration is already implemented on delivery (factory default setting). If necessary, this can be changed and adapted.

factory default setting:

Destination address: broadcast

Input T1: BF6 - dimming button depending on the lighting status, RECALL MAX / OFF and UP / DOWN

Input T2: BF10 button - short press: maximum, long press: dim up

Input T3: BF10 button - short press: switch off, long press: dim down

Input T4: BF13 - Tunable White dimming button - alternating COOLER / WARMER

### DALI-2 instances

In this operating mode, no DALI control commands are sent on the bus, but DALI-2 event messages for DALI-2 compatible central control systems.

The DALI-2-MC supports 4 instances of type 1 (IEC62386-301, Input Devices - Push Button), which are assigned to the 4 button inputs. As defined in the standard, the following events are supported and sent on the DALI bus as INPUT NOTIFICATIONS:

Event name	Event Information	Description
Button released	00 0000 0000b	The button is released
Button pressed	00 0000 0001b	The button is pressed
Short press	00 0000 0010b	The button is pressed and released, without being pressed quickly again (in case of double press enabled), or the button is pressed and quickly released (in case of double press disabled)
Double press	00 0000 0101b	The button is pressed and released, quickly followed by another button press
Long press start	00 0000 1001b	The button is pressed without releasing it
Long press repeat	00 0000 1011b	Following a long press start condition the button is still pressed, the event occurs at regular intervals as long as the condition holds
Long press stop	00 0000 1100b	Following a long press start condition, the button is released
Button free	00 0000 1110b	The button has been stuck and is now released
Button stuck	00 0000 1111b	The button has been pressed for a very long time and is assumed stuck.

Tab.4

Further parameters of the instances 1-4 are: event filter, event timer settings (short timer, double timer, repeat timer, stuck timer), which can be configured via the DALI Cockpit Software.

General Application **Instances**

Instance 0

☐ Enable Instance

Instance type: Push button

Primary Group: none

Group 1: none

Group 2: none

Event scheme: Instance addressing

Event Filters

- ☐ Button released
- ☐ Button pressed
- ☒ Short press
- ☐ Double press
- ☒ Long press Start
- ☒ Long press Repeat
- ☒ Long press Stop
- ☒ Button stuck/free

Timers

Short 500 ms

Double - ms

Repeat 160 ms

Stuck 20 s

Selection of the 4 push button inputs

Event and Timer settings

Fig. 9 Instance Settings

## NFC-Version (Art.Nr.: 86459532-NFC)



Fig. 10

In addition to the DALI Cockpit Software, the DALI-2 MC NFC includes a nearfield communication interface. This allows configuration over the NFC interface and a smartphone app.

- The DALI-2 MC does not have to be connected to a DALI power supply for configuration with NFC, it is supplied directly via NFC.
- The functions required to operate the application controller can be configured with the Lunatone DALI NFC App.
- Easy to use smartphone app for quick configuration in the field as well as preparation before installation.
- Fast transfer and copying of device settings

### App Download:

The Lunatone "DALI NFC" app is available for Android devices on the Play Store.

### Connect:

- Switch on the NFC function and start the "DALI NFC" app.
- This is followed by the request to pair an "NFC-enabled device".
- As soon as the DALI-2 MC NFC is within range (indicated by signal tone / vibration) the device is automatically read out and shown on the display.



Fig. 11 NFC App Start Screen

It is important that the NFC antennas of the two devices are as close as possible to each other. The position of the antenna is marked on the DALI-2-MC-NFC:



Fig. 12

For Information on the NFC interface of your smartphone please check the instructions of the device manufacturer.

## Lunatone DALI NFC App

The configuration options are the same as in the DALI Cockpit, see section "Operation and function" page 6 for further information.

The screenshot shows the 'DALI-2 MC' configuration screen in the Lunatone DALI NFC App. The interface is divided into several sections, each with a callout box explaining its function:

- device information:** Points to the top section showing the device name 'DALI-2 MC', a 'set description' link, 'Firmware V1.0', the website 'http://www.lunatone.com', and the 'Article Nr. 86459532-NFC' and 'Serial Nr. 81604388773'.
- device address:** Points to the 'Addressing' section, which shows 'Address + Increment to 4' set to '3' and 'Control Device Groups' set to 'none'.
- Device settings of the 4 push button inputs:** Points to the 'Device Settings' section, which contains a table for configuring four inputs.
- selection which push button input (T1 - T4) should be configured:** Points to the 'Input 1' tab in the 'Device Settings' section.
- Destination addresses:** Points to the 'Destination Address' section, which lists four inputs with their current settings: '1: group', '2: none', '3: none', and '4: none'.
- selection of button function behaviour:** Points to the 'Function' section, which shows 'BF1: PUSH BUTTON - sends CmdX' and an option for 'ON AND STEP UP as start cmd'.
- DALI command / function:** Points to the 'CmdX (On Command)' section, which shows 'RECALL MAX LEVEL'.
- "Save to device": parameters are saved on the device:** Points to the 'SAVE TO DEVICE' button at the bottom of the screen.

At the bottom left, a note with a hand icon states: 'Macros and instances cannot be set via NFC.'

Fig. 13

## Purchase Information

**Art. Nr. 86459532-2**

**DALI-2 MC:**

factory default setting: **App-Controller activated**

GTIN 9010342013492

**Art. Nr. 86459532-int**

**DALI-2 MC integration:**

factory default setting: **instances activated**

GTIN 9010342013492

**Art. Nr. 86459532-NFC**

**DALI-2 MC NFC:**

factory default setting: **App-Controller activated**

GTIN 9010342012730

## Additional Information and Equipment

DALI Cockpit - free configuration software for DALI systems

<https://www.lunatone.com/en/product/dali-cockpit/>

Lunatone DALI products

<https://www.lunatone.com/en>

Lunatone Datenblätter und Manuals

<https://www.lunatone.com/en/downloads-a-z/>

## Contact

Technical Support:

[support@lunatone.com](mailto:support@lunatone.com)

Requests: [sales@lunatone.com](mailto:sales@lunatone.com)

[www.lunatone.com](http://www.lunatone.com)



## Disclaimer

Subject to change. Information provided without guarantee. The datasheet refers to the current delivery.

The function in installations with other devices must be tested for compatibility in advance.