




PROVIDA VARME

HA-55

Infrarød terrassevarmer

Sikkerhetsinstruksjoner og bruksanvisning

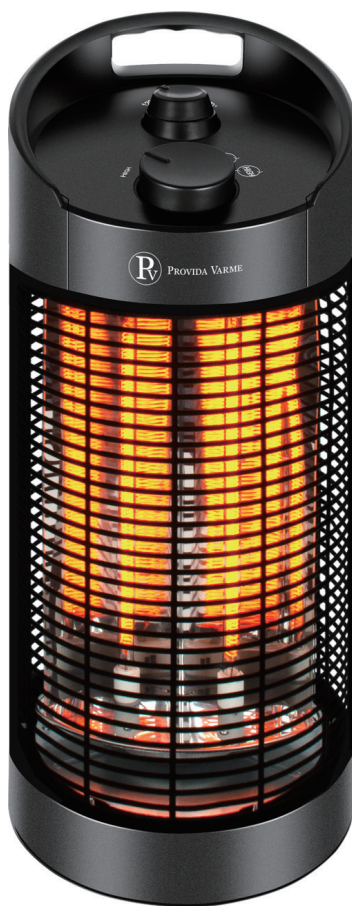

LES BRUKSANVISNINGEN NØYE FØR DU BRUKER VARMEAPPARATET,
OG TA VARE PÅ DET TIL SENERE BRUK.

ADVARSLER OG VIKTIG SIKKERHETSINFORMASJON

- Varmeapparatet bruker 220 ~ 240V AC / 50Hz, vennligst kontroller husholdningsspenningen for å sikre at det samsvarer med spesifikasjonen før du bruker den.



Advarsel: For å unngå overoppheting av varmeren må du ikke dekke til varmeren.

Husk avstand på 1,5 meter for å unngå brann.

- Ikke plasser varmeren rett under eller rett ved stikkontakten.
- Ikke bruk varmeren i en eller i nærheten av en dusj, badekar eller svømmebasseng.
- Ikke bruk varmeapparatet med våte hender. Livsfare!
- Ikke bruk varmeapparatet i brennbare omgivelser.
- Dette apparatet kan brukes av barn fra 8 år og oppover og personer med reduserte fysiske, sensoriske eller mentale evner eller mangel på erfaring og kunnskap hvis de har fått tilsyn eller instruksjoner om bruk av apparatet på en sikker måte og forstår farene som er involvert.
Barn skal ikke leke med apparatet. Rengjøring og vedlikehold skal ikke gjøres av barn uten tilsyn.
- Barn under 3 år må holdes unna med mindre de er under kontinuerlig tilsyn.
- Barn i alderen 3 år og mindre enn 8 år skal kun slå på/av apparatet forutsatt at den har blitt plassert eller installert i sin tiltenkte normale driftsstilling, og de har fått tilsyn eller instruksjoner om bruk av apparatet på en sikker måte og forstår farene som er involvert. Barn i alderen 3 år og mindre enn 8 år skal ikke starte, regulere og rengjøre apparatet eller utføre brukervedlikehold.
- ADVARSEL — Noen deler av dette produktet kan bli svært varme og forårsake brannskader. Det må legges særlig vekt på dette når barn og sårbare mennesker er til stede.
- Ikke stikk inn eller la gjenstander komme inn i varmeren da dette kan føre til elektrisk støt eller brann, eller skade på varmeren. • Mellom varmeren og brennbare gjenstander (f.eks. gardiner), vegger og andre konstruksjoner må det være minst 1,5 m avstand.
- Bruk varmeren som beskrevet i bruksanvisningen. All annen ikke-anbefalt bruk kan forårsake brann, støt eller personskade.
- Hvis strømledningen er skadet, må den skiftes ut av produsenten, dennes servicerepresentant eller tilsvarende kvalifiserte personer for å unngå fare.
- Ikke dekk til ledninger med tepper, løpere eller lignende belegg.
- Påse at strømledning ligger på en slik måte at ingen kan snuble i den.
- Slutt umiddelbart å bruke varmeren hvis støpselet eller ledningen er skadet.
- Unngå å bruke skjøteledninger fordi det kan føre til overoppheting og brannfare.
- Trekk støpselet ut av stikkontakten når varmeapparatet ikke er i bruk.
- Ta kontakt med selger hvis det ikke fungerer som det skal. Ikke prøv å reparere varmeapparatet selv.
- Rengjøring og brukervedlikehold skal ikke utføres av barn uten tilsyn.
- Varmeapparatet må ikke senkes ned i vann for rengjøring.

BRUKS INSTRUKSJONER

1. Sett støpselet i stikkontakten.
2. Varmeren har to effektområder: 600W og 1200W.
3. Drei kontrollknappen til venstre uten rotasjonsfunksjon: LOW(600W) eller HIGH(1200W).
4. Drei kontrollknappen til høyre for rotasjonsfunksjon :
 (rotasjon + 600W) eller  (rotasjon+ 1200W).

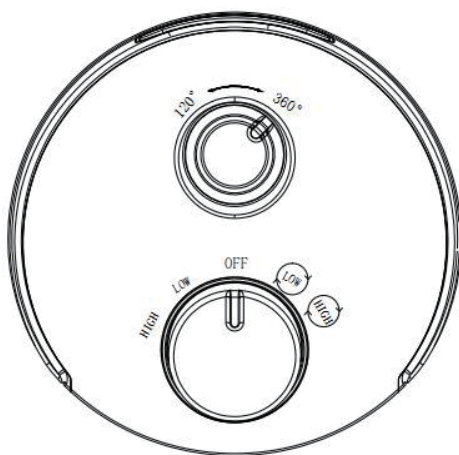


Fig 1

LOW : 350W
HIGH : 700W
 : OSC+350W
 : OSC+700W

5. Fig. 2 : vinkelknapp med to vinkelmoduser: 120° og 360°. Når du bruker rotasjonsfunksjonen, dreier du vinkelknappen til venstre 120° og til høyre 360°.
6. Slå av varmeren ved å sette kontrollknappen i AV-stilling.
7. Trekk støpselet ut av stikkontakten.

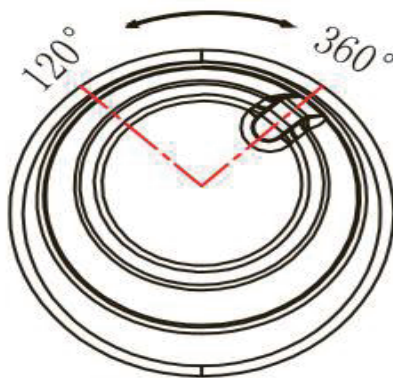


Fig 2

RENGJØRING OG VEDLIKEHOLD

- Koble fra varmeren og la det avkjøles helt.
- Hold varmeren ren. Det ytre skallet kan rengjøres med en myk, fuktig klut. Du kan bruke et mildt vaskemiddel om nødvendig. Tørk varmeapparatet med en myk klut etter rengjøring.
- Ikke bruk alkohol, bensin, slipepulver, møbelpolering eller grove børster til å rengjøre varmeapparatet. Dette kan føre til skade eller forringelse av varmerens overflate.
- Ikke senk varmeren ned i vann eller la den bli våt.
- Vent til varmeren er helt tørr før bruk.
- Alle typer vedlikehold eller reparasjoner skal gjøre av kvalifisert elektriker eller av et anbefalt servicesenter.
- Om varmeren ikke er i bruk over lenger tid, vennligst beskytt varmeren med et vanntett stoffdeksel mot regn og støv.

TEKNISKE PARAMETERE

Produktmodell	HA-55
Nominell spenning	220–240 V AC, 50 Hz
Strøm	600 / 1200 W
Rotasjon vinkel	360° / 120
Produktstørrelse	22.5x22.5x55cm

AVHENDING



Dette symbolet indikerer at produktet er et elektrisk apparat og skal ikke avhendes med vanlig avfall. Lever produktet gratis til butikken eller nærmeste gjenvinningsstasjon.

KUNDESERVICE

- Ved feil på produktet kontakt forhandler for avklaring.
- Reparasjoner må gjøres av en autorisert elektriker.
- Uriktige reparasjoner kan føre til fare ved bruk.
- Garantien dekker ikke skader som et resultat av forandring, ulykker, bruksfeil, forsømmelse eller dårlig vedlikehold.
- I tråd med våre retningslinjer for kontinuerlig produktutvikling forbeholder vi oss retten til å endre produkt- og dokumentasjonsspesifikasjonene uten varsel.



PROVIDA VARME

Narverødveien 40, 3113 Tønsberg - Tlf: 40 10 57 00
mail: info@providavarme.no - web: providavarme.no - webshop: providavarmeshop.no




PROVIDA VARME

HA-55

Infrared patio heater

Safety instructions and instructions for use

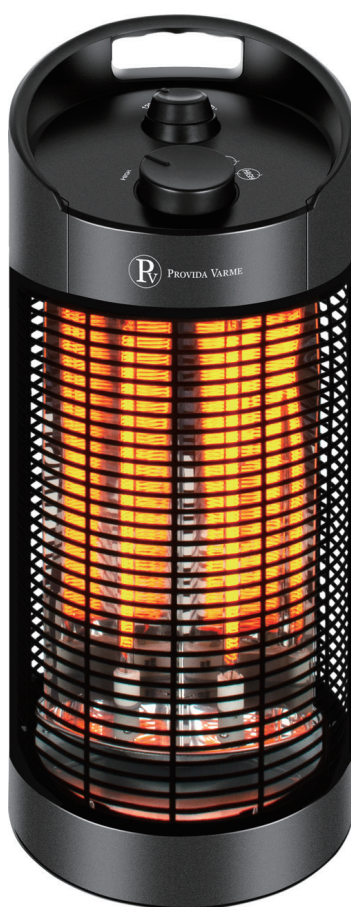

PLEASE READ THE MANUAL CAREFULLY BEFORE USING HEATER AND
RETAIN IT FOR FUTURE REFERENCE.

WARNING AND CAUTIONS

- The heater uses 220 ~ 240V AC / 50Hz, please check the household voltage to ensure that it conforms to the specification before using it.




Warning: To prevent the heater from overheating, do not cover the heater. Remember distance at 1.5 meters to avoid fire.

- Do not place the heater directly below or directly at the socket.
- Do not use the heater in or near a shower, bath or swimming pool.
- Do not use the heater with wet hands. Danger to life!
- Do not use the heater in a flammable environment.
- This device can be used by children from 8 years and up and people with reduced physical, sensory or mental abilities or lack of experience and knowledge if they have been supervised or instructed on the use of the device in a safe way and understands the dangers involved. Children should not play with the appliance.
- Cleaning and maintenance should not be done by children without supervision.
- Children under 3 years of age must be kept away unless they are under continuous supervision.
- Children aged 3 years and under 8 years should only switch the appliance on / off provided it has been placed or installed in their intended normal operating position, and they have been supervised or instructed to use the appliance on a safe way and understand the dangers involved.
- Children aged 3 years and under 8 years should not start, regulate and clean the appliance or perform user maintenance.
- **WARNING** - Some parts of this product can become very hot and cause burns. It must be added special emphasis on this when children and vulnerable people are present.
- Do not insert or allow objects to enter the heater as this may result in electric shock or fire, or damage to the heater.
- Use the heater as described in the operating instructions. Any other non-recommended use may cause fire, shock or personal injury.
- If the power cord is damaged, it must be replaced by the manufacturer, its service representative or similarly qualified persons to avoid danger.
- Do not cover wires with carpets, runners or similar coatings.
- Make sure that the power cord is in such a way that no one can trip over it.
- Stop using the heater immediately if the plug or cord is damaged.
- Avoid using extension cords as they may cause overheating and fire hazard.
- Unplug the heater when the heater is not in use.
- Contact the seller if it does not work properly. Do not attempt to repair the heater yourself.
- Cleaning and user maintenance should not be performed by unattended children.
- The heater must not be immersed in water for cleaning.

USING INSTRUCTIONS

1. Put the plug into the power socket.
2. The heater has two power ranges: 600W and 1200W.
3. Turn control knob to left without oscillation function: LOW(600W) or HIGH(1200W).
4. Turn control knob to right with oscillation function :  (oscillation+600W) or  (oscillation+1200W).

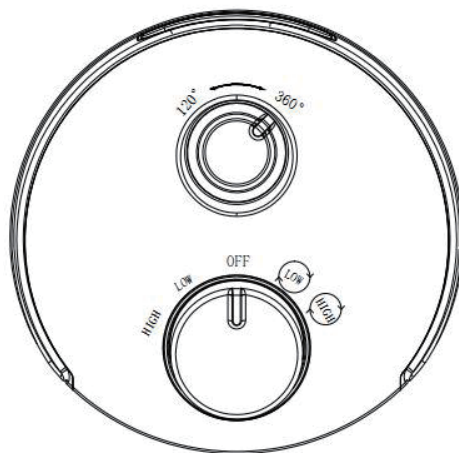

LOW : 350W
HIGH : 700W
 : OSC+350W
 : OSC+700W

Fig 1

5. Fig 2 is the angle knob with two angle modes: 120° and 360°. When using the oscillation function, turn angle knob to left 120° and turn right 360°.
6. Switch the heater off by turning control knob to OFF-position.
7. Remove plug from the power socket.

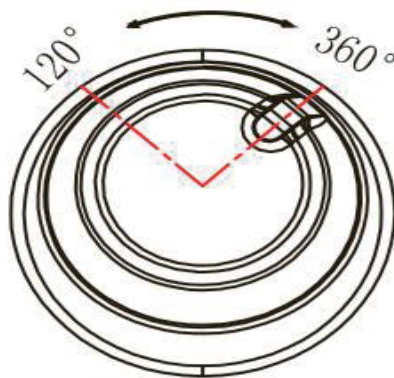


Fig 2

CLEANING AND MAINTENANCE

- Disconnect the heater and allow it to cool completely.
- Keep the heater clean. The outer shell can be cleaned with a soft, damp cloth.
You can use a mild detergent if necessary. Wipe the heater with a soft cloth after cleaning.
- Do not use alcohol, petrol, abrasive powder, furniture polish or coarse brushes to clean the heater. This can cause damage or deterioration of the heater surface.
- Do not immerse the heater in water or allow it to get wet.
- Wait until the heater is completely dry before use.
- All types of maintenance or repairs must be performed by a qualified electrician or by a recommended service center.
- If the heater is not in use for a long time, please protect the heater with a waterproof fabric cover from rain and dust.

TECHNICAL PARAMETERS

Product model	HA-55
Nominal voltage	220–240 V AC, 50 Hz
Current	600 / 1200 W
Rotation angle	360° / 120
Product size	22.5x22.5x55cm

DISPOSITION



Disposal This symbol indicates that the product is an electrical appliance and should not be disposed of with normal waste. Deliver the product free of charge to the store or the nearest recycling station.

CUSTOMER SERVICE

- In the event of a product defect, contact your dealer for clarification. Repairs must be carried out by an authorized electrician. Improper repairs can lead to danger during use.
- The warranty does not cover damage as a result of change, accidents, misuse, neglect or poor maintenance.
- In line with our guidelines for continuous product development, we reserve the right to change the product and documentation specifications without notice.



PROVIDA VARME

Narverødveien 40, 3113 Tønsberg - Tlf: 40 10 57 00
mail: info@providavarme.no - web: providavarme.no - webshop: providavarmeshop.no