# PRODUCT ENVIRONMENTAL PROFILE **Environmental Product Declaration**

### **MS116 Manual Motor Starter**



REGISTRATION NUMBER	DRAFTING RULES: PCR-ED4-EN-2021 09 06			
ABBG-00396-V01.01-EN	SUPPLEMENTED BY PSR-0005-ED3-EN-2023 06 06			
VERIFIER ACCREDITATION NUMBER	INFORMATION AND REFERENCE DOCUMENTS			
VH51	www.pep-ecopassport.org			
DATE OF ISSUE	VALIDITY PERIOD			
05-2024	5 years			
INDEPENDENT VERIFICATION OF THE DECLARATION AND DATA, IN COMPLIANCE WITH ISO 14025: 2006				

INTERNAL EXTERNAL 🗵

THE PCR REVIEW WAS CONDUCTED BY A PANEL OF EXPERTS CHAIRED BY JULIE ORGELET (DDEMAIN)

PEP ARE COMPLIANT WITH XP C08-100-1 :2016 AND EN 50693:2019

THE COMPONENTS OF THE PRESENT PEP MAY NOT BE COMPARED WITH COMPONENTS FROM ANY OTHER PROGRAM.



© Copyright 2023 ABB. All rights reserved.



EPD Owner	ABB Xinhui Low Voltage Switchgear Co., Ltd. www.abb.com
Manufacturer name and address	ABB Xinhui Low Voltage Switchgear Co., Ltd. Xinhui district, Jiangmen city, Guangdong Province, 529100, P.R. China.
Company contact	EPD_ELSP@in.abb.com
Reference product	MS116-6.3 Manual Motor Starter
Description of the product	The MS116 manual motor starter is a compact device which is used to manually switch on and off motors and to protect them reliably and without the need for a fuse from short-circuits, overload and phase failures.
Functional unit	The functional unit of this study is a single Manual Motor Starter/Motor Protection Circuit Breaker (including its packaging and accessories) to protect during 20 years the installation against overload and short circuits in circuit with assigned voltage U and rated current In. $U_p = \text{Rated Operational voltage (V)} \qquad 690$ $I_p = \text{Rated Operational Current (A)} \qquad 6.3$ $\text{Number of Poles} \qquad \qquad 3$
Other product ranges covered	Product cluster         Product variants           MS116 ≤ 16A         MS116 followed by -* with * up to 16 (e.g. MS116-16)           MS116 ≥ 20A         MS116 followed by -* with * from 20 (e.g. MS116-20)
Reference lifetime	20 years
Product category	Electrical, Electronic and HVAC-R Products- PSR-0005-ED3-EN-2023 06 06, 3.2 Circuit-breakers
	The use phase has been modeled based on the sales mix data (2022), and the corresponding low voltage

-	MS116 ≥ 20A	<b>MS116</b> followed by -* with * from 20 (e.g. MS116-20)
Reference lifetime	20 years	
Product category	Electrical, Electronic and HVAC	C-R Products- PSR-0005-ED3-EN-2023 06 06, 3.2 Circuit-breakers
Use Scenario	The use phase has been mode electricity countries mix	led based on the sales mix data (2022), and the corresponding low voltage
Geographical representativeness	Raw materials & Manufacturin Assembly: [China] Distribution / Use: [Global] sp EoL: [Global]	
Technological representativeness	Primary data are specific for the on ecoinvent database v.3.9.1.	he production of MS116 Manual Motor Starters and secondary data are based
LCA Study	This study is based on the LCA 1SAC200383H0001	A study described in the LCA report
EPD type	Products family declaration	
EPD scope	"Cradle to grave"	
Year of reported primary data	2022	
	C: D 0 F 0 4 (2022)	

primary data	2022
LCA software	SimaPro 9.5.0.1 (2023)
LCI database	Ecoinvent v3.9 (2023)
LCIA methodology	EN 50693:2019

STATUS	SECURITY LEVEL	PEP ECOPASSPOR REG. NUMBER	DOCUMENT ID.	REV.	LANG	PAGE
Approved	Public	ABBG-00396-V01.01-EN	1SAC200384H0001	A.003	en	2/19
© Copyright 2023 ABB. All rights reserved.						

# **Contents**

ABB Purpose & Embedding Sustainability	4
General Information	
MS116 Product Cluster	5
Plate Trouble	
Constituent Materials	5
Functional unit and Reference Flow	7
Temporal and geographical boundaries	8
Boundaries in the life cycle	8
Data quality	8
Environmental impact indicators  Allocation Rules	8
Allocation Rules	9
Limitations and simplifications	9
Energy Models	9
Inventory Analysis	10
Environmental impacts	13
References	19

STATUS	SECURITY LEVEL	PEP ECOPASSPOR REG. NUMBER	DOCUMENT ID.	REV.	LANG	PAGE
Approved	Public	ABBG-00396-V01.01-EN	1SAC200384H0001	A.003	en	3/19

# ABB Purpose & Embedding Sustainability

ABB is a leading global technology company that energizes the transformation of society and industry to achieve a more productive, sustainable future. By connecting software to its electrification, robotics, automation and motion portfolio, ABB pushes the boundaries of technology to drive performance to new levels. With a history of excellence stretching back more than 130 years, ABB's success is driven by about 110 thousand talented employees in over 100 countries.

ABB's Electrification business offers a wide-ranging portfolio of products, digital solutions and services, from substation to socket, enabling safe, smart and sustainable electrification. Offerings encompass digital and connected innovations for low voltage and medium voltage, including EV infrastructure, solar inverters, modular substations, distribution automation, power protection, wiring accessories, switchgear, enclosures, cabling, sensing and control.

ABB is committed to continually promoting and embedding sustainability across its operations and value chain, aspiring to become a role model for others to follow. With its ABB Purpose, ABB is focusing on reducing harmful emissions, preserving natural resources and championing ethical and humane behavior.



# **General Information**

ABB Xinhui Low Voltage Switchgear Co., Ltd, located in Xinhui District, Jiangmen City, Guangdong Province, the hometown of overseas Chinese. It is a joint venture company of ABB specializing in the production of low-voltage electrical appliances in China. The company mainly produces low voltage molded case circuit breakers (Tmax XT, Tmax and Formula) for power distribution protection and control, ATS automatic transfer switch appliances, Compact/Modular series pilot devices, OT isolating switches, OS isolating switch fuses, PSR/ PSTX series softstarters, electronic overload relays E/EF, thermal overload relays TF, Manual Motor Starters MS, A/AS/AF/AX series contactors, etc. In addition to meeting the needs of domestic customers, the products are also exported to markets such as Europe and Asia.

The current analysis is performed on the Manual Motor Starters. This device is used to manually switch on and off motors and to protect them reliably and without the need for a fuse from short-circuits, overload and phase failures during the service life of 20 years.

In the factory, the different components and subassemblies are assembled on the manufacturing line. All components and subassemblies are produced by ABB's suppliers. These are assembled and tested as per the standards within the factory premises.

STATUS	SECURITY LEVEL	PEP ECOPASSPOR REG. NUMBER	DOCUMENT ID.	REV.	LANG	PAGE
Approved	Public	ABBG-00396-V01.01-EN	1SAC200384H0001	A.003	en	4/19

### **MS116 Product Cluster**

Product cluster declared in this PEP of MS116 Manual Motor Starters covers the following variants:

Product	Product Range	Number of poles	Rated voltage, U [V]	Rated current, In [A]
MS116-6.3	MS116 ≤ 16A	3	690	6.3
MS116-32	MS116 ≥ 20A	3	690	32

Table 1: Technical characteristics of MS116 Manual Motor Starter

The accessories associated with these products are also included in the study.

#### **Reference Product:**

The reference product for the LCA of the complete range of MS116 is MS116-6.3.



# **Constituent Materials**

The MS116-6.3 weights about 0.270 kg including its installed accessories, packaging, and paper documentation.

MS116-6.3						
Materials	Name	IEC 62474 MC	[g]	%		
	Steel	M-119	85.1	31.5%		
Manala	Cu and Cu Alloys	M-121	14.3	5.3%		
Metals	Stainless Steel	M-100	5.5	2.1%		
	Precious Metals	M-159	0.4	0.1%		
	Polyamide	M-258	118.5	43.9%		
	PolyButyleneTerephthalate	M-261	13.1	4.9%		
Plastics	Polyethylene	M-251	3.3	1.2%		
	Unsaturated Polyester	M-301	2.5	0.9%		
	Other Polymers	NA	0.7	0.2%		
Other	Paper/Cardboard	M-341	26.8	9.9%		
	Total		270.2	100%		

Table 2: Weight of materials MS116-6.3

STATUS	SECURITY LEVEL	PEP ECOPASSPOR REG. NUMBER	DOCUMENT ID.	REV.	LANG	PAGE	
Approved	Public	ABBG-00396-V01.01-EN	1SAC200384H0001	A.003	en	5/19	
© Copyright 2023 ABB. All rights reserved.							

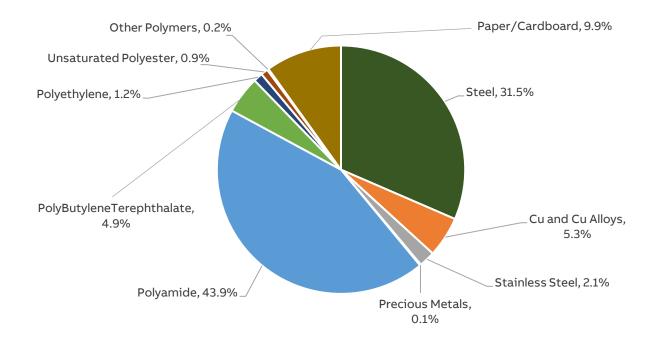


Figure 1: Composition of MS116-6.3

Packaging weighs 26.8 g, with the following substance composition:

Material			%
<b>Corrugated Cardboard</b>	g	25.7	9.5%
Paper	g	1.1	0.4%
Total	g	26.8	9.9%

Table 3: Weight of Packaging for MS116-6.3

STATUS	SECURITY LEVEL	PEP ECOPASSPOR REG. NUMBER	DOCUMENT ID.	REV.	LANG	PAGE			
Approved	Public	ABBG-00396-V01.01-EN	1SAC200384H0001	A.003	en	6/19			
© Copyright 2023 A	© Copyright 2023 ABB. All rights reserved.								

#### **Functional unit and Reference Flow**

The functional unit is the reference unit used to quantify the performance of the service delivered by a product to the user. The main purpose of the functional unit is to provide a reference to which inputs and outputs are related in the LCA.

The functional unit of this study is a single Manual Motor Starter/Motor Protection Circuit Breaker (including its packaging and accessories) to protect during 20 years the installation against overload and short circuits in circuit with assigned voltage U and rated current In.

Manual Motor Starter	MS116-6.3
U <sub>p</sub> = Rated Operational voltage (V)	690
$I_p$ = Rated Operational Current (A)	6.3
Number of Poles	3

The Reference Flow of the study is a Manual Motor Starter (including its packaging and accessories) with mass described, table 2.

# System boundaries and life cycle stages

The life cycle of the Manual Motor Starter, an EEPS (Electronic and Electrical Products and Systems), is a "from cradle to grave" analysis and covers the following main life cycle stages: manufacturing, including the relevant acquisition of raw material, preparation of semi-finished goods, etc. and processing steps; distribution; installation, including the relevant steps for the preparation of the product for use; use including the required maintenance steps within the RSL (reference service life of the product) associated to the reference product; end-of-life stage, including the necessary steps until final disposal or recovery of the product system.

The following table shows the stages of the product life cycle and the information stages according to EN 50693:2019 [3] for the evaluation of electronic and electrical products and systems.

Manufacturing	Distribution	Installation	Use	End-of-Life (EoL)
Acquisition of raw materials  Transport to manufacturing site  Components/parts manufacturing  Assembly  Packaging  EoL treatment of generated waste	Transport to distributor/ logistic center Transport to place of use	Installation  EoL treatment of generated waste (packaging)	Usage Maintenance	Deinstallation  Collection and transport  EoL treatment

Table 4: Phases for the evaluation of construction products according to EN50693:2019 [3].

STATUS	SECURITY LEVEL	PEP ECOPASSPOR REG. NUMBER	DOCUMENT ID.	REV.	LANG	PAGE		
Approved	Public	ABBG-00396-V01.01-EN	G-00396-V01.01-EN 1SAC200384H0001 A.003 er		en	7/19		
© Copyright 2023 ABB. All rights reserved.								

# Temporal and geographical boundaries

The ABB component suppliers are sourced all over the world. All primary data collected are from 2022, which is a representative production year. Secondary data are also representative for this year, as provided by ecoinvent [6].

The selected ecoinvent [6] processes in the LCA model have a global representativeness, due to the unclear origin of each component. In this way, a conservative approach has been adopted.

### **Boundaries in the life cycle**

As indicated in the PCR capital goods such as buildings, machinery, tools and infrastructure, the packaging for internal transport which cannot be allocated directly to the production of the reference product, may be excluded from the system boundary.

Infrastructures, when present, such as processes deriving from the ecoinvent [6] database have not been excluded.

# **Data quality**

In this PEP, both primary and secondary data are used. Site specific foreground data have been provided by ABB. Main data sources are the bill of materials & drawings which are available on the ERP (SAP) & Windchill. For all processes for which primary are not available, generic data originating from the ecoinvent database [6], allocation cut-off by classification, are used. The ecoinvent database available in the SimaPro software [7] is used for the calculations.

The data quality characterized by quantitative and qualitative aspects, is presented in Appendix 1. Each data quality parameter has been rated according to DQR tables from Chapter 7.19.2.2 of the Product Environmental Footprint Guide v.6.3 to give an indication of geography, technology and temporal representativeness.

# **Environmental impact indicators**

The information obtained from the inventory analysis is aggregated according to the effects related to the various environmental issues. According to "PCR-ed4-EN-2021 09 06" and EN 50693 [3] the environmental impact indicators must be determined using the characterization factors and impact assessment methods specified in EN 15804:2012+A2:2019 [8].

PCR-ed4-EN-2021 09 06 and the EN 50693:2019 [3] standard establish four indicators for GWP: GWP (total) which includes all greenhouse gases; GWP (fossil fuels); GWP (biogenic) which includes the emissions and absorption of biogenic carbon dioxide and biogenic carbon stored in the product; GWP (land use) - land use and land use transformation. Other indicators as per the PCR[1].

STATUS	SECURITY LEVEL	PEP ECOPASSPOR REG. NUMBER	DOCUMENT ID.	REV.	LANG	PAGE
Approved	Public	ABBG-00396-V01.01-EN	1SAC200384H0001	A.003	en	8/19

#### **Allocation Rules**

Allocation coefficients are based on labour hours required to produce one unit of MS116 Manual Motor Starter. Total electrical energy consumption for the year 2022 is divided by the total labour hours in the year 2022 to calculate average per hour energy consumption of the total factory. The allocation of the total amount of waste generated by the production line and water consumption has been based on this criterion.

# **Limitations and simplifications**

Raw materials life cycle stage includes the extraction of raw materials as well as the transport distances to the manufacturing suppliers. These distances are assumed to be 1000 km as per PCR. This distance has been added to the one already included in the market processes used for the model, as a result of a conservative choice made by the LCA operators.

Application of grease lubricant on the Manual Motor Starter operating mechanism has been excluded since it is negligible.

Surface treatments like galvanizing, tin and silver plating as well as their related transport processes (back and forth from the finishing suppliers) have been considered in the LCA model.

Scraps for metal working and plastic processes are included when already defined in ecoinvent[6].

# **Energy Models**

LCA Stage	EN 15804:2012 +A2:2019 module	Energy model	Notes
Raw material extraction and processing	A1-A2	Electricity, {GLO}  market group for   Cut-off Electricity, {RoW}  market group for   Cut-off	Based on materials and suppliers locations
Manufacturing	A3	ABB Green Mix Low Voltage	Specific Energy model for ABB Xinhui manufacturing plant, 100% renewable
Installation (Packaging EoL)	A5	Electricity, {GLO}  market group for   Cut-off	
Use Stage	B1	Electricity, [country]x   market for   Cut-off, S **	Low voltage, based on 2022 country sales mix
EoL	C1-C4	Electricity, {GLO}  market group for   Cut-off	

Table 5: Energy models used in each LCA stage.

<sup>\*\*</sup> Please refer the use phase page 11 for further description

STATUS	SECURITY LEVEL	PEP ECOPASSPOR REG. NUMBER	DOCUMENT ID.	REV.	LANG	PAGE			
Approved	Public	ABBG-00396-V01.01-EN	1-EN 1SAC200384H0001		en	9/19			
© Copyright 2023 A	© Copyright 2023 ABB. All rights reserved.								



# **Inventory Analysis**

In this PEP, both primary and secondary data are used. Site specific foreground data have been provided by ABB. For data collection, Bills of Material (BOM) extracted from ABB's internal SAP software were used. They are a list of all the components and assemblies that constitute the finished product, organized by level. Each item is matched with its code, quantity, weight and supplier. The BOMs were then processed, adding material, surface area and other weight data, taken from technical drawings. Finally, the manufacturing process and surface treatment were assigned, according to information provided by R&D personnel. Road distances between the suppliers and ABB were calculated using Google Maps, and marine distances using Distances & Time (Searates).

All primary data collected from ABB are from 2022, which was a representative production year. The ecoinvent v3.9 cut-off by classification system processes [6] are used to model the background system of the processes.

Due to the large amounts of components in the Manual Motor Starter, raw material inputs have been modelled with data from ecoinvent[6] representing either a Rest of World [RoW] or Global [RoW] market coverage based on the supplier's location. These datasets are assumed to be representative.

#### Manufacturing stage

The Manual Motor Starter are composed of a multitude of components, all of which are made from of numerous materials. Most of the inputs to the products' manufacturing stage are already produced component parts.

The single use packaging as well as paper documentation are also included in the analysis in the manufacturing stage. ABB receives packaging components from outside suppliers and packages the Manual Motor Starter before shipping them.

Most of the inputs to the products' manufacturing stage are already produced component parts from the supply chain. In the ABB manufacturing plant, the different components and subassemblies are assembled into the Manual Motor Starter. All the semi-finished and ancillary products are produced by ABB's suppliers.

The entire Manual Motor Starter suppliers' network has been modelled with the calculation of each transportation stage: from the first manufacturing supplier to the next. All the distances from the last subassembly suppliers' factories to the ABB manufacturing facility have been calculated.

All the distances from the last subassembly suppliers' factories to the ABB manufacturing facility have been calculated. In the ABB factory, the different components and subassemblies are assembled into the Manual Motor Starter. All the semi-finished and ancillary products are produced by ABB's suppliers.

The energy mix used for the production phase is representative for ABB Xinhui production site and includes renewable energy only.

The complete energy mix has been modeled considering the certificate on Guarantee of origins provided to ABB for the year 2022.

STATUS SI	SECURITY LEVEL	PEP ECOPASSPOR REG. NUMBER	DOCUMENT ID.	REV.	LANG	PAGE
Approved P	Public	ABBG-00396-V01.01-EN	1SAC200384H0001	A.003	en	10/19

#### **Distribution**

The transport distances from ABB manufacturing plant to the distribution centers (regional distribution centers / local sales organizations) have been calculated considering the specific 2022 sales mix data for this product cluster (SAP ERP sales data as a source).

Since no specific data is available for the transport distances from the Distribution Centre to place of actual use (Customer site), distances of 1000 km are assumed (local/domestic transport by lorry, according to PCR [1]).

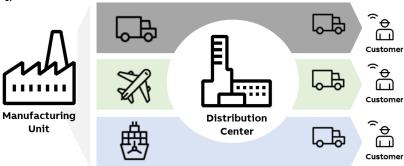


Figure 2: Distribution methodology.

#### Installation

The installation phase only implies manual activities, and no energy is consumed. This phase also includes the disposal of the packaging of the Manual Motor Starter.

For the disposal of the packaging after installation of the Manual Motor Starter at the end of its life, a transport distance of 1000 km (according to PCR[1]) was assumed. The chosen transportation datasets are from Ecoinvent [6].

The actual disposal site is unknown and is managed by the customer.

#### Use

Use and maintenance are modelled according to the PCR [1].

During the use phase, Manual Motor Starter, dissipates some electricity due to power losses. They are calculated according to the data provided in the catalogue of the Manual Motor Starter and following the PCR [1] & PSR [2] rules:

Parameters		
lu	[A]	6.3
lu	[%]	50
h/year	[h]	8760
RSL	[years]	20
Time operating coefficient	[%]	30

Table 6: Use phase parameters.

STATUS	SECURITY LEVEL	PEP ECOPASSPOR REG. NUMBER	DOCUMENT ID.	REV.	LANG	PAGE			
Approved	Public	ABBG-00396-V01.01-EN 1SAC200384H0001 A.003		en	11/19				
© Copyright 2023 A	© Copyright 2023 ABB. All rights reserved.								

The formula for the calculation of the electricity consumed is shown below and it is described as follows, where  $P_{use}$  is the power consumed by the switch at a given value of current:

$$E_{use} [kWh] = \frac{P_{use} * 8760 * RSL * \alpha}{1000}$$

The above calculations have been performed according to the number of poles on which relevant current flows during use phase.

The Energy model used for this phase has been modelled based on the 2022 actual sales mix data (SAP ERP sales data as a source). From the Ecoinvent [6] database, the low voltage electricity country mix for each country(x) has been selected with its respective percentage on the total sales mix (Electricity, low voltage [country]x | market for | Cut-off, S).

Since no maintenance happens during the use phase, the environmental impacts linked to this procedure have been considered as null in the analysis.

#### **End of life**

The end-of-life stage is modelled according to PCR [1] and IEC/TR 62635 [9]. The percentages for end-of-life treatments of materials are taken from IEC/TR 62635 [9]. Since no specific data is available, the transport distances from the place of use to the place of disposal are assumed to be 1000 km (local/domestic transport by lorry, according to PCR [1]). Disassembly manuals can be provided to the customer to support product disposal.

STATUS	SECURITY LEVEL	PEP ECOPASSPOR REG. NUMBER	DOCUMENT ID.	REV.	LANG	PAGE
Approved	Public	ABBG-00396-V01.01-EN	1SAC200384H0001	A.003	en	12/19



# **Environmental impacts**

The following tables show the environmental impact indicators of the life cycle of a Manual Motor starter, as indicated by PEP Ecopassport PCR and EN 50693:2019 [3]. The indicators are divided into the contribution of the processes to the different modules (upstream, core and downstream) and stages (manufacturing, distribution, installation, use and end-of-life).

#### MS116-6.3

Impact category	Unit	Total	Manufacturing	Distribution	Installation	Use	End of Life
GWP-total	kg CO2 eq	6.81E+01	1.89E+00	5.56E-01	1.45E-02	6.56E+01	4.70E-02
GWP-fossil	kg CO2 eq	6.77E+01	1.88E+00	5.56E-01	3.57E-03	6.52E+01	4.65E-02
GWP-biogenic	kg CO2 eq	3.12E-01	1.38E-02	1.39E-04	1.09E-02	2.87E-01	5.16E-04
GWP-luluc	kg CO2 eq	4.54E-02	1.72E-03	5.80E-05	1.77E-06	4.36E-02	2.94E-05
ODP	kg CFC11-eq	5.36E-07	2.31E-07	8.78E-09	7.41E-11	2.96E-07	6.55E-10
AP	mol H+ eq	3.40E-01	1.45E-02	2.37E-03	1.66E-05	3.23E-01	1.94E-04
EP-freshwater	kg P eq	2.49E-02	1.11E-03	9.73E-06	2.99E-07	2.38E-02	6.74E-06
EP-marine	kg N eq	6.99E-02	2.91E-03	9.57E-04	1.08E-05	6.59E-02	1.00E-04
EP-terrestrial	mol N eq	7.21E-01	2.40E-02	1.03E-02	6.56E-05	6.86E-01	5.91E-04
POCP	kg NMVOC eq	2.02E-01	7.41E-03	3.26E-03	2.44E-05	1.91E-01	2.10E-04
ADP-m&m	kg Sb eq	5.64E-04	2.74E-04	2.03E-07	9.72E-09	2.90E-04	7.37E-08
ADP-fossil	МЈ	7.23E+02	2.64E+01	7.28E+00	5.10E-02	6.89E+02	5.22E-01
WDP	m3 of equiv. depriv.	1.06E+01	1.16E+00	1.39E-02	2.90E-04	9.44E+00	3.33E-03
PENRE	МЈ	7.20E+02	2.32E+01	7.28E+00	5.10E-02	6.89E+02	5.22E-01
PENRM	МЈ	3.29E+00	3.29E+00	0.00E+00	0.00E+00	0.00E+00	0.00E+00
PENRT	МЈ	7.23E+02	2.64E+01	7.28E+00	5.10E-02	6.89E+02	5.22E-01
PERE	МЈ	8.72E+01	2.56E+00	2.98E-02	8.15E-04	8.46E+01	2.48E-02
PERM	МЈ	4.55E-01	4.55E-01	0.00E+00	0.00E+00	0.00E+00	0.00E+00
PERT	МЈ	8.76E+01	3.02E+00	2.98E-02	8.15E-04	8.46E+01	2.48E-02
SM	Kg	5.14E-02	5.14E-02	0.00E+00	0.00E+00	0.00E+00	0.00E+00
RSF	МЈ	0.00E+00	0.00E+00	0.00E+00	0.00E+00	0.00E+00	0.00E+00
NRSF	МЈ	0.00E+00	0.00E+00	0.00E+00	0.00E+00	0.00E+00	0.00E+00
PET	МЈ	8.11E+02	2.95E+01	7.31E+00	5.19E-02	7.73E+02	5.47E-01
FW	m3	2.91E-01	3.09E-02	4.90E-04	1.13E-05	2.59E-01	1.28E-04
HWD	Kg	1.20E-03	2.21E-04	4.90E-05	3.19E-07	9.23E-04	2.56E-06
N-HWD	Kg	5.19E+00	3.08E-01	5.19E-02	7.13E-03	4.76E+00	6.00E-02
RWD	Kg	8.34E-04	3.66E-05	6.31E-07	1.37E-08	7.96E-04	3.86E-07
CfR	Kg	0.00E+00	0.00E+00	0.00E+00	0.00E+00	0.00E+00	0.00E+00
MfR	Kg	4.87E-01	2.47E-01	0.00E+00	2.59E-02	0.00E+00	2.15E-01
MfER	Kg	5.25E-03	0.00E+00	0.00E+00	3.17E-03	0.00E+00	2.07E-03
EN	MJ by energy vector	0.00E+00	0.00E+00	0.00E+00	0.00E+00	0.00E+00	0.00E+00
Efp	disease inc.	3.55E-06	1.01E-07	8.56E-09	3.64E-10	3.44E-06	3.94E-09
IrHH	kBq U-235 eq	3.31E+00	1.35E-01	2.80E-03	5.78E-05	3.17E+00	1.58E-03
ETX FW	CTUe	1.77E+02	5.08E+01	3.75E+00	4.65E-02	1.22E+02	2.41E-01
HTX CE	CTUh	2.08E-08	3.70E-09	6.96E-11	2.58E-12	1.70E-08	3.50E-11
HTX N-CE	CTUh	9.68E-07	1.03E-07	6.81E-09	6.39E-11	8.56E-07	1.82E-09
IrLS	Pt	1.60E+02	9.01E+00	9.71E-01	5.20E-02	1.50E+02	4.47E-01

Table 7: Impact indicators for MS116-6.3

STATUS	SECURITY LEVEL	PEP ECOPASSPOR REG. NUMBER	DOCUMENT ID.	REV.	LANG	PAGE
Approved	Public	ABBG-00396-V01.01-EN	1SAC200384H0001	A.003	en	13/19

© Copyright 2023 ABB. All rights reserved.

Impact category	Unit	Total
Biogenic Carbon content of the product	kg	9.68E-03
Biogenic Carbon content of packaging	kg	5.33E-04

Table 8: Inventory Flow indicators of MS116-6.3

#### **Environmental impact indicators**

GWP-total	Global Warming Potential total (Climate change)
GWP-fossil	Global Warming Potential fossil
GWP-biogenic	Global Warming Potential biogenic
GWP-luluc	Global Warming Potential land use and land use change
ODP	Depletion potential of the stratospheric ozone layer
AP	Acidification potential
EP-freshwater	Eutrophication potential - freshwater compartment
EP-marine	Eutrophication potential - fraction of nutrients reaching marine end compartment
EP-terrestrial	Eutrophication potential -Accumulated Exceedance
POCP	Formation potential of tropospheric ozone
ADP-m&m	Abiotic Depletion for non-fossil resources potential
ADP-fossil	Abiotic Depletion for fossil resources potential, WDP
WDP	Water deprivation potential.

#### **Resource use indicators**

PERE	Use of renewable primary energy excluding renewable primary energy resources used as raw material
PERM	Use of re-newable primary energy resources used as raw material
PERT	Total use of renewable primary energy resources (primary energy and primary energy resources used as raw materials)
PENRE	Use of non-renewable primary energy excluding non-renewable primary energy resources used as raw material
PENRM	Use of non-renewable primary energy resources used as raw material
PENRT	Total use of non-renewable primary energy resources (primary energy and primary energy resources used as raw materials)
PET	Total use of primary energy during the life cycle

### Secondary materials, water and energy resources

SM	Use of secondary materials
RSF	Use of renewable secondary fuels
NRSF	Use of non-renewable secondary fuels

Approved Public	ABBG-00396-V01.01-EN	1SAC200384H0001	A.003	en	14/19

### **Waste category indicators**

HWDHazardous waste disposedN-HWDNon-hazardous waste disposedRWDRadioactive waste disposed

#### **Output flow indicators**

MfR	Materials for recycling
MfER	Materials for energy recovery
CfR	Components for Reuse
EN	Energy for reuse

#### Others indicators

Efp	Emissions of Fine particles
IrHH	Ionizing radiation, human health
ETX FW	Ecotoxicity, freshwater
HTX CE	Human toxicity, carcinogenic effects
HTX N-CE	Human toxicity, non-carcinogenic effects

STATUS	SECURITY LEVEL	PEP ECOPASSPOR REG. NUMBER	DOCUMENT ID.	REV.	LANG	PAGE
Approved	Public	ABBG-00396-V01.01-EN	1SAC200384H0001	A.003	en	15/19

#### **Extrapolation for Homogeneous environmental family**

This PEP covers different build configurations Of MS116 Manual Motor Starter. All the analyzed configurations have the same main functionality, product standards and manufacturing technology. The different life cycle stages can be extrapolated to other products of the same homogeneous environmental family by applying a rule of proportionality to the parameters in the following tables, divided by different life cycle stages.

For other products than the Reference product covered by this PEP, the environmental impacts for each phase of the lifecycle are obtained by multiplying the values of the Reference product by the following factor in listed table.

\*If the factor is "1", the impacts of the phase of the life cycle are same in comparison to the reference product.

#### LCA Phase: Manufacturing

Product	GWP-total	GWP-fossil	GWP-biogenic	GWP-luluc	ООР	AP	EP-freshwater	EP-marine	EP-terrestrial	РОСР	ADP-minerals & metals	ADP-fossil	WDP
MS116 ≤ 16A	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
MS116 ≥ 20A	1.18	1.19	0.94	1.25	1.01	2.17	2.12	1.35	1.53	1.49	1.71	1.18	1.30

Table 9: Extrapolation factors for MS116 - Manufacturing

#### LCA Phase: Distribution

Product	LCA Stage	Factor
MS116 ≤ 16A	Distribution	1.00
MS116 ≥ 20A		1.14

Table 10: Extrapolation factors for MS116 - Distribution

#### LCA Phase: Installation

Installation phase impacts are common across all variants since packaging is same for all MS116 Manual Motor Starters.

Approved Bublic ARRG-00396-V01-01-EN 15AC200384H0001 A 003 ep 16	STATUS	SECURITY LEVEL	PEP ECOPASSPOR REG. NUMBER	DOCUMENT ID.	REV.	LANG	PAGE
Approved Fubilic Abbd-00390-V01.01-EN 13AC200304110001 A.003 en 10,	Approved	Public	ABBG-00396-V01.01-EN	1SAC200384H0001	A.003	en	16/19

#### **LCA Phase: Use**

Product	No. Of Poles	LCA Stage	Factor
MS116 ≤ 16A	3	Use Phase	1.00
MS116 ≥ 20A	3	USE Phase	1.72

Table 11: Extrapolation factors for MS116 - Use Phase

LCA Phase: End of Life

Product	GWP-total	GWP-fossil	GWP-biogenic	GWP-luluc	ООР	AP	EP-freshwater	EP-marine	EP-terrestrial	РОСР	ADP-minerals & metals	ADP-fossil	WDP
MS116 ≤ 16A	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00
MS116 ≥ 20A	1.04	1.04	1.04	1.04	1.04	1.04	1.04	1.04	1.04	1.04	1.04	1.04	1.04

Table 12: Extrapolation factors for MS116- EoL

Approved Public ABBG-00396-V01.01-EN 1SAC200384H0001 A.003 en 17/19	STATUS	SECURITY LEVEL	PEP ECOPASSPOR REG. NUMBER	DOCUMENT ID.	REV.	LANG	PAGE
	Approved	Public	ABBG-00396-V01.01-EN	1SAC200384H0001	A.003	en	17/19



According to the waste treatment scenario calculation in Simapro, based on the recycling rate in the technical report IEC/TR 62635 Edition 1.0 [9] Table D.6, the following recyclability potentials were calculated. The recyclability potential is calculated based on the product weight (excluding packaging).

Product	Recyclability potential
MS116-6.3	88.3%

Table 13: Recyclability potential of MS116-6.3

STATUS	SECURITY LEVEL	PEP ECOPASSPOR REG. NUMBER	DOCUMENT ID.	REV.	LANG	PAGE
Approved	Public	ABBG-00396-V01.01-EN	1SAC200384H0001	A.003	en	18/19

# References

- [1] PEP Ecopassport PCR-ed4-EN-2021 09 06 "Product Category Rules for Electrical, Electronic and HVAC-R Products"
- [2] PEP Ecopassport PSR-0005-ED3-EN-2023 06 06 "Product Specific Rules for Electrical Switchgear and Control gear Solutions"
- [3] EN 50693:2019 Product category rules for life cycle assessments of electronic and electrical products and systems
- [4] ISO 14040:2006 Environmental management -Life cycle assessment Principles and framework
- [5] ISO 14044:2006 Environmental management Life cycle assessment Requirements and guidelines
- [6] ecoinvent v3.9 (2023). ecoinvent version 3.9. Swiss, Centre for Life Cycle Inventories, Dübendorf, Switzerland
- [7] PRé Consultants, 2023. Software SimaPro versione 9.5.0.1 (www.pre.nl).
- [8] UNI EN 15804:2012+A2:2019: Sustainability of constructions Environmental product declarations (September 2019).
- [9] IEC/TR 62635 Guidelines for end-of-life information provided by manufacturers and recyclers and for recyclability rate calculation of electrical and electronic equipment Edition 1.0 2012-10
- [10] 1SAC200383H0001-LCA Report

STATUS	SECURITY LEVEL	PEP ECOPASSPOR REG. NUMBER	DOCUMENT ID.	REV.	LANG	PAGE
Approved	Public	ABBG-00396-V01.01-EN	1SAC200384H0001	A.003	en	19/19